



Listening to a Record

1. In first time use, take off the protective cover from the stylus as the illustrated below:

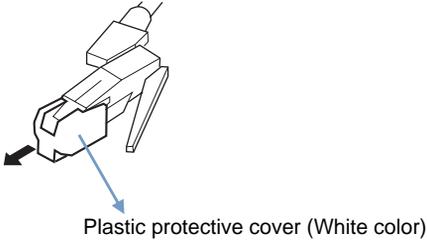

2. Place the Record on the center spindle.
Note: If you are playing a 45 RPM Single (small size record), place the supplied 45 RPM adapter to the center spindle then place the record on it.
3. Slide the Speed selector to 33; 45 or 78 to match the play speed of the record.
4. Unlock the Tone Arm from the holder as the illustrated below:

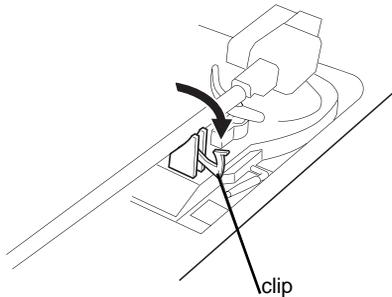


5. Power on the unit and turn the Function selector to the PHONO position.
6. Raise the Lever to raising the Tone Arm then move it to the top of the desired location of the record. Release the Lever to put the Tone Arm onto the record. Plays will auto start.
7. When finished playback, the unit will auto stop turning (or you wants to stop immediately); raise the Lever to rising the Tone Arm then put it back to the Holder. Release the Lever then lock the Tone Arm on the Holder.

Other Connections

AUX IN:


1. Connect one end of the audio connection cable to the Phones jack; Line out jack or AUX out jack on the external audio player.
2. Connect the other end to the AUX (in) jack.

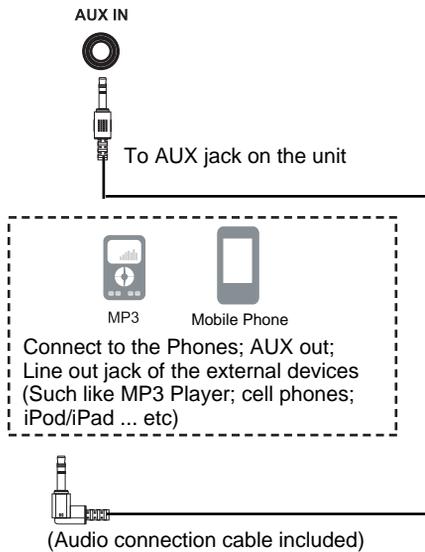

3. Power on the unit and turn the Function selector to the AUX position.
4. Plays the music on the connected external audio player as usual.

LINE OUT:


1. Connect one end of the RCA audio connection cable to the Line IN jacks or AUX IN jacks on the external audio amplifier.
2. Connect the other end of the cable to the LINE OUT jacks

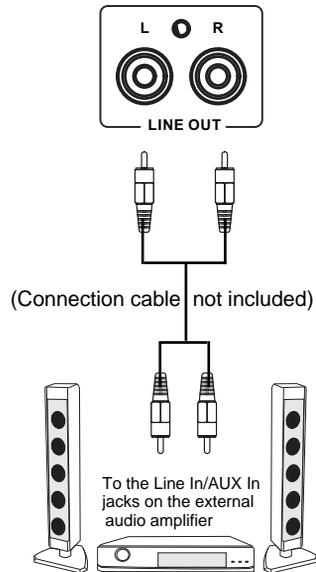

3. Power on the unit and plays music.
4. Power on the external audio amplifier and set it to LINE IN mode to plays the music from the audio amplifier.

Records Handling

- Do not touch the record's grooves. Only handle records, by the edges or the label. Make sure your hands are clean. Skin oils from even clean hands can leave a residue on the record surface that will gradually deteriorate the quality of your record.

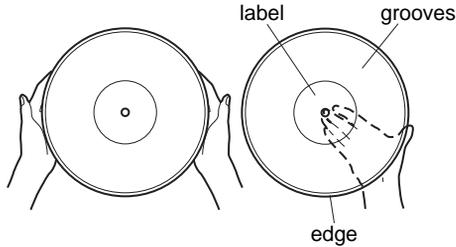




- Keep your hands away from dust. Keep them in a cool, dry place.
- To avoid dust and scratches, keep records in their sleeves and jackets when not in use.
- Store records upright on their edges. Records stored horizontally will eventually bend and warp.
- Do not expose records to direct sunlight or high humidity and temperature. Long exposure to high temperatures will warp the record.
- Do not store your records in the trunk of your car. The temperature in a closed trunk can ruin your collection.
- Store records in an area with a stable temperature and low humidity.
- Should the record become dirty, gently wipe the surface in circular motion, using a soft anti-static cloth.



Replace the stylus

If the stylus was abraded after long time use, replace it by the supplied extra style as follows:

1. Use a screwdriver (not supplied) to push the stylus off
 2. Install the new stylus as illustrated below:
- then pull it out as the illustrated below:

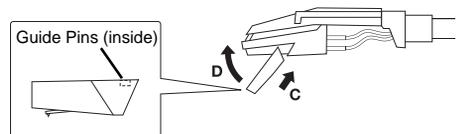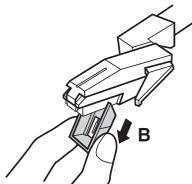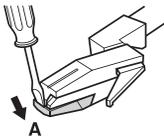

Troubleshooting Guide

Symptom	Possible Cause	Solution
Power		
No power	AC/DC Adaptor had not connected to unit or wall outlet	Connected the AC/DC Adaptor to the unit and wall outlet
	Power ON-OFF/Volume knob is on power off position	Turn the Power ON-OFF/Volume knob clockwise to power on the unit and set the volume to the desired level
Turntable		
Noise or sound distorted	Speed selector wrong setting	Set the Speed selector to the correct position 33; 45 or 78 as the playing speed of record
	The stylus may abrasion after long time used	Replace the stylus
BT		
BT not functioning	The BT Device had not paired to the unit	Paired the BT Device to the unit
Sound weak or distortion	The BT Device too far from the unit	Place the BT Device close to the unit
Radio		
Noise or sound distorted	Station not tuned properly.	Retune the radio station.
	The location not good for radio reception.	Turn or relocate the unit.

General Specifications

Power Source:	DC  12V, 1500mA,   
Audio Power:	3W x 2
BT Effective Range:	32 feet in open area
Radio Frequency:	FM 87-108MHz

Accessories

- 1 x User's Manual
- 1 x AC/DC Adaptor
- 2 x Stylus (one pre-mounted)
- 1 x 45 RPM Adaptor
- 1 x Audio connect cable with 3.5 mm stereo plugs
- 16 x Screws (for machine feet installation)

**SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE
WITHOUT NOTICE**

