


**SOUNDLOGIC™**  
**Bluetooth Water Dancing Speaker**  
 MODEL: WDW-26345B / WDW-26345R

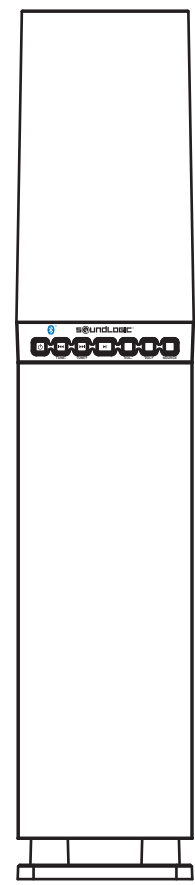

**Instruction Manual**  
 Please read this instruction manual carefully before using and keep it for future reference

**QUICK START GUIDE**

- Make sure to remove ALL items before discarding package. This includes:**
  - Instruction Manual
  - AUX IN Cable
  - Adapter
- Connect your smartphone, tablet or other audio device via Bluetooth.**
  - Press the SOURCE button until indicator turns BLUE.
  - Make sure Bluetooth is enabled on your device. Once **TSB-63628** appears in the list of external device, select it. If asked for a password, enter **0000**.
  - The unit will send out a piece of tone once a connection is established.
  - See page 7 - 9 for further instructions on listening to the FM radio, connecting via Bluetooth or connecting via AUX-IN.

**CAUTION**  
 RISK OF ELECTRIC SHOCK  
 DO NOT OPEN  
 The appliance has an enclosed wiring system. Do not attempt to repair or alter the wiring system. If you are not a qualified technician, please contact a qualified technician for repair. Do not attempt to repair or alter the wiring system. If you are not a qualified technician, please contact a qualified technician for repair.

**FCC STATEMENT**  
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 - Reorient or relocate the receiving antenna.  
 - Increase the separation between the equipment and receiver.  
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 7.9m (20cm) from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

**Caution:**  
 Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


**CALIFORNIA PROP 65 WARNING**  
 "WARNING" This product contains chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on to the following website address: <http://www.oehha.ca.gov/prop65.html>

**Important Safety Instructions**

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water. This apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The apparatus should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings. The apparatus must not be placed in a built-in installation, such as a closed bookcase or cabinet that may impede the flow of air through the ventilation openings. Ventilation should not be impeded by covering the openings with items such as newspapers, tablecloths, curtains, etc.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Extended exposure to temperatures higher than 170 degrees Fahrenheit, for example inside a closed vehicle during the summer, may result in damage to your product.
9. No open flame sources, such as lighted candles, should be placed on the apparatus.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched - particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Do not install in an area which impedes the access to the power plug. Disconnecting the power plug is the only way to completely remove power to the product and must be readily accessible at all times.
13. Power source - Use only power supplies of the type specified in the operating instructions or as marked on the appliance. If a separate power supply is included with this apparatus, do not substitute with any other power supply - use only manufacturer-provided power supplies.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. If the unit will be unused for long periods of time, the batteries should be removed.

16. Do not place this product on an unstable surface. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a stand, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
17. Move the appliance with care to avoid damage or injury.
18. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way; the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
19. For products which incorporate batteries, please refer to local regulations for proper battery disposal.

**PRODUCT OVERVIEW**

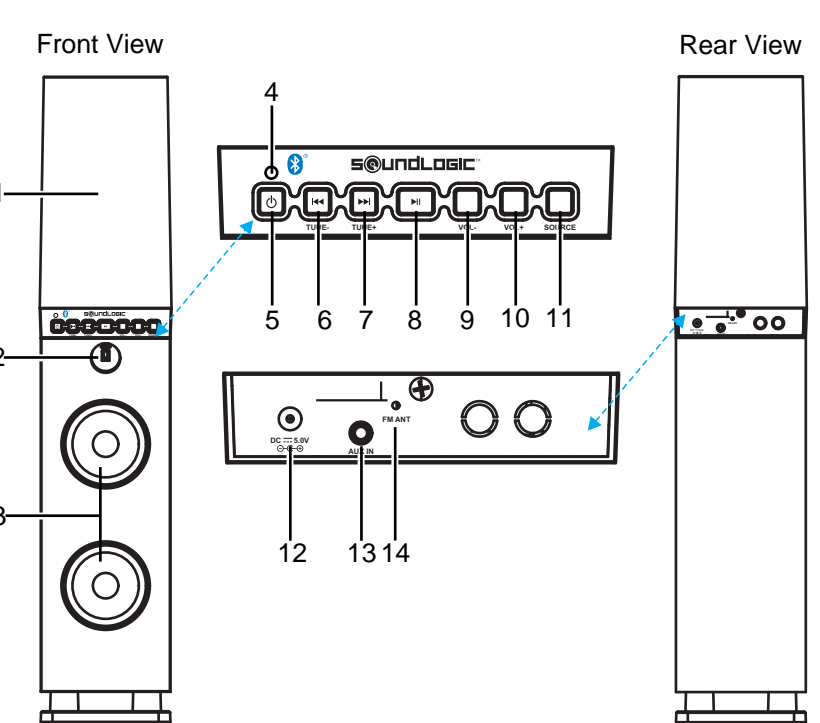

1. Water Dancing Cover
2. Remote Sensor
3. Speakers
4. Indicator
5. ⏻ (Standby) Button
6. ⏪ / TUNE - Button
7. ⏩ / TUNE + Button
8. ⏸ (Play/Pause) Button
9. VOL - (Volume Down)
10. VOL + (Volume Up)
11. SOURCE Button
12. DC IN Jack
13. AUX IN Jack
14. FM ANT(Antenna)

**GETTING STARTED**

**FM Radio Antenna**  
 Before using your unit for FM reception, unwrap and fully extend the antenna wire. You may need to adjust the position of the antenna wire for maximum signal strength.

**Connecting Power**  
 Before connecting the power, check that the mains voltage on the rating plate of the back panel is the same as the voltage in your area.  
 • Insert the plug into the wall socket.

**Turn the System On**  
 • Press the Standby Button (⏻), the LED light will light in the water cover and water will dance.

**Turn the System Off**  
 • Press the Standby Button (⏻), the water will be stopping.

**LISTEN TO FM RADIO**

**Selecting FM Mode**  
 • Press the SOURCE Button repeatedly until the indicator turns RED.

**Station Search**  
 • Press and hold ⏪ / TUNE + or ⏩ / TUNE - button to search up or down the band. The radio will stop automatically when the next station is reached.

**Manual Step Tuning**  
 • Press ⏪ / TUNE + or ⏩ / TUNE - button to step up or down the band.  
 • Fine adjust the tuning so that the station plays clearly.  
 - If you hear a lot of background noise when playing the station, the signal may be weak. You may be able to improve the signal strength by adjusting the position of the FM antenna or moving the radio to a different position.

**During playback:**  
 Water dancing up and down will be controlled by the volume level.

**PLAYING AUDIO VIA BLUETOOTH SOURCE**

Your Tower Speaker also includes Bluetooth connectivity. You can connect Bluetooth equipped mobile phones, tablets and laptop computers to play through your audio system.

**Selecting Bluetooth Mode**  
 • Press the SOURCE button until the indicator turns BLUE.  
 - The system will start searching for the device last connected, if the device is found, the system will reconnect the device automatically.  
 - Please note, only one Bluetooth device can be connected to the unit at one time.

• Activate Bluetooth on your device (smartphone, tablet, computer, etc.).  
 • In the Bluetooth menu of your device, there should be an option to search for Bluetooth devices. Select this option.  
 - Your device will now scan for other Bluetooth devices and should find the unit, identified as **TSB-63628**.  
 • Choose to pair with **TSB-63628**.  
 - If you are asked for a password, enter **0000**.

• Your Bluetooth device will now be connected. Once a connection has been established, the audio system will send out a piece of tone. After pairing for the first time, the audio system will appear on the connection menu of your Bluetooth device.

• If you want to connect another Bluetooth device to the unit, deactivate the current connection. Follow the steps above to connect the new device.

**During playback:**  
 • Press ⏸ button to change between Play and Pause mode at any time.  
 • Press ⏪ or ⏩ button to select the next or previous track.  
 - These functions may not be available for all Bluetooth sources.  
 • Water dancing up and down will be controlled by the volume level.

**PLAYING AUDIO VIA AUX-IN SOURCE**

**Connecting to AUX IN**

- Connect one end of the supplied 3.5mm stereo mini jack cable to the line or headphone jack of the source (smartphone, tablet, etc.).
- Connect the other end of the cable to the AUX IN jack on the back panel of the Bluetooth Tower Speaker.

**Playing an AUX Source:**

- Press the SOURCE button repeatedly until the indicator turns GREEN.
- Set the source to play.
- Adjust the volume.  
 - If the volume level is too low, try increasing the volume level on the source volume control.
- Water dancing up and down will be controlled by the volume level.

**TROUBLESHOOTING GUIDE**

If you are having problems with your unit, please review the guide below before requesting service.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	Power plug is not plugged into a wall outlet	Plug into the wall outlet properly
	The unit is in standby mode	Press the ⏻ button to turn on the unit from standby mode
No sound	Volume is set to minimum	Increase volume level by pressing the VOL+ button
	The connected device is not in playing mode	Play the music from the connected device
	Sound output of the connected device is set too low	Increase the volume level of the connected device
Sound distortion	Input source is incorrect	Press the SOURCE button repeatedly until indicator turns to correct color
	Volume level is too high	Reduce the volume level by pressing the VOL- button
	Volume level of the connected device is set too high	Reduce the volume level of the connected device
Weak radio reception		Extend the FM antenna wire on the rear of the unit and relocate it to get better reception

**SPECIFICATIONS**

Power Source..... 5.8V  $\pm$ 2A  $\text{C}\text{--}\text{C}\text{--}\text{C}$   
 Power Consumption(audio).....11.6 W  
 Bluetooth Working Range .....10m (33ft)  
 FM Coverage.....87.5-108MHz

Bluetooth is a registered trademark of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

**Accessories**

- Instruction Manual
- AUX IN Cable
- Adapter

**Limited Warranty**

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty does not cover the following which may be supplied with this product, including but not limited to: LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contract or commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@midwesttrading.com](mailto:info@midwesttrading.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.