 




# BLUETOOTH TABLETOP TOWER

**Model:** ITSB-340L

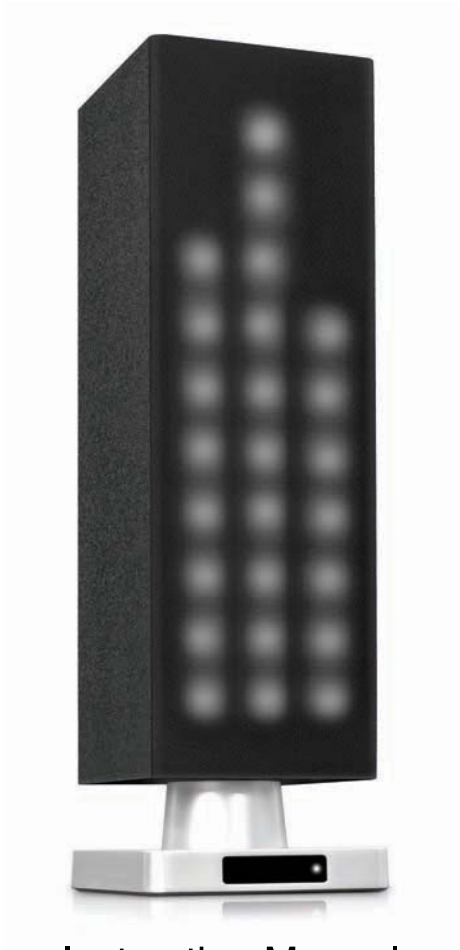

## Instruction Manual

Please read this instruction manual carefully before use and keep for future reference.

# QUICK START GUIDE

## 1. Make sure to remove ALL items before discarding package.

### This includes:

- Tabletop Tower Speaker
- Remote Control (Battery Included)
- Instruction Manual
- AC Adapter

## 2. Connect your smartphone, tablet, or other audio device via Bluetooth.

- Press the SOURCE button until indicator light turns **BLUE** with an audible beep.
- Make sure Bluetooth is enabled on your device. Once **"ITSB-340L"** appears in the list of devices, select it. If asked for a password, enter **'0000'**.
- The Tabletop Tower Speaker will produce an audible beep once a connection is established.
- See pages 8-10 for further instructions on listening to the FM radio, connecting via Bluetooth or connecting via Aux-In.

## 3. Viewing the LED Display.

- Press and hold the LED ON/OFF button on the unit to turn the LED Display On and Off.
- Simply press the LED ON/OFF button to change the LED Display mode, there are 5 different Display modes in total.
- See page 8 for Remote Control Instructions.

# CONTENTS

Quick Start Guide.....	1
Table of Contents.....	2
Safety Instructions.....	3
Product Overview.....	5
Remote Control Overview.....	6
Battery Installation (Remote Control).....	7
General Operation and LED Display.....	8
Playing Audio via FM Tuner.....	8
Playing Audio via Bluetooth Source.....	9
Playing Audio via AUX-IN Source.....	10
Troubleshooting.....	11
Specifications.....	12
Warranty.....	13

# SAFETY INSTRUCTIONS



The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

## CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

**CAUTION: TO PREVENT  
RISK OF ELECTRIC SHOCK,  
DO NOT REMOVE COVER (OR BACK).  
NO USER-SERVICEABLE PARTS INSIDE. REFER  
SERVICING TO QUALIFIED SERVICE PROFESSIONAL.**



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water. This apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The apparatus should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings. The apparatus must not be placed in a built-in installation, such as a closed bookcase or cabinet that may impede the flow of air through the ventilation openings. Ventilation should not be impeded by covering the openings with items such as newspapers, tablecloths, curtains, etc.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Extended exposure to temperatures higher than 170 degrees Fahrenheit, for example inside a closed vehicle during the summer, may result in damage to your product.
9. No open flame sources, such as lighted candles, should be placed on the apparatus.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched – particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Do not install in an area which impedes the access to the power plug.  
Disconnecting the power plug is the only way to completely remove power to the product and must be readily accessible at all times.
13. Power source – Use only power supplies of the type specified in the operating instructions or as marked on the appliance. If a separate power supply is included with this apparatus, do not substitute with any other power supply – use only manufacturer-provided power supplies.

14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. If the unit will be unused for long periods of time, the batteries should be removed.
16. Do not place this product on an unstable surface. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a stand, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
17. Move the appliance with care to avoid damage or injury.
18. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped
19. For products which incorporate batteries, please refer to local regulations for proper battery disposal.



## **CALIFORNIA PROP 65 WARNING**

"WARNING" This product contains chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on to the following website address:  
<http://www.oehha.ca.gov/prop65.html>

 
### **Placement**

The unit must be put on a table. Choose a location:


- Where there is a nearby power connection.
- Where the front speakers have a direct line of sight to the listener for sound and for remote control operation.
- Where the unit is not positioned too close to a wall - allow 11.8in (30cm) of clearance if possible.

# PRODUCT OVERVIEW


Front View

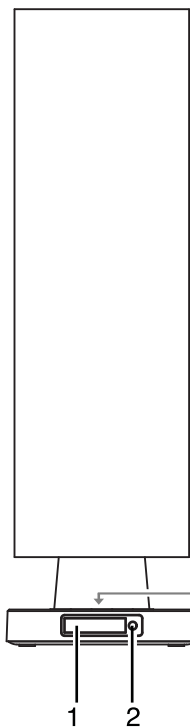

Function Panel

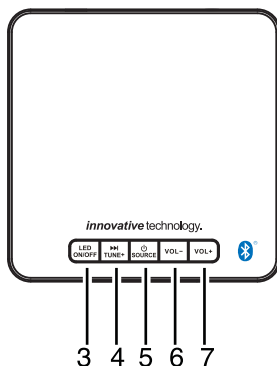 


Rear View

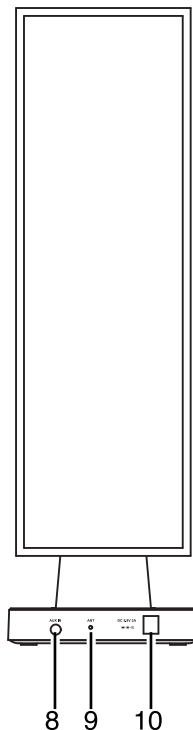 

1. Remote Sensor
2. Indicator
3. LED ON/OFF Button
4. ►► / TUNE + Button
5. ⏻ /SOURCE Button

6. VOL - (Volume Down)
7. VOL + (Volume Up)
8. AUX-IN Jack
9. Antenna
10. DC IN Jack

# REMOTE CONTROL OVERVIEW

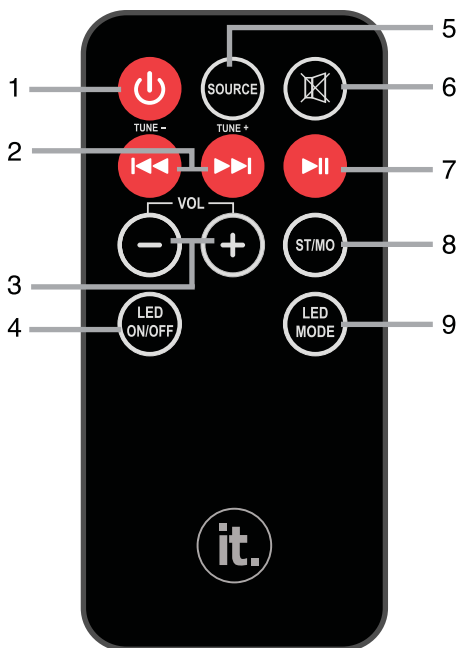 

1. ⏻ / STANDBY Button

2. ⏮ / TUNE - Button  
⏭ / TUNE + Button

3. VOL - (Volume Down)  
VOL + (Volume Up)

4. LED ON/OFF Button

5. SOURCE Button

6. 🔇 Mute Button

7. ⏯ Play/Pause Button

8. ST/MO (Stereo/Mono) Button

9. LED MODE Button


# BATTERY INSTALLATION (REMOTE CONTROL)

 **Before First Use:** Remove and discard the insulation tab as shown.



## Battery Replacement

1. Push and slide out the battery door (as shown in the figure below) on the rear of the remote control.
2. Replace the battery with a new CR2025 button cell with the polarity “+” facing up.

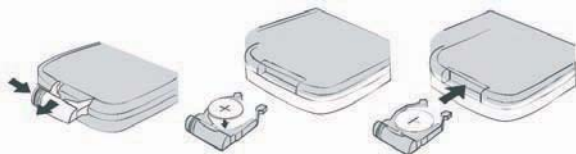

## Battery Precautions

Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. If the batteries in the device are completely drained or the device will not be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
4. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's instructions.)
5. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like. NEVER dispose of old batteries by throwing them in a fire.
6. Clean the battery contacts, and also those of the device, prior to battery installation.
7. When the remote control unit is not to be used for a long time (more than a month), remove the batteries to prevent them from leaking.
8. Do not dispose device into standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate disposal laws and regulations. Please refer to local regulations for proper battery disposal.

## REMOTE CONTROL OPERATING RANGE

### Notes:

- When there is an obstacle between the unit and the remote, the remote may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.



# GENERAL OPERATION AND LED DISPLAY

## Connecting Power

Before connecting the power, check that the main voltage on the rating plate of the back panel is the same as the voltage in your area.

- Insert the plug into the wall socket.

## Turning the Unit On / Off

- Press and hold the (⏻) / SOURCE Button on the unit to turn it On and Off.

*NOTE: Indicator light turns **RED** in Standby Mode.*

## USING THE LED DISPLAY

### Operation using the Tower Speaker

- Press and hold the LED ON/OFF button on the unit to turn the LED Display On and Off. Simply press the LED ON/OFF button to change the LED Display mode, there are 5 different Display modes in total.

### Operation with the Remote Control

- Press the LED ON/OFF button on the remote control to turn the LED Display On and Off. Press the LED MODE button on the remote control to change the LED Display mode, there are 5 different Display modes in total.

# PLAYING AUDIO VIA FM TUNER

## FM Radio Antenna

Before using your unit for FM reception, unwrap and fully extend the antenna wire. You may need to adjust the position of the antenna wire for maximum signal strength.

## LISTEN TO FM RADIO

### Selecting FM Mode

- Press the (⏻) /SOURCE button on unit repeatedly until the indicator turns **GREEN**.

### Station Search

- Press and hold ►► / TUNE + or ◄◄ / TUNE - button to search up or down the band. The radio will stop automatically when the next station is reached.

### Manual Step Tuning

- Press ►► / TUNE + or ◄◄ / TUNE - button to step up or down the band.
- Fine adjust the tuning so that the station plays clearly.
  - *If you hear a lot of background noise when playing the station, the signal may be weak. You may be able to improve the signal strength by adjusting the position of the FM antenna or moving the radio to a different position.*

### ST/MO (Stereo/Mono) Button

- If the Radio Station signal is strong but you are still receiving poor reception or there is sound interference, press the ST/MO button to further improve sound quality.

# PLAYING AUDIO VIA BLUETOOTH SOURCE

Your Tabletop Tower Speaker also includes Bluetooth connectivity. You can connect Bluetooth enabled smartphones, tablets, and laptop computers to stream music.

## Selecting Bluetooth Mode

- Press the (⏻) / SOURCE button until indicator light turns **BLUE** with an audible beep.
  - *The system will start searching for the device last connected, if the device is found, the system will reconnect the device automatically.*
  - *Please note, only one Bluetooth device can be connected to the Tabletop Tower Speaker at one time.*
- Activate Bluetooth on your device (smartphone, tablet, computer, etc.).
- In the Bluetooth menu of your device, there should be an option to search for Bluetooth devices. Select this option.
  - *Your device will now scan for other Bluetooth devices and should find the Tabletop Tower Speaker, identified as "ITSB-340L".*
- Choose to pair with **"ITSB-340L"**.
  - *If you are asked for a password, enter '0000'.*
- Your Bluetooth device will now be connected. Once a connection has been established, the audio system will produce an audio beep. After pairing for the first time, the audio system will appear on the connection menu of your Bluetooth device.
- If you want to connect to another Bluetooth device to the Tabletop Tower Speaker, deactivate the current connection. Follow the steps above to connect the new device.

## Playback Control

- Press the ►|| Play/Pause button to pause the music playback. Press again to resume.
- Press the ◀◀ or ▶▶ button to select the next or previous track.
  - *These functions may not be available for all Bluetooth enabled devices.*

# PLAYING AUDIO VIA AUX-IN SOURCE

## Connecting via AUX-IN

- Connect one end of a 3.5mm AUX-IN cable (not included) to the line out or headphone jack of the source (smartphone, tablet, etc.).
- Connect the other end of the cable to the AUX-IN jack on the back panel of the Tabletop Tower Speaker.

## Playing an AUX-IN Source

- Press the (Ⓟ) / SOURCE button on the unit repeatedly until the indicator turns **VIOLET**.
- Set the source to play.
- Adjust the volume.
  - *If the volume level is too low, try increasing the volume level on the source volume control.*

# TROUBLESHOOTING

If you are having problems with your unit, please review the guide below before requesting service.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	Power plug is not plugged into a wall outlet	Plug into the wall outlet properly
	The unit is in standby mode	Press the standby button on remote control to turn on the unit from standby mode
No sound	Volume is set to minimum	Increase volume level by pressing the VOL+ button
	The connected device is not in playing mode	Play the music/movie from the connected device
	Sound output of the connected device is set too low	Increase the volume level of the connected device
	Input source is incorrect	Press the SOURCE button repeatedly until indicator turns to correct color
Sound distortion	Volume level is too high	Reduce the volume level by pressing the VOL- button
	Volume level of the connected device is set too high	Reduce the volume level of the connected device
Remote not functioning	Out of range	Point the remote control to the remote sensor on the unit within 20 feet (6m), +/- 30 degrees
	The batteries in the remote control are dead	Replace with new batteries
Weak radio reception	Static or no signal due to interference	Extend the FM antenna wire on the rear of the unit and relocate it to get better reception
Bluetooth will not pair to a device	The external device is out of range or too far from the unit.	Move the external device within a 33 foot range of the unit.
	The external device is not pairing	Follow the proper procedures stated in the Bluetooth section of the manual.

## SPECIFICATIONS

Adapter Power Input:.....	AC 100-240~ 50/60Hz, 0.5A
Output:.....	DC 5.8V $\overline{\text{---}}$ 2000mA $\ominus\text{---}\oplus$
Power Consumption.....	11.6W
Bluetooth Working Range.....	up to 32 ft (10m)
FM Coverage.....	87.5-108.0 MHz

Bluetooth is a registered trademark of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

**Made in China.**

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 7.9in (20cm) from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

**Caution:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# WARRANTY

## **Innovative Technology Electronics LLC. Limited Warranty: 90 Days Labor, One Year Parts**

Innovative Technology Electronics LLC. (IT) warrants the product to be free from “Defects” in materials under normal use for a period of “One Year” from the date of the original purchase. The Warranty is “Not” transferable. IT agrees, within the initial “90 Day” period, to repair or replace the product if it is determined to be defective at “No Charge”. It is further agreed that IT will cover the cost to repair or replace damaged “Parts” only for a total period of “One Year” from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

**To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at [www.ithomeproducts.com](http://www.ithomeproducts.com) to request an RMA (Return Material Authorization) number to return products for service or replacement.** Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer “Must” include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- **USD\$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD\$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)**
- **USD\$16.00, for items \$100.00 and up. (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics LLC. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser’s failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website [www.ithomeproducts.com/support](http://www.ithomeproducts.com/support).

Innovative Technology Electronics LLC.  
1 Channel Drive, Port Washington, NY 11050  
Toll free: 1-877-483-2497

**Website for support: [www.ithomeproducts.com/support](http://www.ithomeproducts.com/support)**

There are no express warranties except as listed above. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

