

# Operation Manual

RFID Reader “IDE-ZM-MF-U2-A1”

## Covered Variants:

**M/N:** 10115-301

**M/N:** 10115-x<sup>1</sup>y<sup>1</sup>z<sup>1</sup>

REVISION 1.0, 2019-09-23

BALTECH AG  
Lilienthalstraße 27  
85399 Hallbergmoos  
Germany

Phone: +49 (811) 99 88 1- 0

FAX: +49 (811) 99 88 1- 11

e-mail: [info@baltech.de](mailto:info@baltech.de)

<http://www.baltech.de/>

---

<sup>1</sup> “x”, “y” and “z” shall represent any alphanumerical number or can be left blank.

The “IDE-ZM-MF-U2-A1” Reader/Writer is a desktop contactless smart card USB/RS232 reader and writer with 13.56 MHz and 125 KHz card technology. It supports ISO Standards 14443 A & B and 15693, also supports all major 125 KHz-based Transponders.

Based on BALTECH’s core technology it provides support of the latest smartcard technologies, encryption and security features.

## Mounting and Connection

The reader generates magnetic field at 13.56MHz and 125 KHz, which could be influenced by any electrically conductive material close to the device.

To ensure good performances and functionalities in terms of read range and reliability a minimum distance of 10cm from such materials is required. Mounting the unit directly to metal would result in a severe reduction of read range down to zero functionality. Care should be taken when testing the device after mounting at a problematic environment: Read ranges and performance vary from card to card and very much from card to tag or key-fob.

When mounting multiple readers, the distance between readers should be minimum 0.5 m in order to avoid degradation of performance due to interference.

To connect the device to a host system (a printer or a PC), please make sure that the system provides an USB socket intended for connection of the reader.

## Operation

Whenever the device is connected to a proper power supply, it will switch on the internal antenna and periodically scan for a card. Once a card has been detected, the card number is read, the data converted and sent to the host system through the USB Interface. To enable the device to read cards, tags and key-fobs successfully, they should be placed centred above the reader.

Technical Specification	
Operating Frequency (Model dependent)	<ul style="list-style-type: none"> <li>13.56 MHz</li> <li>125 KHz</li> </ul>
Interfaces (Model dependent)	<ul style="list-style-type: none"> <li>USB: Full speed 2.0</li> <li>RS232 (EIA/TIA-232-F Standards)</li> </ul>
Supported Contactless Cards	ISO 14443A, ISO 14443B, ISO 15693, Sony Felica, Different 125 KHz Transponders (Model dependent)
Supported encryption	Mifare classic, AES, DES
Human Interfaced	RGB LED & Buzzer
Supply Power [VDC]	USB bus powered: 5 (±5%) or external 5V (±5%) at RS232 connector.
Power Consumption [W]	Up to 1.5 / 1 typ.
Operating Temperature [°C]	-20 to +65
Operating Humidity [%]	20 to 80 relative humidity; non-condensing
Non-Operating Humidity [%]	10 to 90 relative humidity; non-condensing
Dimension	57mm x 35mm x 9mm
Weight	11g

## Pinning

The reader supports two different host interfaces.

USB Interface Molex Header (4 pins)			
Molex Part Number: 53261-0471			
Pin#	Name	Type	Description
1	PWR	Power	5V Power Supply
2	D-	Data	USB-Data inverted
3	D+	Data	USB-Data
4	GND	Power	Signal and Power Ground

<b>RS232 Interface Molex Header (5 pins)</b>			
<b>Molex Part Number: 53261-0571</b>			
<b>Pin#</b>	<b>Name</b>	<b>Type</b>	<b>Description</b>
1	PWR	Power	5V Power Supply
2	GND	Power	Signal and Power Ground
3	MULTI_RX	Data	RX_UART / WGND_D1 / MAG_DATA
4	MULTI_TX	Data	TX_UART / WGND_D0 / MAG_CLK
5	MULTI_I/O	GPIO	Input, output pin.

## General regulatory requirements for 10115-301

FCC ID OKY10115301A06A

IC: 7657A-10115301

### NOTICE:

This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

*Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:*

- (1) l'appareil ne doit pas produire de brouillage, et*
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

Changes or modifications made to this equipment not expressly approved by BALTECH AG may void the FCC authorization to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.