

Internal View of the EUT with Transmitter PCB Installed



Internal View of the EUT with Transmitter PCB Removed

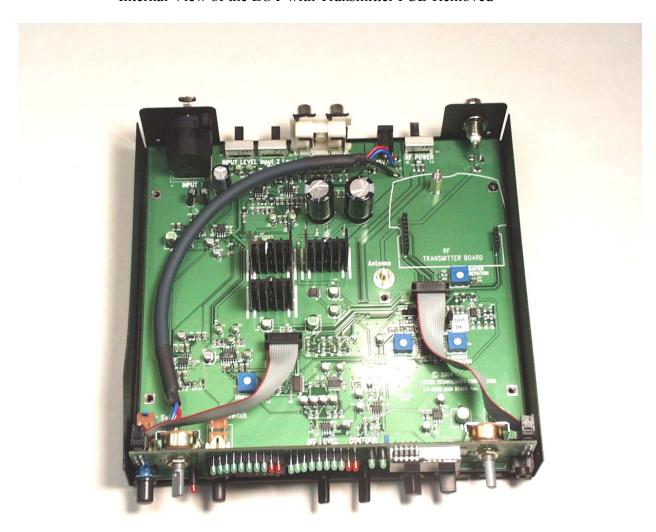


Trace Side of the Main PCB

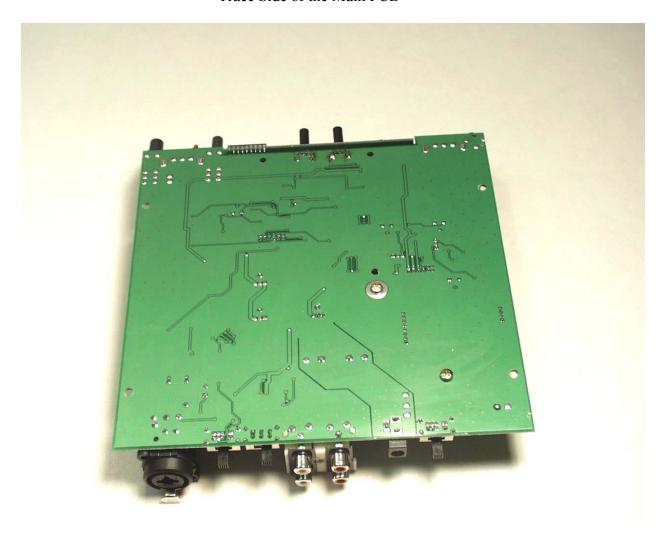


Component Side of the Transmitter PCB



Trace Side of the Transmitter PCB While Connected to the Control Card

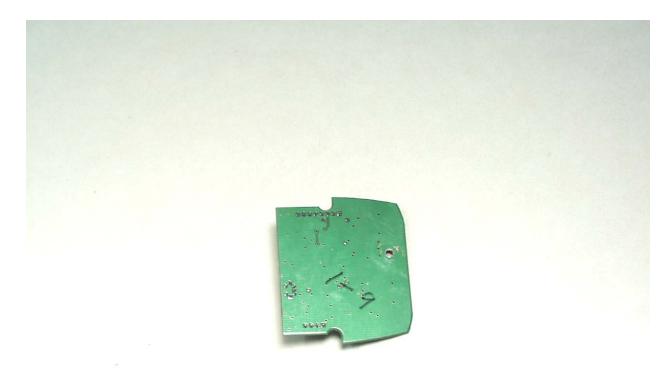

Front View of the Front Panel PCB

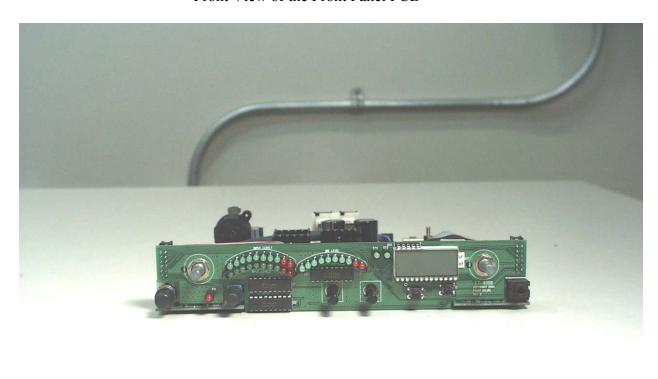



Rear View of the Front Panel PCB

