

WaterCop

EMERGENCY SHUT-OFF LEAK DETECTION SYSTEM

INSTRUCTIONS


Please read these instructions carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.

Description

WaterCop is a motorized ball valve, used to automatically turn off the main water supply when unwanted water is detected due to a leak or overflow.

Specifications

Max. working pressure.....	125 PSIG
Ambient temperature.....	35°F to 105°F
Enclosure.....	polycarbonate
Voltage.....	115V, 1Phase, 60Hz
Current.....	2.5 Amps
Power input: Standby.....	1.375W
Holding (2.5 seconds).....	75W
Power cord.....	8 ft. Heavy-duty grounded
Full-Port ball valve.....	3/4 NPT
Seal construction.....	Brass
Seal.....	PTFE

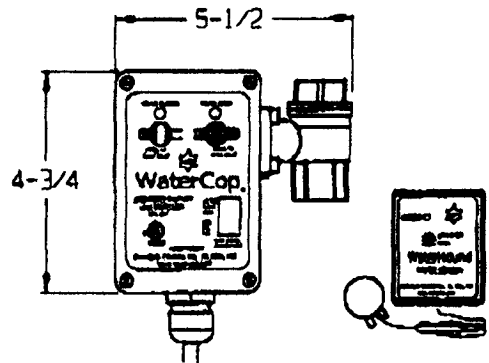

General Safety Information

WARNING

Do not apply electrical power to the unit unless the unit is fully assembled and mounted. Failure to do so could result in personal injury and/or damage to the unit.

Disconnect power source before working on the unit. Failure to do so could result in personal injury.

CAUTION

It is recommended that eye protection be worn while servicing the system. Failure to do so could result in personal injury.

WARNING

The motorized drive unit case is not capable of supporting any loads. Do not attempt to use the unit as a step. This will cause damage to the unit and could cause personal injury. Do not use in hazardous locations.

CAUTION

Do not use the case as leverage when mounting this unit or tightening fittings. Apply wrench to flats on the valve body to tighten fittings.