

To active the mouse, please refer to the method described as below:

1. Press connects key in the receiver, LEDs turn on
2. Click any key in the keyboard and mouse, LEDs turn off
3. At this time, you can use the mouse just as usual

Mouse driver is just to active the wheel function in win95 and early win98 system.

Mouse sending data to receiver just when you press any key or move it.