

INSTRUCTIONS

FULL FUNCTION RADIO CONTROLLED R/C TURBO TWISTER / STUNT CAR

MODEL NO : 0980
49.860 MHZ

- Ages : For 3 and up
- Read the instructions carefully to the end before beginning to play
- Adult guidance is strongly recommended

 
FEATURES

VEHICLE

- * Can be made to move forward, reverse, turn right / left and various stunt action
- * Can be operated on flat smooth surfaces
- * Battery: 4 x "AA" Ni-Cd or alkaline batteries
- * Battery working time: 20 minutes


TRANSMITTER

- * Full function: Forward, Backward, Left Turn, Right Turn, Stop
- * Modulation: AM
- * Frequency: 49.860 MHz
- * Battery: 1 x 9 volt
- * Battery life time: 8 Hours

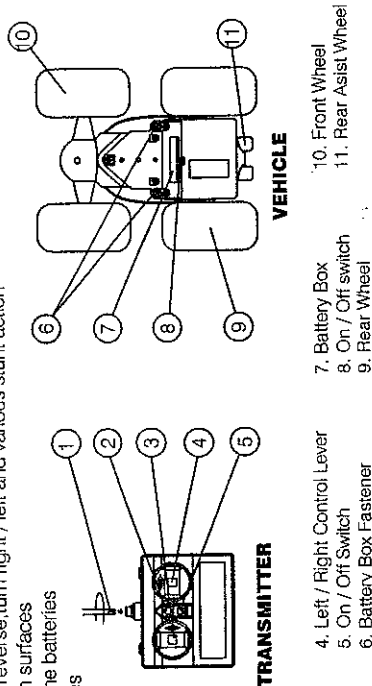


INSTALLING BATTERIES

 1. Open the battery case of the transmitter, and install 1 "9V" battery into it, then close the case cover.
 2. Turn away the battery box fasteners, and take the battery box out of the vehicle.
 3. Install 4 "AA" batteries into the box, making sure the [-] and [+] poles of the battery are positioned properly.
 4. Insert the battery box back into the vehicle, and fasten the box by turning the fasteners.
- (Batteries are not included)

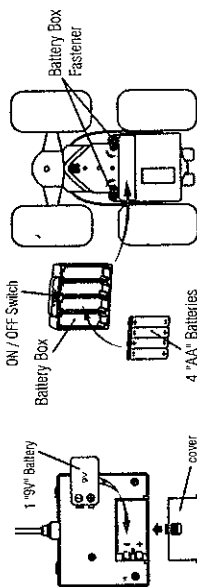


SAFETY RULES

 - * Not suitable for children under 3 years due to detachable small parts.
- * Installation of the battery should be done by an adult.
- * Keep fingers, hair and loose clothing away from the tires and the wheels while the vehicle is switched "ON".
- * Don't pick up vehicle while in motion.
- * Don't put your vehicle and transmitter near any sources of **heat**.
- * Don't operate your vehicle in dangerous place.
- * Avoid driving on **sand**.
- * Don't let the vehicle get wet. Don't run through **water**.
- * Avoid all possible collisions, check the road ahead and watch for obstacles.
- * Children should not disassemble this vehicle.
- * If the vehicle is damaged and any broken parts are exposed, the vehicle should not be used by children until checked by adults that no sharp edges are exposed.

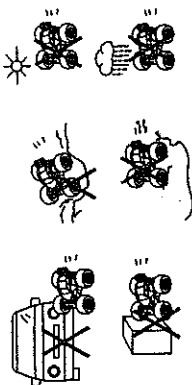

OPERATION

 1. Extend the transmitter antenna to its full length.
2. Turn "on" the vehicle and transmitter.
3. Drive the car by operating the sticks of the transmitter.

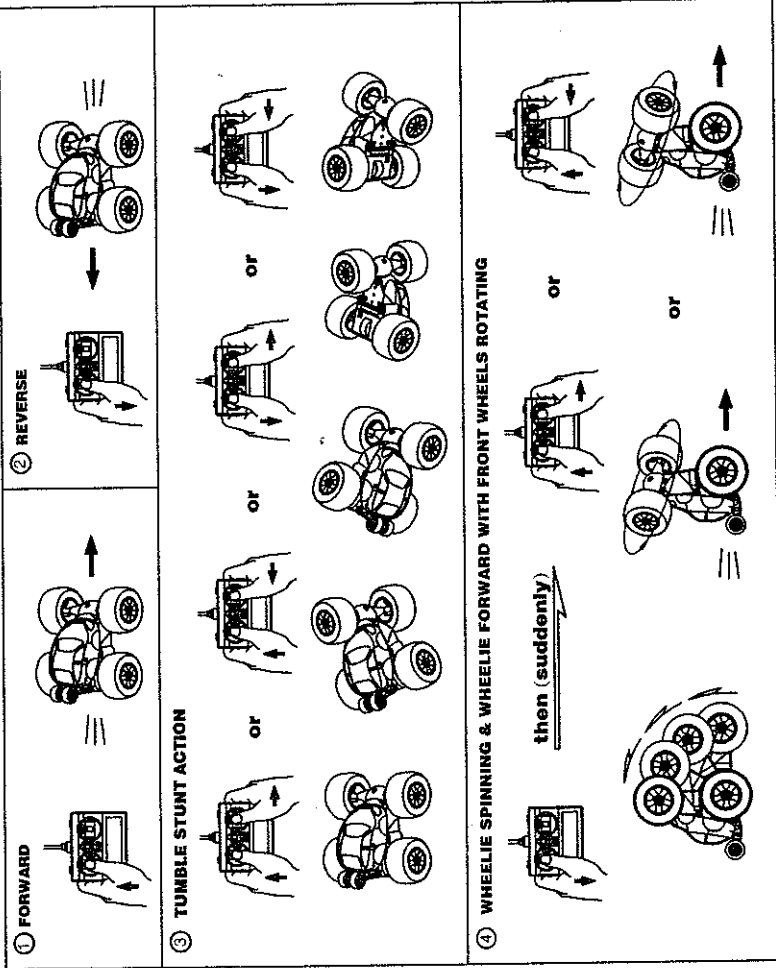

NOTE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and the receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- * Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

INSTRUCTIONS

FULL FUNCTION RADIO CONTROLLED
R/C EX-2 / STUNT VEHICLE

MODEL NO: 0986

49.860 MHz

- Ages : For 3 and up
- Read the instructions carefully to the end before use
- Adult guidance is strongly recommended

 
FEATURES

VEHICLE

- * Can be made to move forward, reverse, turn right / left and various stunt action
- * Can be operated on all flat smooth surfaces
- * Battery: 5 x "AA" Ni-Cd or alkaline batteries
- * Battery working time: 20 minutes

TRANSMITTER


- * Full function:
Forward, Backward,
Left Turn, Right Turn, Stop
- * Modulation: AM
- * Frequency: 49.860 MHz
- * Battery: 1 x 006P (9 volt)
- * Battery life time: 8 Hours

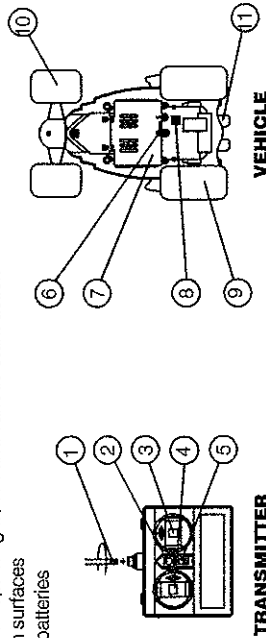

1. Telescopic Antenna
2. Indicator Lamp
3. Forward / Reverse Control lever
4. Left / Right Control Lever
5. On / Off Switch
6. Cover Fastener
7. Battery Case Cover
8. On / Off switch
9. Rear Wheel
10. Front Wheel
11. Rear Assist Wheel


INSTALLING BATTERIES

 1. Open the battery case of the transmitter, and install 1 "9V" battery into it, then close the case cover.
2. Turn away the battery case cover fastener and open the cover.
3. Install 5 "AA" batteries into the case, making sure the (+) and (-) poles of the battery are positioned properly. (Batteries are not included)
4. Close the case cover and fasten it by turning the fastener.

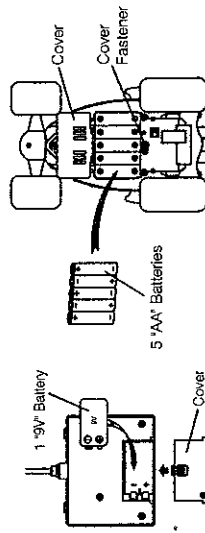


SAFETY RULES

 - * Not suitable for children under 3 years due to detachable small parts.
- * Installation of the battery should be done by an adult.
- * Keep fingers, hair and loose clothing away from the tires and the wheels while the vehicle is switched "ON".
- * Don't pick up vehicle while in motion.
- * Don't put your vehicle and transmitter near any sources of **heat**.
- * Don't operate your vehicle in dangerous place.
- * Avoid driving on **sand**.
- * Don't let the vehicle get wet. Don't run through **water**.
- * Avoid all possible collisions check the road ahead and watch for obstacles.
- * Children should not disassemble this vehicle.
- * If the vehicle is damaged and any broken parts are exposed, the vehicle should not be used by children until checked by adults that no sharp edges are exposed.

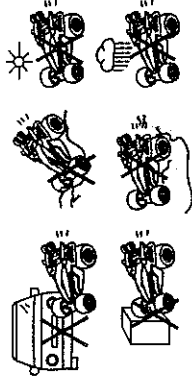

OPERATION

 1. Extend the transmitter antenna to its full length.
2. Turn "on" the vehicle and transmitter.
3. Drive the car by operating the sticks of the transmitter.

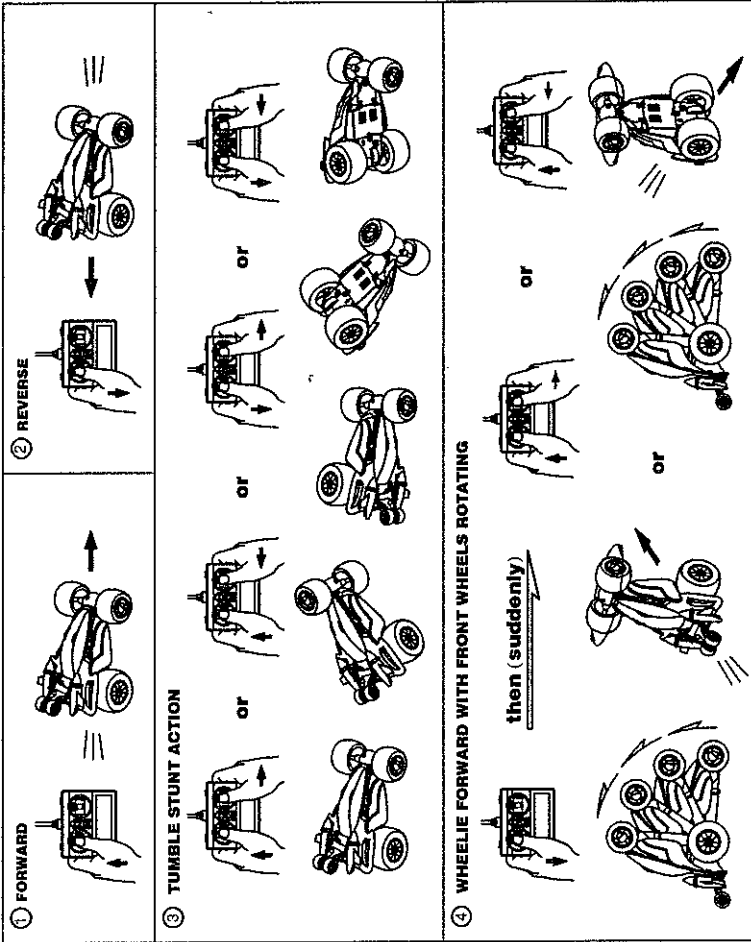

NOTE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and the receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- * Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

INSTRUCTIONS

FULL FUNCTION RADIO CONTROLLED
R/C EX-1 / STUNT VEHICLE
MODEL NO: 0987
49.860 MHz

- Ages : For 3 and up
- Read the instructions carefully to the end before use
- Adult guidance is strongly recommended

FEATURES

 
VEHICLE

- * Can be made to move forward, reverse, turn right / left and various stunt actions
- * Can be operated on all flat smooth surfaces
- * Battery: 5 x "AA" Ni-Cd or alkaline batteries
- * Battery working time: 20 minutes

TRANSMITTER


- * Full function: Forward, Backward, Left Turn, Right Turn, Stop
- * Modulation: AM
- * Frequency: 49.860 MHz
- * Battery: 1 x 006P (9 volt)
- * Battery life time: 8 Hours

1. Telescopic Antenna
2. Indicator Lamp
3. Forward / Reverse Control lever
4. Left / Right Control Lever
5. On / Off Switch
6. Cover Fastener
7. Battery Case Cover
8. On / Off switch
9. Rear Wheel
10. Front Wheel
11. Rear Assist Wheel

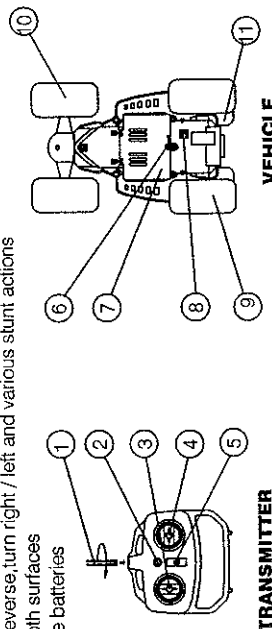


INSTALLING BATTERIES

 1. Open the battery case of the transmitter, and install 1 "9V" battery into it, then close the case cover.
 2. Turn away the battery case cover fastener and open the cover.
 3. Install 5 "AA" batteries into the case, making sure the (+) and (-) poles of the battery are positioned properly.
 4. Close the case cover and fasten it by turning the fastener.
- (Batteries are not included)

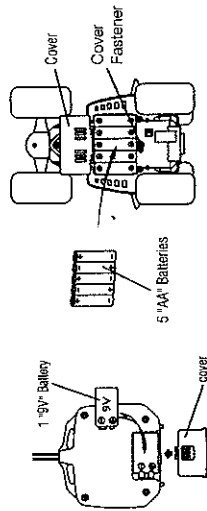


SAFETY RULES

 - * Not suitable for children under 3 years due to detachable small parts.
- * Installation of the battery should be done by an adult.
- * Keep fingers, hair and loose clothing away from the tires and the wheels while the vehicle is switched "ON".
- * Don't pick up vehicle while in motion.
- * Don't put your vehicle and transmitter near any sources of **heat**.
- * Don't operate your vehicle in dangerous places.
- * Avoid driving on **sand**.
- * Don't let the vehicle get wet. Don't run through **water**.
- * Avoid all possible collisions, check the road ahead and watch for obstacles.
- * Children should not disassemble this vehicle.
- * If the vehicle is damaged and any broken parts are exposed, the vehicle should not be used by children until checked by adults that no sharp edges are exposed.

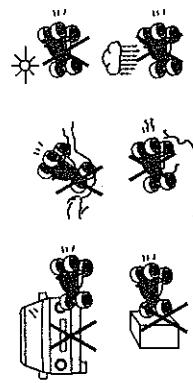

OPERATION

 1. Extend the transmitter antenna to its full length.
2. Turn "on" the vehicle and transmitter.
3. Drive the car by operating the sticks of the transmitter.

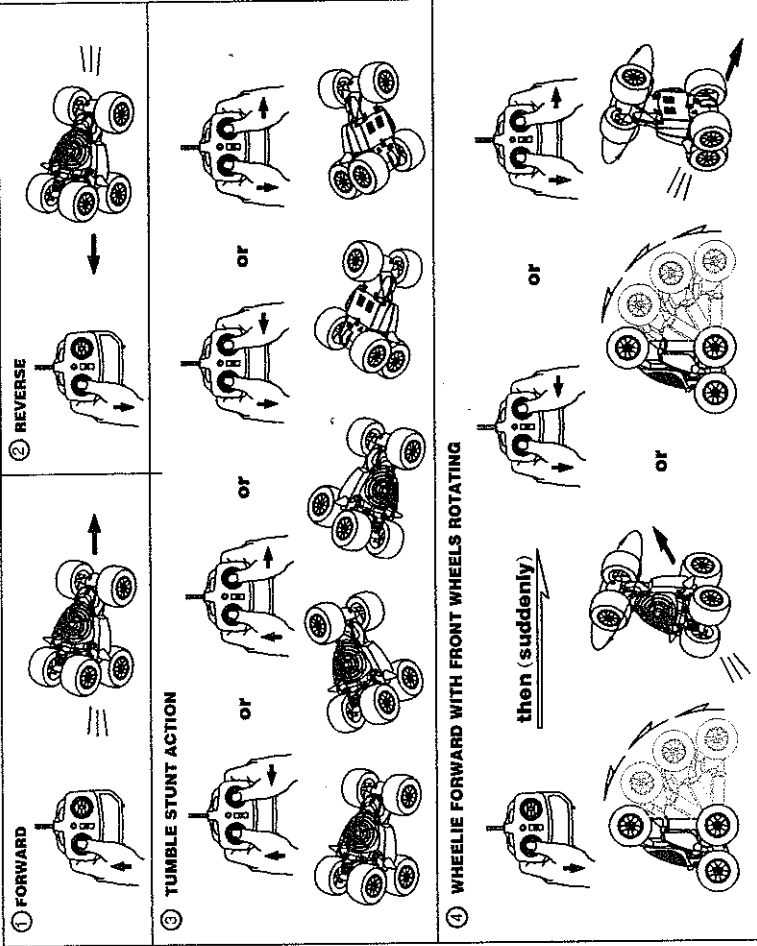

NOTE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and the receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- * Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.