



FJB label and its dimension



The plate is under the battery  
in bottom side of the unit.

FJB label position