

## **Tune-up Information**

System tune-up and alignment information is found in the Installation (Users) Manual, as follows:

	page
<b>Chapter 4      Alignment Procedures</b>	<b>4-1</b>
Setup	4-2
Before starting	4-2
Preparing for Installation	4-2
Coarse Aligning the IFU	4-3
Fine Aligning the IFU	4-4