

Tune-up Information

System tune-up and alignment information is found in the Installation (Users) Manual, as follows:

	page
Chapter 4 Alignment Procedures	4-1
Setup	4-2
Before starting	4-2
Preparing for Installation	4-2
Coarse Aligning the IFU	4-3
Fine Aligning the IFU	4-4