

2.8. Test Photo

Test Mode : Mode 3: Transmit_Power by Notebook PC

Description : Front View of Conducted Emission Test Setup



Test Mode : Mode 3: Transmit_Power by Notebook PC

Description : Back View of Conducted Emission Test Setup



Test Mode : Mode 4: Transmit_Power by Adapter
 Description : Front View of Conducted Emission Test Setup



Test Mode : Mode 4: Transmit_Power by Adapter
 Description : Back View of Conducted Emission Test Setup



4.8. Test Photo


Test Mode : Mode 1: Transmit_Power by 3V Battery

Description : Front View of Radiated Emission Test Setup



Test Mode : Mode 1: Transmit_Power by 3V Battery


Description : Back View of Radiated Emission Test Setup

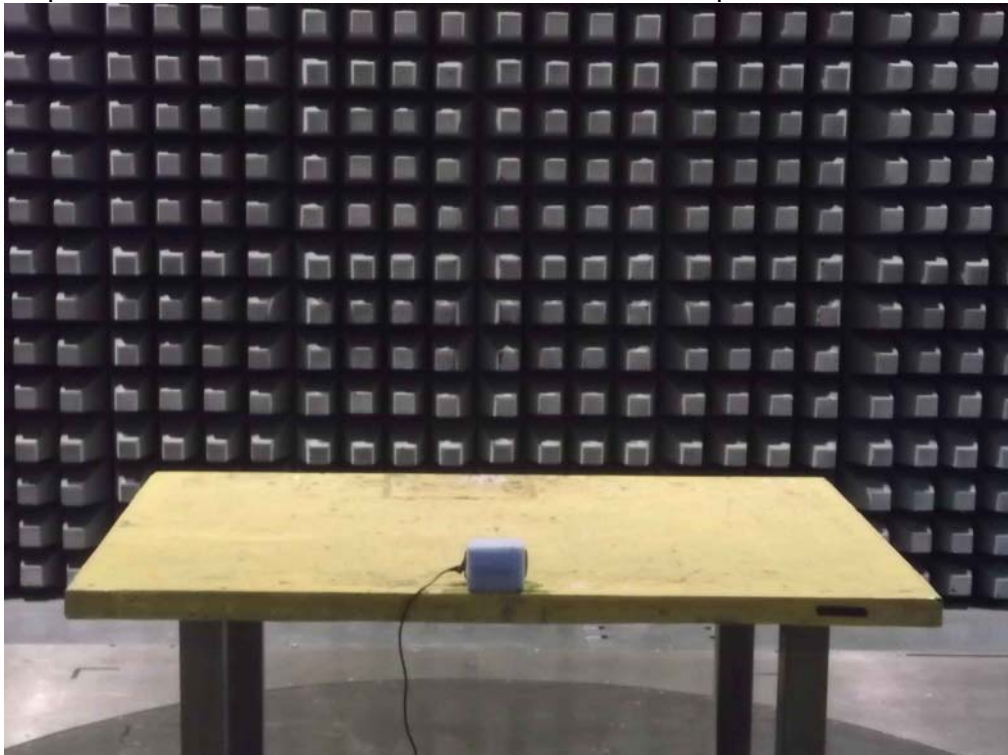

Test Mode : Mode 2: Transmit_Power by 3.7V Battery
 Description : Front View of Radiated Emission Test Setup



Test Mode : Mode 2: Transmit_Power by 3.7V Battery
 Description : Back View of Radiated Emission Test Setup

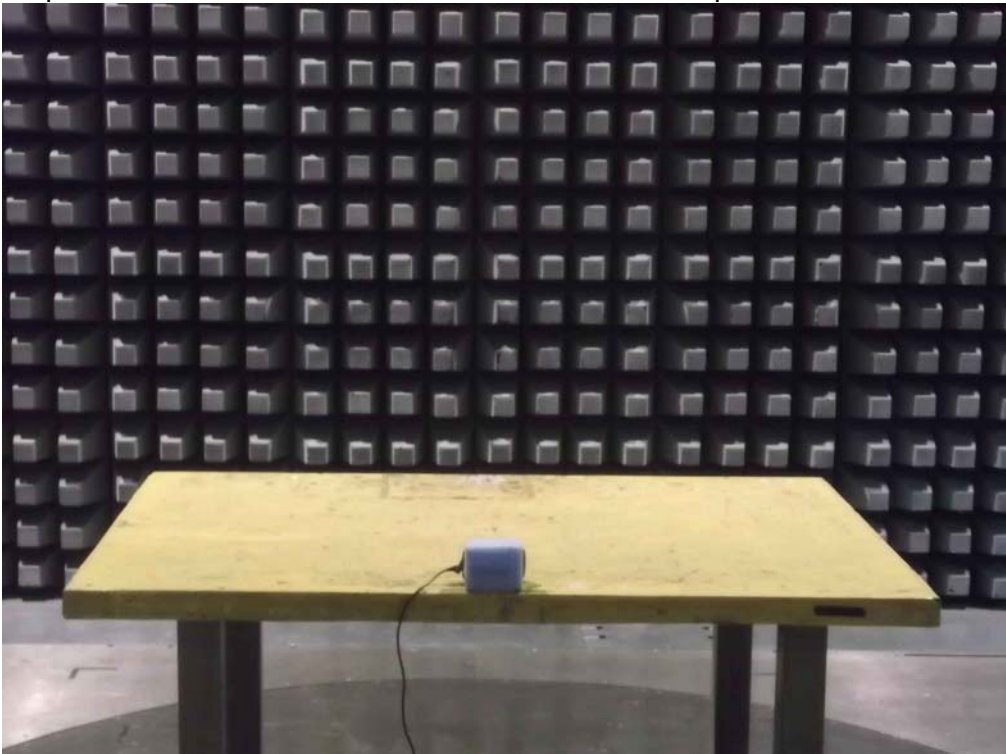

Test Mode : Mode 3: Transmit_Power by Notebook PC
 Description : Front View of Radiated Emission Test Setup



Test Mode : Mode 3: Transmit_Power by Notebook PC
 Description : Back View of Radiated Emission Test Setup



Test Mode : Mode 3: Transmit_Power by Notebook PC
 Description : Front View of Radiated Emission Test Setup (Horn)



Test Mode : Mode 3: Transmit_Power by Notebook PC
 Description : Back View of Radiated Emission Test Setup (Horn)



Test Mode : Mode 4: Transmit_Power by Adapter
 Description : Front View of Radiated Emission Test Setup



Test Mode : Mode 4: Transmit_Power by Adapter
 Description : Back View of Radiated Emission Test Setup

