

EUROPEAN STATEMENT

Hereby, Globlink Technologies Inc., declares that this 27 MHz Wireless keyboard is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC.

This device will be sold in the following EEA countries: Austria, Italy, Belgium, Liechtenstein, Denmark, Luxembourg, Finland, Netherlands, France, Norway, Germany, Portugal, Greece, Spain, Iceland, Sweden, Ireland, United Kingdom.

FEDERAL COMMUNICATIONS COMMISSION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

The manufacturer is not responsible for any radio or TV Interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Key Pad

Remove the battery cover and insert the alkaline batteries

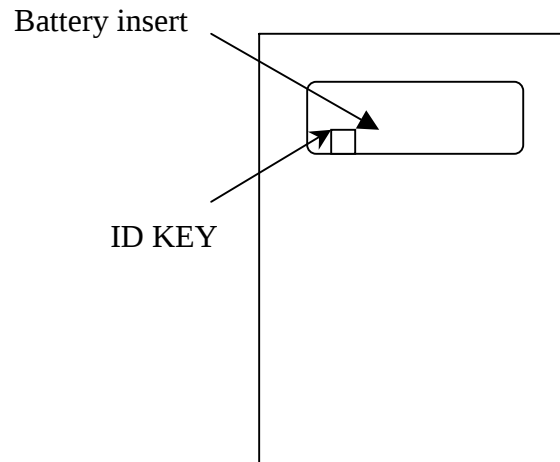



ID Code Configuration:

1. Press the setup key on the RECEIVER to unlock the receiver, the “Lock LED” light turns off. Press the setup key on the bottom of the MOUSE. when the Lock light on the receiver is lit, the mouse is set up with a random ID well and the receiver is locked.
2. Please unlock the receiver again. Press the setup key on the KEY PAD, when the Lock light on the receiver is lit, the KEY PAD is set up with a random ID well and the receiver is locked.

RF mini optical mouse and Key pad are assigned with 4096 ID's:

  To avoid potential interference, the receiver is automatically locked after configuration. Ensure the receiver is unlocked before configuration or the product will not function.

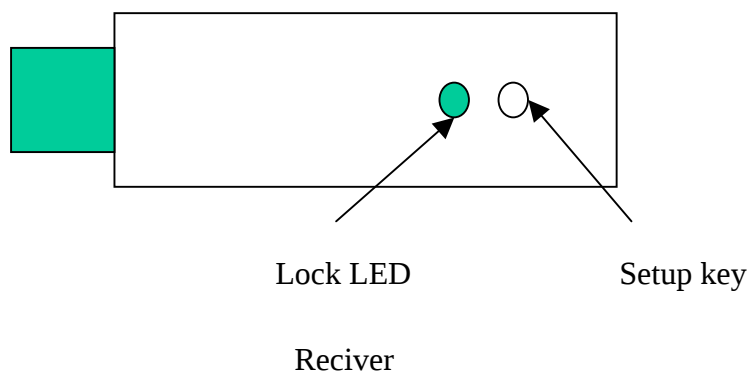

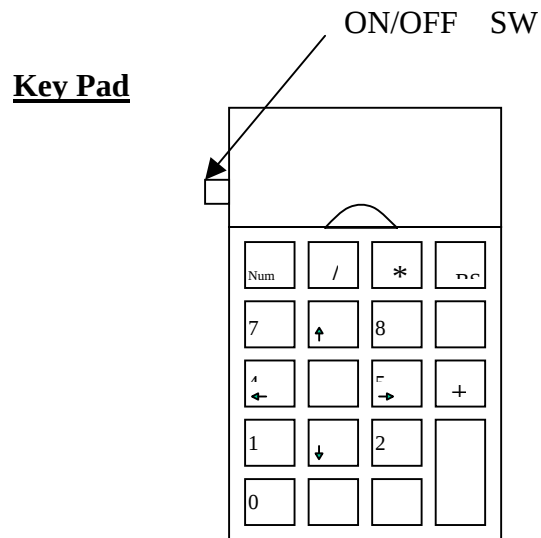

Re-install or re-insert the batteries:

Please configure ID code again every time you re-insert the batteries.

Program Resolution:

The default resolution of mini optical mouse is 800CPI, it can be programmed to 400CPI by re-inserting the batteries while pressing the wheel button of the mouse. If go back to default 800CPI, just re-insert the batteries again without pressing the wheel button of the mouse

Software Installation:

Insert the attached CD driver in your CD-Rom drive. Execute the “setup.exe” to complete the installation. After installation, please re-start your PC.

Battery low checking:

Please point the sign  showed on your computer screen to check the power situation of the battery for Mouse and Key Pad

De/Activate Number Lock of Key pad:

1. Activate “Number Lock”

- Noted: The factory default is to activate “Number Lock” function

Definition of the keys

Num Lock	/	*	BS
7	8	9	-
4	5	6	+
1	2	3	Enter
0	00	.	

2. De-activate Number Lock

Definition of the keys

Num Lock	/	*	BS
HOME	↑	PgUp	-
←		→	+
END	↓	PgDn	Enter
INS	Shift	DEL	

3. Deactivate “Num Lock”, press “Shift” and one of the key simultaneously, the definition of the keys becomes:

Num Lock	&	%	BS
(	:	)	\$
<	,	>	Web/Home
	TAB	Ins	Email
Space	Shift	=	

Warning: There is a risk of explosion if you use different types of batteries at the same time

(Such as alkaline battery plus rechargeable battery)