

LES-311T TRANSMITTER ALIGNMENT

Step	Tuning Control	Procedure
1	SW2	Switch SW2 to channel 1. Adjust L91 for proper frequency.
2	L88.L89	Adjust L88.L89 for MAX level in display
3	L93.L95	Adjust L93.L95 for MAX level in display, repeat the adjust until for further increase in display reading is obtained.
4	SW2	Switch SW2 to channel 16 . check frequency.
5	SVR1	Adjust SVR1 for 3 KHZ deviation value in the deviation meter