


## TRANSMITTER ALIGNMENT

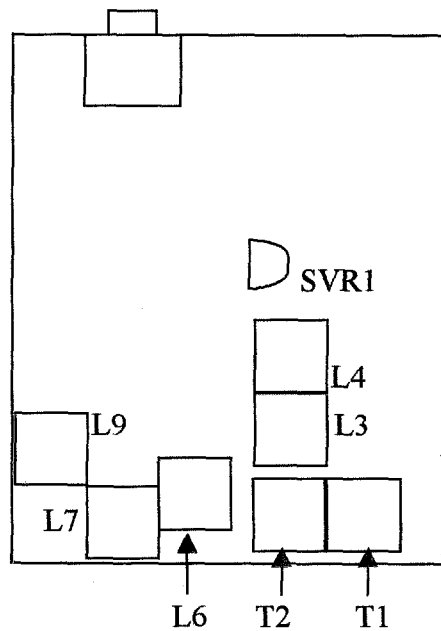

Step	Tuning Control	Procedure
1	T1	A Switch frequency switch to A channel. Adjust T1 for MAX level in display
2	T2	Adjust T2 for MAX level in display
3	L6.L7.L9	Adjust L6.L7.L9 for MAX level in display, repeat the adjust until for further increase in display reading is obtained.
4	L3	Adjust L3 for proper oscillator frequency
4	L4	Switch frequency switch to B channel. Adjust L4 for proper oscillator frequency
5	SVR1	Adjust SVR1 for 3 KHZ deviation value in the deviation meter