

## TRANSMITTER ALIGNMENT

Step	Tuning Control	Procedure
1	T1	A Switch frequency switch to A channel. Adjust T1 for MAX level in display
2	T2	Adjust T2 for MAX level in display
3	L3.L4.L5	Adjust L3.L4.L5 for MAX level in display, repeat the adjust until for further increase in display reading is obtained.
4	L16	Adjust L3 for proper oscillator frequency
5	L17	Switch frequency switch to B channel. Adjust L4 for proper oscillator frequency
6	SVR2	SET SVR2 for MAX position
7	SVR1	Adjust SVR1 for 3 KHZ deviation value in the deviation meter