


N360T INSTRUCTION MANUAL


360T FUNCTIONS

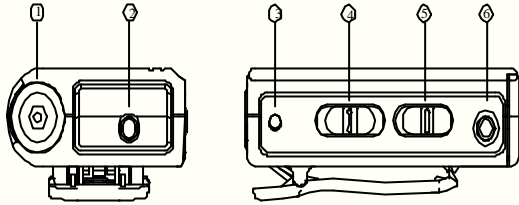

1. Gain control – Microphone sensitivity adjust
2. Mike jack
3. LED Indicator – Light during nominal operator
– Off was low battery or Power switch off.
4. Power switch – On/Mute/Off.
5. Channel Select – CHA/CHB.

Operation

1. Power switch set to OFF
2. Channel select switch set to desired channel
3. Make sure the polar of the battery and into the battery compartment as shown below.

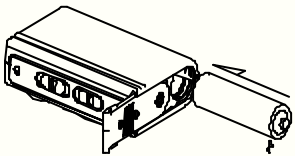

4. Plugging the microphone into the Mike jack
5. Turn ON the power switch / the LED will be light

Specification

Frequency	216.0125 – 216.9875 MHZ
Stability	0.005%
Emission Power	6mW
MAX Modulation	5KHZ
Spurious	>30dB
Power Source	1.5V
Power Consumption	80 mA

This transmitter is authorized by rule under the Low Power Radio Service (47 C.F.R. Part 95) and must not cause harmful interference to TV reception or United States Navy SPASUR installations. You do not need an FCC license to operate this transmitter. This transmitter may only be used to provide: auditory assistance to persons with disabilities, persons who require language translation, or persons in educational settings; health care services to the ill; law enforcement tracking services under agreement with a law enforcement agency; or automated maritime telecommunications system (AMTS) network control communications. Two-way voice communications and all other types of uses not mentioned above are expressly prohibited

FCC RF exposure requirements:

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

CAUTION:

Any changes of modifications not expressly approved by the grantee of this device could void the users authority to operate the equipment