



beyerdynamic

# MMX 200 wireless

GAMING HEADSET

INCLUDING

Low Latency Wireless Adapter



Quick Start Guide | 快速入门指南

EN

ZH







## CONTENTS

Safety instructions	4
Headset and dongle – operating elements	5
Connect the microphone	6
Connect the USB cable	6
Connect the jack cable	7
Charging	7
Overview light guide display	8
Overview light guide display dongle	8
Overview microphone LED display	8
Set volume	9
Microphone mute on/off	9
Augmented Mode	9
Low Latency Mode	10
Bluetooth® Mode	10
Hybrid Mode	10
Operating functions / operation	11
Replacing the ear pads	11
Maintenance	12
Firmware update	12
Service	12
Supplied accessories	12
Accessories / replacement parts	12
Disposal	13
Trademarks	13
Replace battery	13
Useful links	13

EN





Congratulations to your Meta Pick!  
We hope you will enjoy your MMX 200 wireless headset  
from beyerdynamic.

Please take some time to read carefully through  
this manual before using the product.

### ENJOY THE SOUND!

Your beyerdynamic Team

## SAFETY INSTRUCTIONS

### Risk of injury



- ▶ We would like to point out that excessively high volumes and long listening times may cause hearing damage. Hearing defects always constitute an irreversible impairment of hearing ability. If you suffer from tinnitus, do not use headphones or reduce the volume.
- ▶ When using the headset, please make sure that the volume is turned down to minimum. Adjust the volume after putting on the headset.

### Danger to life



- ▶ Headphones drastically reduce perception of external sounds. Using headphones in road traffic can be potentially dangerous. The user's hearing must not be impaired to the extent that it causes road safety risks. Please also make sure that you do not use the headphones in traffic, especially within an area of potentially dangerous machines and tools.

- ▶ Furthermore, avoid using headphones in situations where hearing must not be affected, especially when crossing a railway crossing or at a construction site.

### Liability / intended use

 
- ▶ Only use the product as described in this product manual. beyerdynamic accepts no liability for damage to the product or injury to persons caused by careless, improper or incorrect use of the product, or by use for purposes not specified by the manufacturer.
- ▶ beyerdynamic is not liable for damage to USB devices that do not comply with the USB specifications.
- ▶ beyerdynamic is not liable for damage resulting from connection interruptions due to batteries being empty or too old, or due to exceeding the Bluetooth® transmission range.
- ▶ Please also observe the relevant country-specific regulations before using the product.



## HEADSET AND DONGLE – OPERATING ELEMENTS



EN

Headset

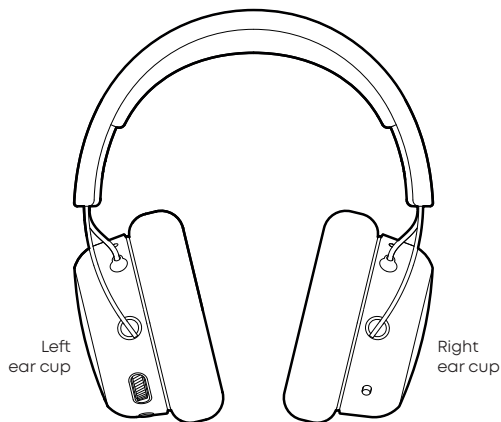

Front view

  Dongle

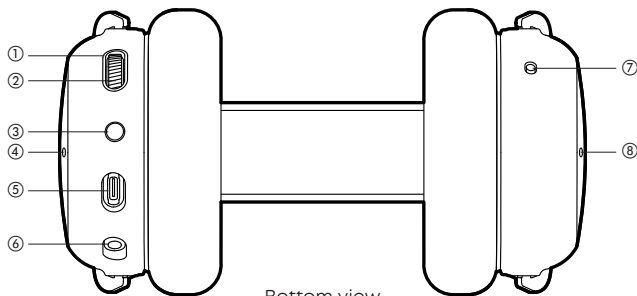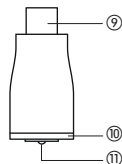

Bottom view


- ① Light guide:  
display of different states
- ② Control wheel: volume,  
augmented mode,  
microphone mute
- ③ / button: change  
between Low Latency () and  
Bluetooth® () mode
- ④ Microphone opening for telephone  
calls during gaming, left
- ⑤ USB port:  
for use with digital cable or charging
- ⑥ Microphone connection,  
4-pole mini jack (3.5 mm)
- ⑦ On-off button:  
Switch “on” before use  
Switch “off” after use
- ⑧ Microphone opening for telephone  
calls during gaming, right
- ⑨ USB connector
- ⑩ Light guide
- ⑪ Button






## CONNECT THE MICROPHONE

 - ▶ When connecting the microphone, please observe the position of the jack.

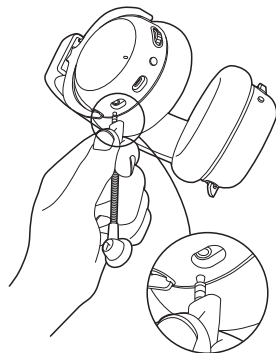


## CONNECT THE USB CABLE

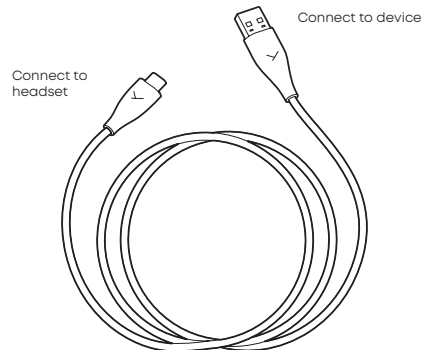 

- ▶ Connect USB-C to USB-A cable to the headset (USB-C) and the other end (USB-A) to your device (e.g. computer / console).
- ▶ For devices with USB-C ports, please use a third party USB-A to USB-C adapter or cable.
- ▶ Once the headset is connected, it will automatically install the driver. This **may** take a few seconds.
- ▶ Please check your system audio settings and select the MMX 200 wireless as input and output device, if it's not already selected.




## CONNECT THE JACK CABLE

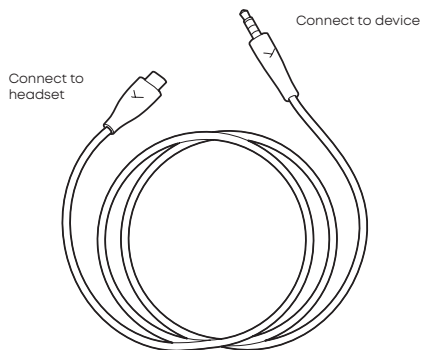 


- ▶ Connect the USB connector to your headset and the jack connector to your device. The output signal should now be played back by the MMX 200 wireless, as well as input signals that will be picked up by the microphone.
- ▶ **Please switch on the headset!** Only after switching on, the headset is also active in analogue mode.
- ▶ When connecting to a computer, please also check your system audio settings and select your computer's sound card as input and output device.
- ▶ **Caution: Connect the jack connector of the cable to a headphone socket only!** If you connect the headset to any other jack socket, the headset could be damaged.

## CHARGING

 - ▶ Connect the USB-C connector of the USB cable to the USB port on the MMX 200 wireless. Connect the USB-A connector to your device (e.g. power supply unit or computer etc.)
- ▶ During charging, the light guide pulses green.
- ▶ When the battery is low, the light guide flashes red.
- ▶ The MMX 200 wireless is supplied with a charge of approx. 60%. Please fully charge before use.
- ▶ In order to protect the battery, we recommend, that you do not charge the product continuously for more than 30 hours.
- ▶ Press the USB-C connector firmly into the headset.

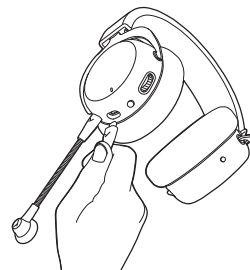

 - ▶ Pull the connector carefully to disconnect when charging is finished or if another cable is to be used.

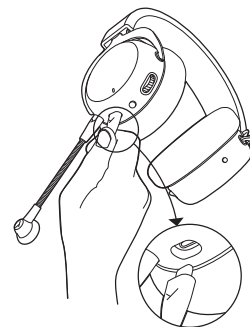

EN



## OVERVIEW LIGHT GUIDE DISPLAY

Function	Light guide display
Headset tries to connect to receiver/device	Flashing red/blue
Headset is connected to dongle	Slowly flashing orange
Headset is connected to Bluetooth® device	Slowly flashing blue
Incoming call	Flashing red/green
Augmented mode is activated	Slowly flashing turquoise
Microphone is muted	Illuminates red
Headset is being charged	Battery full = illuminates green Battery > 30% = slowly flashing yellow Battery < 30% = slowly flashing red Error = rapidly flashing red
Software update is being carried out	Flashing magenta
Headset is switched off	Illuminates yellow
Bluetooth® pairing/discovering	Alternately flashing blue/red
Bluetooth® connection lost	Rapidly flashing blue
Headset connected to Bluetooth® device when dongle is connected	Slowly flashing yellow
Bluetooth® connection lost when dongle is connected	Rapidly flashing yellow

Function	Light guide display
LC3 audio playback	Slowly flashing yellow
A2DP audio playback	Slowly flashing blue
Microphone not muted during call	Slowly flashing green

## OVERVIEW LIGHT GUIDE DISPLAY DONGLE

Function	Light guide display
Dongle connected to USB port (not paired)	Illuminates white
Headset is connected to dongle	Illuminates orange

## OVERVIEW MICROPHONE LED DISPLAY

 
Function	Microphone display
Microphone is muted	LED illuminates red
Battery is almost empty	LED is rapidly flashing red






## SET VOLUME

- ▶ To increase the volume, simply turn the control wheel upwards.
- ▶ To decrease the volume, turn the control wheel downwards.

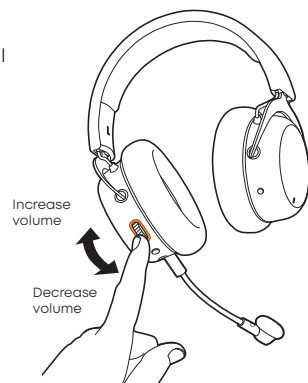

## MICROPHONE MUTE ON/OFF

 - ▶ Press the control wheel briefly to mute the microphone.
- ▶ A red light on the microphone as well as around the control wheel illuminate.
- ▶ Briefly press the control wheel again to unmute the microphone. The red light goes out.

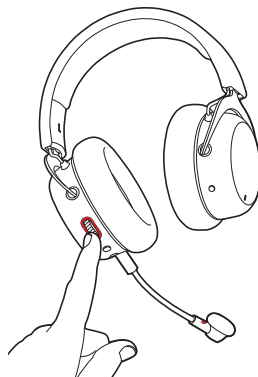

## AUGMENTED MODE

- ▶ Using the Augmented Mode, your headset works as if it were open, i.e. you can hear your voice more natural and you can hear your surroundings such as people talking to you or the doorbell.
- ▶ Press and hold the control wheel (2 seconds).
- ▶ The Augmented Mode is enabled when you hear the voice prompt. The light guide around the control wheel will illuminate turquoise.
- ▶ To disable the Augmented Mode, press and hold the control wheel again for 2 seconds. The turquoise light will go off.




EN






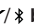
## LOW LATENCY MODE

By default, the MMX 200 wireless is supplied in **Low Latency Mode**. This mode is suitable for gaming on devices with USB connection (PC, PlayStation®, Nintendo Switch™).

- ▶ Connect the dongle to the USB connection of the device (PC, PlayStation® Nintendo Switch™).
- ▶ When the headset is in **Bluetooth® Mode**: Press the  **button twice** briefly to switch to the Low Latency Mode.
- ▶ If the supplied dongle is lost and a new dongle is to be used, it must be paired with the headset. You can find more information at: [support.beyerdynamic.de/hc](https://support.beyerdynamic.de/hc)

## BLUETOOTH® MODE

Before the headset can be used in **Bluetooth® Mode**, it must be paired with a mobile phone or another Bluetooth®-enabled device. The pairing procedure can differ between various devices.

- ▶ Please refer to the operating instructions of the device with which the headset is to be paired.
- ▶ When the headset is in **Low Latency Mode**: Press the  **button three times** in rapid succession to switch to **Bluetooth® Mode**.
- ▶ Select **MMX 200 wireless** in the pairing list on the mobile phone or other Bluetooth®-enabled device.
- ▶ Once the headset is connected, audio and telephone functions are available via the  **button**. Please refer also to the “Operating functions/operation” table.

## HYBRID MODE

In **Hybrid Mode**, it is possible to play with friends via the PlayStation® and communicate via the phone (Bluetooth®). For **Hybrid Mode**, the headset is connected to the computer via an analogue cable in **Bluetooth® Mode**. The audio signals from Bluetooth® and the analogue device are mixed 50/50.

- ▶ While the headset is in **Bluetooth® Mode**, connect it to the computer with an analogue cable.
- ▶ If the cable is disconnected from the device, the headset switches to **Bluetooth® Mode**.
- ▶ When the Bluetooth® function is disconnected, the headset switches to **analogue mode**.
- ▶ Please control the volume of the analogue source (e.g. game console) directly on the analogue device.





 
## OPERATING FUNCTIONS / OPERATION

Operating functions	Operation
Switch on	▶ Press and hold the on-off button for 3 sec.
Switch off	▶ Press and hold the on-off button for 3 sec.
Microphone mute on/off	▶ Briefly press the control wheel
Augmented Mode enable/disable	▶ Press the control wheel approx. 2 sec.
Enable Bluetooth® Mode	▶ Briefly press $\surd/\text{✳}$ button 3 x
Enable Low Latency Mode (Dongle connected)	▶ Briefly press $\surd/\text{✳}$ button 2 x
Set volume	▶ Increase volume: turn control wheel upwards ▶ Decrease volume: turn control wheel downwards
Accept / end a call (Bluetooth® Mode)	▶ Briefly press $\surd/\text{✳}$ button 1 x
Reject an incoming call (Bluetooth® Mode)	▶ Press and hold $\surd/\text{✳}$ button for 2 sec.
Play / stop music (Bluetooth® Mode)	▶ Briefly press $\surd/\text{✳}$ button 1 x
Delete pairing list	▶ Switch off headset, then press and hold the on-off button for 6 sec.
Reset to factory settings	▶ Switch off headset, then press and hold the on-off button for 16 sec.


## REPLACING THE EAR PADS

- ▶ To remove the ear pad, gently turn it counter-clockwise and pull it off.
- ▶ To attach the new ear pad, place it onto the orange housing and gently turn it clockwise until it sits tight.

- ▶ Turn counter-clockwise and pull off.

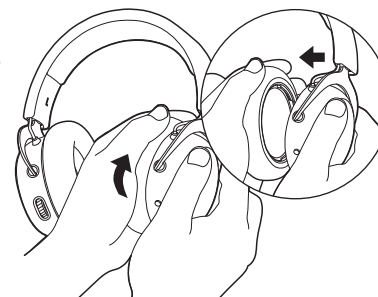

- ▶ Replace ear pad and turn clockwise.

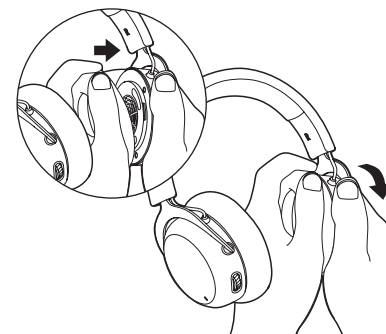 

## MAINTENANCE

- ▶ Use a soft cloth moistened with water to clean the surface.
- ▶ Make sure that **no water** enters the headset.
- ▶ **Do not** use cleaning agents **containing solvents**.
- ▶ **Never** use a **vacuum cleaner** for cleaning the headset, as this may cause irreparable damage.

## FIRMWARE UPDATE

- ▶ Firmware updates keep the MMX 200 wireless up to date with the latest technology.
- ▶ Connect the MMX 200 wireless to a computer via the USB cable.
- ▶ You can find the latest firmware for your MMX 200 wireless at: **[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)**
- ▶ First download the beyerdynamic Update Hub from the "Downloads" section and install it on your computer.
- ▶ Then start the firmware update and follow the instructions on the screen.
- ▶ Please make sure that you always keep the firmware up to date.

## SERVICE

- ▶ If you require service, please contact qualified service personnel or directly:

**beyerdynamic Service and Logistics Centre**  
**E-mail: [service@beyerdynamic.de](mailto:service@beyerdynamic.de)**

- ▶ Dismantling the headset yourself will invalidate the guarantee.

## SUPPLIED ACCESSORIES

- ▶ 1 x USB-C to USB-A cable, 2.4 m (7.9 ft), to connect the headset to a computer/console
- ▶ 1 x Microphone pop shield
- ▶ 1 x Dongle (Low Latency Wireless Adapter)

## ACCESSORIES / REPLACEMENT PARTS

- ▶ 1 x USB-C to 4-pole jack cable (CTIA), 1.2 m (3.9 ft), to connect the headset to analogue/portable devices
- ▶ More accessories and replacement equipment can be found at: **[www.beyerdynamic.com](http://www.beyerdynamic.com)**
- ▶ If you have technical questions while using the headset or need further guidance, please visit our FAQ website at: **[support.beyerdynamic.com](http://support.beyerdynamic.com)**



## DISPOSAL

- ▶ At the end of its operating life this product may not be disposed of along with normal household waste. Please take it to a designated recycling point for electric and electronic appliances.
- ▶ This is indicated by the symbol on the product, the operating instructions or the packaging.



## TRADEMARKS

The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc. and all use of these trademarks by beyerdynamic is under licence. Other trademarks and trade names are the property of the respective owners.

USB Type A, USB Type B and USB Type C are trademarks of USB Implementers.

## REPLACE BATTERY

The battery can be replaced by qualified personnel. Please contact the service department at beyerdynamic, your specialist dealer or a licensed dealer in your region.

## USEFUL LINKS

[www.beyerdynamic.com](http://www.beyerdynamic.com)

Firmware update: [www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)







## 目录

安全注意事项 .....	16
耳机和加密狗 – 操作要素 .....	17
连接麦克风 .....	18
USB 数据线连接 .....	18
插孔线连接 .....	19
充电 .....	19
光导引指示灯概述 .....	20
适配器光导引指示灯概述 .....	20
麦克风 LED 指示灯概述 .....	20
音量调节 .....	21
麦克风静音切换开/关 .....	21
增强模式 .....	21
低延时模式 .....	22
Bluetooth® 模式 .....	22
混合模式 .....	22
操作功能/操作 .....	23
更换耳垫 .....	23
保养 .....	24
固件更新 .....	24
服务 .....	24
随机清单 .....	24
配件/备件 .....	24
废弃处理 .....	25
商标 .....	25
更换电池 .....	25
访问链接 .....	25





祝贺您独具慧眼！我们希望 beyerdynamic MMX 200 wireless 头戴式耳机为您带来愉悦体验。

请您在使用本产品前花些时间仔细阅读以下信息。

**享受好声音！**

**您的 beyerdynamic 团队**

## 安全注意事项

### 受伤危险



- ▶ 请您注意，音量过高和收听时间过长可能对听力造成损害。听力损害往往表现为不可恢复的听觉障碍。若您患有耳鸣，最好避免使用耳机或在使用时降低播放音量。
- ▶ 请注意，在使用耳机时请将音量 (Volume) 调至最低。仅在将耳机佩戴妥当后调节音量。

### 生命危险



- ▶ 佩戴耳机会大大降低人对外界声音的感知能力。在道路交通环境下使用耳机存在极大的安全隐患。无论如何都应防止因耳机音效严重影响使用者的听力而造成交通事故。此外，请您注意切勿在道路交通环境下尤其是在存在安全隐患的机器和工具的作用范围内使用耳机。

- ▶ 此外，避免在会影响听力的情况下使用耳机，比如横穿铁路道口或在建筑工地上逗留时。

### 责任/合规使用

- ▶ 按照本使用说明书中的规定正确使用该产品。beyerdynamic 对用户因疏忽、不当、错误或未经制造商认可的用途而引起的产品或人身伤害不承担任何责任。
- ▶ 对于因未遵循 USB 规范导致的 USB 设备损坏，beyerdynamic 概不承担任何责任。
- ▶ 对于因电池电量耗尽或电池老化或超出 Bluetooth® 传输范围导致连接中断而造成的损失，beyerdynamic 概不承担任何责任。
- ▶ 调试前也请遵守所在各国家（地区）的具体规定注意。







 
 
## 耳机和加密狗 – 操作要素

耳机



正视图

接收器

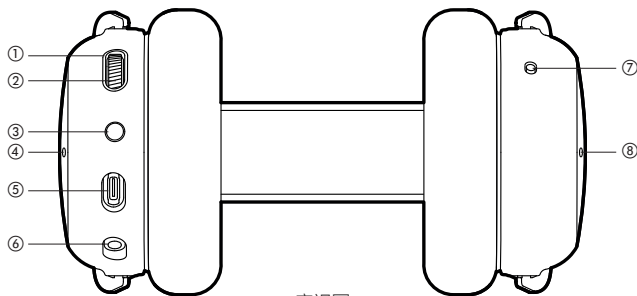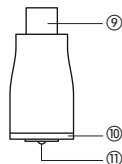

底视图

- ① 光导引指  
显示不同状态
- ② 滚轮：音量，增强模式  
麦克风静音切换
- ③ ✓/✱键：在低延时(✓)和  
Bluetooth® (✱) 模式之间切  
换
- ④ 游戏期间通话用麦克风  
插孔，左侧
- ⑤ USB 接口：插入数  
字音频线或充电
- ⑥ 麦克风插孔，4 针迷  
你插孔 (3.5 mm)
- ⑦ 开/关键：  
使用前启用。使用后关闭。
- ⑧ 游戏期间通话用麦克风  
插孔，右侧
- ⑨ USB连接器
- ⑩ 光导引指
- ⑪ 按钮


ZH-CN






## 连接麦克风

 - ▶ 连接麦克风时，请注意插头位置。

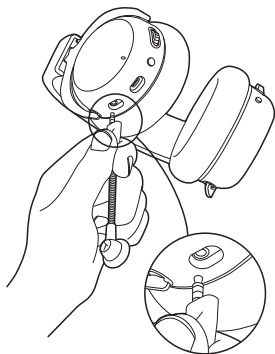

## USB 数据线连接

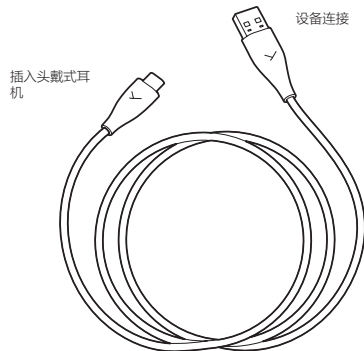 

- ▶ 将 USB-C 兼 USB-A 数据线插入头戴式耳机 (USB-C)，同时另一端 (USB-A) 插入设备 (例如电脑/游戏机)。
- ▶ 针对具有 USB 接口的设备，请使用第三方提供的 USB-A 兼 USB-C 适配器或数据线。
- ▶ 插入头戴式耳机后，将自动安装驱动程序。该过程将持续数秒。
- ▶ 若尚未进行选择，请检查您系统的音频设置并选择 MMX 200 wireless 作为输入设备和输出设备。







## 插孔线连接



  - ▶ 将 USB 插头插入头戴式耳机并将耳机插头插入设备。由麦克风录制的输出信号和输入信号，此时将由 MMX 200 wireless 进行播放。
- ▶ **请将耳机开机!** 仅在开机后，方可在模拟模式下激活该耳机。
- ▶ 连接至计算机后，请检查系统音频设置并选择计算机的声卡作为输入和输出设备。
- ▶ **注意：仅可将耳机线插头插入耳机插孔!** 如果将耳机插入其他插孔，可能会造成耳机损坏。

## 充电

- ▶ 将 USB 数据线的 USB-C 插头插入 MMX 200 wireless 的 USB 插座。将 USB-A 插头插入设备中（例如电源或电脑等）。
- ▶ 充电过程中，光导引指示灯发出绿光脉冲。
- ▶ 电池电量不足时，光导引指示灯闪烁红光。
- ▶ 该 MMX 200 wireless 交付时的电量约为：60%。使用前请充满电。
- ▶ 为保护电池，我们建议本产品连续充电不超过 30 小时。
- ▶ 将 USB-C 插头稳固按入头戴式耳机内。

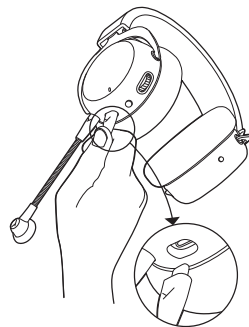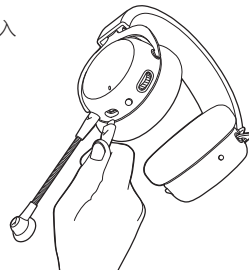

- ▶ 若结束充电过程或使用其它转接线，请小心地拔出插头。





## 光导引指示灯概述

功能	光导引指示灯
将耳机尝试连接到接收器/设备	红/蓝灯闪烁
耳机已连接至适配器	缓慢闪烁橙灯
耳机已连接至 Bluetooth® 设备	蓝灯缓慢闪烁
来电	红/绿灯闪烁
增强模式激活	青绿光缓慢闪烁
麦克风静音	亮起红灯
耳机充电	电池满电 = 亮起绿灯 电池电量 > 30% = 黄灯缓慢闪烁 电池电量 < 30% = 红灯缓慢闪烁 故障 = 红灯快速闪烁
正在进行软件更新	紫红灯闪烁
耳机关机	亮起黄灯
Bluetooth® 配对/检测	蓝灯/红灯交替闪烁
Bluetooth® 连接已断开	蓝灯快速闪烁
将适配器连接成功的耳机连接至 Bluetooth® 设备	黄灯缓慢闪烁
适配器连接成功后 Bluetooth® 连接已断开	黄灯快速闪烁

功能	光导引指示灯
音频播放 LC3	黄灯缓慢闪烁
音频播放 A2DP	蓝灯缓慢闪烁
通话时麦克风未静音	绿灯缓慢闪烁

## 适配器光导引指示灯概述

功能	光导引指示灯
适配器已连接至 USB 接口（未配对）	亮起白灯
耳机已连接至适配器	亮起橙灯

 
## 麦克风 LED 指示灯概述

功能	麦克风显示
麦克风静音	LED 亮起红灯
电池电量即将用尽	LED 红灯快速闪烁




## 音量调节

- ▶ 仅需向上转动滚轮即可提高音量。
- ▶ 仅需向下转动滚轮即可降低音量。

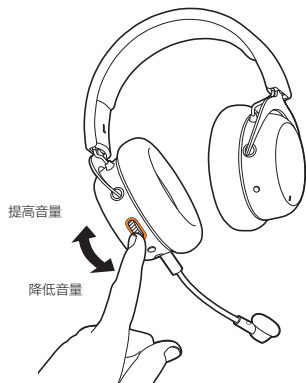


## 增强模式

 - ▶ 在“增强模式”下，头戴式耳机发声效果犹如外放。这意味着您能够更自然地听到自己以及周围环境的声音，例如攀谈对象的声音或门铃。
- ▶ 按住滚轮（2 秒）。
- ▶ 一旦语音播报响起，“增强模式”即被激活。滚轮附近的光导引发青绿光。
- ▶ 欲禁用“增强模式”需重新按住滚轮 2 秒。青绿灯熄灭。

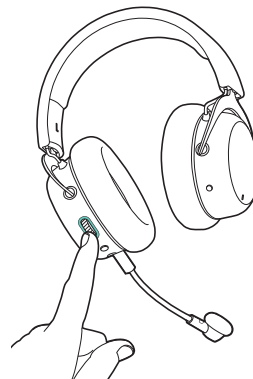

## 麦克风静音切换开/关

 - ▶ 短按滚轮以切换至静音。
- ▶ 麦克风以及滚轮周围亮起红灯。
- ▶ 重新短按滚轮，以取消麦克风的静音模式。红灯熄灭。

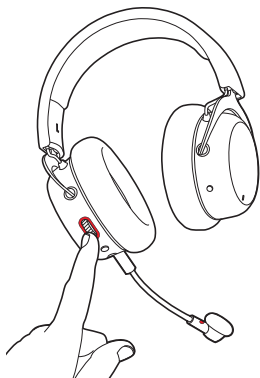



## 低延时模式

MMX 200 wireless 默认以低延时模式交付。该模式适用于借助具备 USB 接口的设备 (PC、PlayStation®、Nintendo Switch™) 玩游戏的使用情况。

- ▶ 将适配器连接至设备 (PC、PlayStation®、Nintendo Switch™) 的 USB 接口。
- ▶ 如果耳机处于 **Bluetooth®** 模式：短按**两次** **↘/✱** 键，切换至低延时模式。
- ▶ 如果随附的适配器丢失并选用新适配器，则须将其与耳机进行配对。更多详情请访问：[support.beyerdynamic.de/hc](https://support.beyerdynamic.de/hc)

## 混合模式

在**混合模式**下，可通过 PlayStation® 和手机 (Bluetooth®) 与朋友通话。

对于**混合模式**，在 **Bluetooth®** 模式下通过模拟数据线将耳机连接至电脑。**Bluetooth®** 和模拟设备的音频信号以 1:1 进行音频混合。

- ▶ 当耳机处于 **Bluetooth®** 模式时，用模拟数据线将其连接到电脑上。
- ▶ 如果将数据线从设备上拔出，则耳机切换至 **Bluetooth®** 模式。
- ▶ 如果断开 Bluetooth® 功能，则耳机切换至**模拟模式**。
- ▶ 请直接通过模拟设备上的模拟源（例如游戏机）调控音量。

## BLUETOOTH® 模式

在 **Bluetooth®** 模式下使用本耳机前，须将其与您的移动电话或者其他支持 Bluetooth® 的设备连接。针对不同设备，连接方法或有所不同。

- ▶ 请按照欲连接本产品的设备的使用说明书进行操作。
- ▶ 如果耳机处于**低延时模式**：连续按下**三次** **↘/✱** 键，切换至 **Bluetooth®** 模式。
- ▶ 在移动电话或其它支持 Bluetooth® 功能的设备的配对列表中选择 **MMX 200 wireless**。
- ▶ 耳机连接成功后，可借助 **↘/✱** 键使用音频和通话功能。另请参见“操作功能/操作”表。



 
## 操作功能/操作

操作功能	操作
开机	▶ 长按开/关键 1x (3 秒)
关闭	▶ 长按开/关键 1x (3 秒)
麦克风静音切换开/关	▶ 短按滚轮
启用/禁用增强模式	▶ 按住滚轮约 2 秒
激活 Bluetooth® 模式	▶ 短按 $\sphericalangle$ / $\sphericalangle$ 按 3 次
启动低延时模式 (适配器已连接)	▶ 短按 $\sphericalangle$ / $\sphericalangle$ 键 2 次
调节音量	▶ 扬声器: 向上转动滚轮 ▶ 音量调低: 向下转动滚轮
接受/结束呼叫 (Bluetooth® 模式)	▶ $\sphericalangle$ / $\sphericalangle$ 键: 短按 1 次
拒接来电 (Bluetooth® 模式)	▶ 按住 $\sphericalangle$ / $\sphericalangle$ 按钮 2 秒钟
音乐播放/停止 (Bluetooth® 模式)	▶ $\sphericalangle$ / $\sphericalangle$ 键: 短按 1 次
删除配对列表	▶ 耳机已关闭 按开/关键 6 秒
重置为出厂设置	▶ 耳机已关闭 按开/关键 16 秒


## 更换耳垫

- ▶ 摘掉耳垫时需要小心地沿逆时针方向转动而后将其取下。
- ▶ 将新耳垫放置在橙色外壳上, 小心地沿顺时针方向转动, 直至其固定就位。

- ▶ 沿逆时针方向转动并取下。

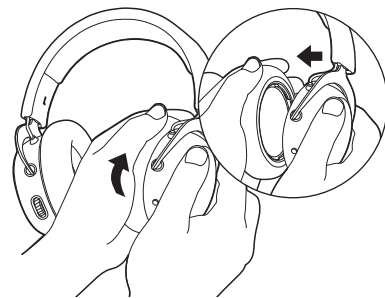

- ▶ 更换耳垫并沿顺时针方向拧紧。

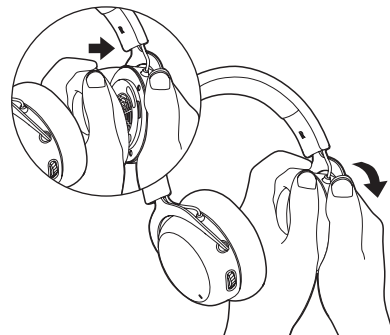 



## 保养

- ▶ 使用柔软的湿布擦拭以进行表面清洁。
- ▶ 请注意，本耳机**须防进水**。
- ▶ **请勿使用含溶剂的清洁剂**。
- ▶ **切勿使用吸尘器**进行清洁，否则会对耳机造成无法修复的损坏。

## 固件更新

- ▶ 通过固件更新可令 MMX 200 wireless 保持最新技术状态。
- ▶ 通过 USB 数据线将 MMX 200 wireless 连接到电脑上。
- ▶ 欲获取 MMX 200 wireless 固件最新版，请访问：  
**[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)**
- ▶ 首先在“下载”区下载 beyerdynamic Update Hub 软件，并将其安装到您的电脑上。
- ▶ 然后启动固件更新并按照屏幕上的说明进行操作。
- ▶ 请确保固件始终为最新版本。

## 服务

- ▶ 在需要提供相关服务时，请联系经授权的专业人员或直接联系：

**beyerdynamic 服务和物流中心邮箱**  
**[service@beyerdynamic.de](mailto:service@beyerdynamic.de)**

- ▶ 切勿自行打开耳机，否则或导致质保失效。

## 随机清单

- ▶ 1 条从 USB-C 到 USB-A 转接的数据线，长度 2.4 m，用于将耳机插入电脑或游戏机
- ▶ 1 件麦克风防喷罩
- ▶ 1 x 适配器（低延时无线适配器）

## 配件/备件

- ▶ 1 条从 USB-C 接口到 4 针插孔 (CTIA) 转接数据线，长度 1.2 m，用于将头戴式耳机连接至模拟/便携式设备
- ▶ 其它配件和备件，请访问：  
**[www.beyerdynamic.com](http://www.beyerdynamic.com)**
- ▶ 若您遇到任何技术性问题或需要进一步的信息指导，请访问我们的常见问题网站：**[support.beyerdynamic.com](http://support.beyerdynamic.com)**







## 废弃处理

- ▶ 该产品在其使用寿命终止后不得作为普通生活垃圾进行废弃处理，而须投放至电气和电子设备回收中心。
- ▶ 产品、使用说明书或包装上的标记符号已对此作出相应提示。



## 商标

Bluetooth® 文字商标和徽标为 Bluetooth SIG, Inc. 旗下注册商标，beyerdynamic 对此类标记的所有应用均已获得许可。其他品牌和商品名称均归其各自所有者所有。

USB Type-A、USB Type-B 和 USB Type-C 为 USB 实施者商标。

## 更换电池

由专业人员负责电池更换。  
请与 beyerdynamic 客服部、您的专业经销商或您所在地区的授权经销商联络。

## 访问链接

[www.beyerdynamic.com](http://www.beyerdynamic.com)

固件更新：[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)





## DE

Eine ausführliche Bedienungsanleitung in Ihrer Sprache finden Sie unter:  
[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)

## EN

You will find a comprehensive manual in your language on the internet at:  
[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)

## FR

Vous pouvez télécharger la notice d'utilisation dans votre langue respective sur:  
[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)

## ES

Podrá descargar el manual de instrucciones en su idioma desde:  
[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)

## IT

Le istruzioni per l'uso dettagliate nella vostra lingua sono reperibili al sito:  
[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)

## SV

En utförlig bruksanvisning hittar du på:  
[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)

## JA

各国の言語の取扱説明書は次のホームページからダウンロードしてください。  
[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)

## TH

สามารถดูคู่มือการใช้งานโดยละเอียดในภาษาของคุณได้ที่:  
[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)

## ZH-CN

您可以在[www.beyerdynamic.com/mmx-200-wireless](http://www.beyerdynamic.com/mmx-200-wireless)下载所需语言的操作说明书。







**beyerdynamic GmbH & Co. KG**  
Theresienstraße 8 · 74072 Heilbronn / Germany  
**Phone** +49 7131 617-300 · **E-Mail** info@beyerdynamic.de  
**www.beyerdynamic.com**

For further distributors worldwide, please go to [www.beyerdynamic.com](http://www.beyerdynamic.com)  
Non-contractual illustrations. Subject to change without notice.

EN-ZH 2 | MMX 200 wireless | (06.23)

***CREATE THE AMAZING***

