 
 


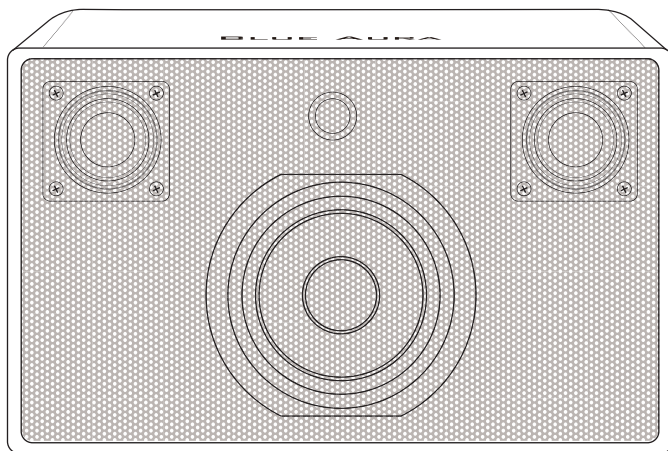

WS10i

FEATURES:

- + ALL-IN-ONE POWERED SPEAKER WITH WIRELESS RECEIVER BUILT IN
- + RANGE UP TO 25 METERS
- + NO INTERFERENCE OR DELAYS
- + USE WITH ANY SOURCE WITH LINE OUT
- + FREQUENCY RANGE: 50Hz-22KHz



BLUE AURA
PROFESSIONAL AUDIO

SPECIFICATIONS:

ACTIVE LOUDSPEAKER SPECIFICATIONS

POWERED WIRELESS

LOUDSPEAKER SYSTEM

TEXAS INSTRUMENTS DSP

& CLASS D AMPLIFICATION

WIRELESS SOLUTION – STS

TECHNOLOGY (SMSC)

 
REAR FIRING REFLEX PORT

HF UNIT (x2)


2" FULL RANGE DRIVER,
PAPER CONE WITH TITANIUM
DUST-CAP. HIGH EFFICIENCY,
LOW DISTORTION NdFeB
MOTOR
12W@THD
1% FOR EACH CHANNEL.

LF UNIT (x1)


4.5" WOOFER, PAPER CONE,
DUAL VOICE COIL.
18W*2@THD1%.
FREQUENCY RANGE:
50~22K Hz (-3dB)
CROSSOVER FREQUENCY:
250 HZ
DIMENSIONS:
W320*H200*D113.50
(W/O GRILLE)




WHAT'S IN THE BOX?

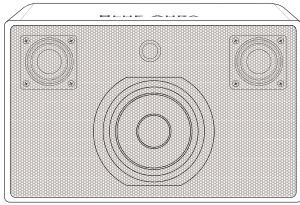 


1 X ACTIVE LOUDSPEAKER

 

1 X REMOTE CONTROL

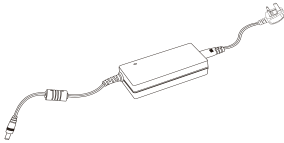 


1 X POWER CORDS/POWER SUPPLY

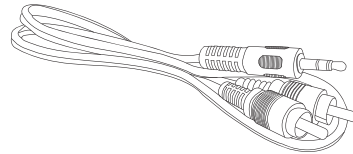 

1 X LINE OUT CABLE- (RCA – MINI JACK)



 1 X DESK STAND




1 X 3.5MM MINI JACK CABLE
(3.5MM MINI JACK – 3.5MM MINI JACK)



THE LOUDSPEAKER IS COVERED WITH A SOFT FAUX LEATHER MATERIAL. PLEASE TAKE CARE WHEN UNPACKING THE LOUDSPEAKER TO AVOID SCRATCHING OR INDENTING THE MATERIAL.

BEFORE INSTALLING THIS PRODUCT PLEASE READ ALL OF THE INSTRUCTIONS.

 THE AMPLIFIER INSIDE THE LOUDSPEAKER HAVE BUILT IN THERMAL AND SHORT CIRCUIT PROTECTION. IF AN AMPLIFIER IS DRIVEN BEYOND ITS POWER OUTPUT CAPABILITIES IT WILL PRODUCE DISTORTED SOUND WHICH MAY DAMAGE YOUR LOUDSPEAKERS. MAKE SURE YOU DO NOT LEAVE YOUR LOUDSPEAKER UNATTENDED WHEN PLAYING AND REDUCE THE VOLUME AT THE FIRST SIGN OF AUDIBLE DISTORTION. WE RECOMMEND THAT YOU KEEP ALL PACKING UNTIL YOU ARE COMPLETELY SATISFIED WITH YOUR PURCHASE. PLEASE REGISTER YOUR PRODUCT BY COMPLETING THE FORM AT THE BACK OF THIS MANUAL OR BY REGISTERING ON LINE AT WWW.BLUEAURA.CO.UK/REGISTER. IF YOUR PRODUCT WAS PURCHASED OUTSIDE THE UK PLEASE RETURN THIS CARD TO YOUR LOCAL DISTRIBUTOR.



GETTING STARTED

PLACE THE SPEAKER IN YOUR PREFERRED POSITION BUT WITHIN REACH OF A WALL SOCKET.

WITH THE MAINS SOCKET IN THE OFF POSITION, CONNECT THE A/C LEAD TO THE SPEAKER USING ONLY THE SUPPLIED MAINS LEADS AND POWER SUPPLY. TURN THE MAINS SOCKET ON.

YOUR WS10i HAS BEEN SUPPLIED WITH TWO CABLES TO ENABLE CONNECTION TO YOUR SOURCE DEVICES.

 
DEVICES WITH 3.5MM HEADPHONE OUT SOCKET (E.G. MP3 PLAYER) 3.5 - 3.5 CABLE

 
CONNECT ONE END OF THE 3.5MM TO 3.5MM CABLE TO YOUR DEVICE WITH HEADPHONE OUT AND THE OTHER END TO THE LINE IN ON THE REAR OF THE WS10i LOUDSPEAKER.

DEVICES WITH RCA SOCKETS (E.G. CD PLAYER) 3.5 TO RCA CABLE
CONNECT THE 3.5MM JACK TO LINE IN ON THE REAR OF THE LOUDSPEAKER AND THE RCA (RED/WHITE) PLUGS TO THE SOURCE DEVICE.

ONCE A CONNECTION IS MADE TO LINE IN, MUSIC CAN BE PLAYED THROUGH THE WS10i

WHERE THE (OPTIONAL) WST TRANSMITTER IS USED, ENSURE LINE IN ON THE REAR OF THE LOUDSPEAKER IS NOT CONNECTED.

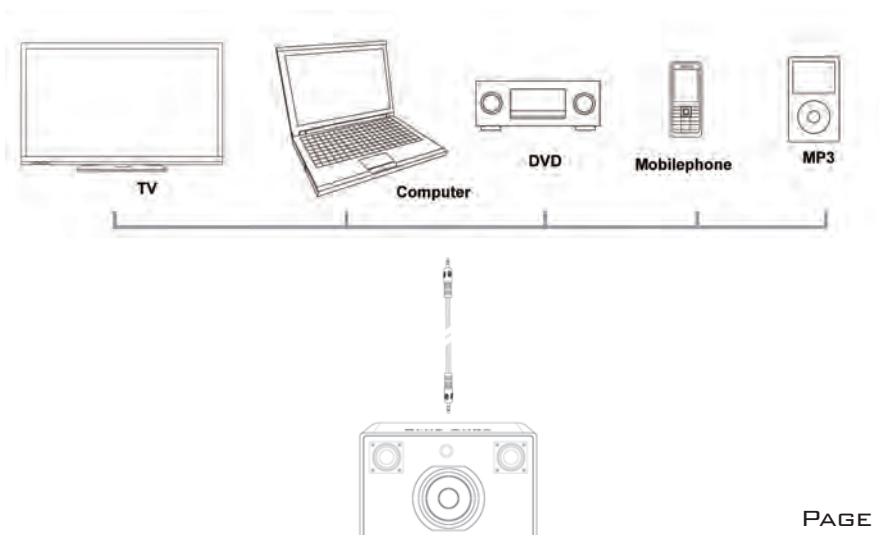



WHEN USING OPTIONAL TRANSMITTER (WST) WIRELESS MODE

WHEN THE TRANSMITTER IS CONNECTED TO A SOURCE DEVICE THE LED WILL FLASH INTERMITTENTLY

WHEN THE SPEAKER IS CONNECTED TO MAINS POWER THE LED ON THE FRONT OF THE SPEAKER WILL LIGHT UP FOR 3 SECONDS THEN POWER OFF.

USING THE REMOTE CONTROL, AIM AT THE SPEAKER AND PRESS THE POWER ON BUTTON.

THE SPEAKER WILL AUTOMATICALLY START SEARCHING THROUGH THE CHANNELS

IF A TRANSMITTER IS CONNECTED TO A SOURCE DEVICE THAT IS OPERATIONAL THE SPEAKER WILL LOCK ON, WHICH IS CONFIRMED WHEN THE SPEAKER LED AND TRANSMITTER LED ARE THE SAME COLOUR.

ONCE SET, THE VOLUME MAY NEED TO BE INCREASED WITH THE REMOTE CONTROL

 
IF THE SPEAKER DOES NOT FIND A CHANNEL (NO WORKING TRANSMITTER) THE SPEAKER WILL POWER OFF.

IN SOME CASES YOU MAY NEED TO FIND A ZONE BY PRESSING THE STATION BUTTON ON THE REAR OF THE SPEAKER. BY PRESSING THE BUTTON BRIEFLY, THE LED COLOUR ON THE FRONT OF THE SPEAKER CHANGES, PRESS THE BUTTON UNTIL IT MATCHES THE LED COLOUR ON THE TRANSMITTER. THE SPEAKER CAN BE PUT IN STANDBY MODE BY PRESSING THE RED POWER BUTTON ON THE REMOTE CONTROL. THIS WILL TURN OFF THE LED COMPLETELY. TO BRING THE SPEAKER OUT OF STANDBY PRESS THE RED POWER BUTTON AGAIN AND THE VOLUME WILL RETURN TO THE LAST SETTING USED.

IF THE SPEAKER IS TO BE LEFT UNATTENDED FOR PROLONGED PERIODS REMOVE THE PLUG FROM THE BACK OF THE SPEAKER.

IF NO SIGNAL IS BEING RECEIVED FROM A TRANSMITTER THE SPEAKER WILL GO INTO SEARCH MODE. IF NO SIGNAL IS FOUND AFTER TEN MINUTES THE SPEAKER WILL POWER OFF.

IF A SIGNAL IS FOUND WITHIN THAT TIME IT WILL LOCK ON AUTOMATICALLY. THE SPEAKER CAN BE RESET TO DEFAULT SETTING AT ANY TIME BY POWERING ON THEN HOLDING THE YELLOW MUTE BUTTON FOR MORE THAN 5 SECONDS, THE LED WILL FLASH INTERMITTENTLY THEN POWER OFF. WHEN POWERING ON THE SYSTEM IT WILL BE IN THE DEFAULT SETTING.



TO USE YOUR SPEAKERS WITH A PC OR MAC

MAC SET-UP

1. INSERT THE USB CONNECTOR FROM THE TRANSMITTER TO A FREE USB SOCKET ON YOUR MAC.
2. GO TO SYSTEM PREFERENCES AND UNDER HARDWARE CHOOSE SOUND.
3. CLICK OUTPUT IN MENU AND CHOOSE USB HEADSET.

PC SET-UP

1. INSERT THE USB CONNECTOR FROM THE TRANSMITTER TO A FREE USB SOCKET ON YOUR PC OR LAPTOP.
2. WAIT UNTIL THE SOFTWARE HAS BEEN INSTALLED, USUALLY A CONFIRMATION BEEP OR MESSAGE WINDOW ALERT.

IF THE ABOVE INSTRUCTIONS DO NOT WORK YOU MAY NEED TO DO THE FOLLOWING.

 
CLICK START BUTTON ON PC, GO TO THE CONTROL PANEL, AND CHOOSE SOUND & SOUND DEVICES UNDER PLAYBACK OF AUDIO; DEFAULT UNIT CHOOSE USB HEADSET.

IF YOU ARE STILL HAVING PROBLEMS PLEASE CONTACT SUPPORT@BLUEAURA.CO.UK.


TO USE YOUR SPEAKER WITH OTHER DEVICES (RCA CONNECTION)

THE TRANSMITTER NEEDS TO BE POWERED; BY USING THE USB CONNECTOR ON A PC FOR EXAMPLE, POWER IS PROVIDED.


TO USE THE TRANSMITTER WITH EQUIPMENT THAT DOES NOT HAVE A USB SOCKET THE MAINS ADAPTER IS REQUIRED. CONNECT THE USB CONNECTOR FROM THE TRANSMITTER TO THE USB SOCKET ON THE SUPPLIED MAINS ADAPTER. USING THE "LINE OUT" CABLE PROVIDED, PLUG THE RED AND WHITE PLUGS (RCA) INTO YOUR DEVICE WITH LINE OUT, E.G. CD PLAYER OR TV, CONNECT THE OTHER END OF THE CABLE (MINI JACK) TO THE TRANSMITTER. PLUG THE ADAPTER INTO TO A CONVENIENT WALL SOCKET AND TURN ON. PUSH THE BUTTON IN THE CENTRE OF THE TRANSMITTER TO SELECT A FREE ZONE. USING THE REMOTE CONTROL PRESS THE "STATION" BUTTON" TO FIND THE SIGNAL FROM THE NEW SOURCE EQUIPMENT.




REMOTE CONTROL

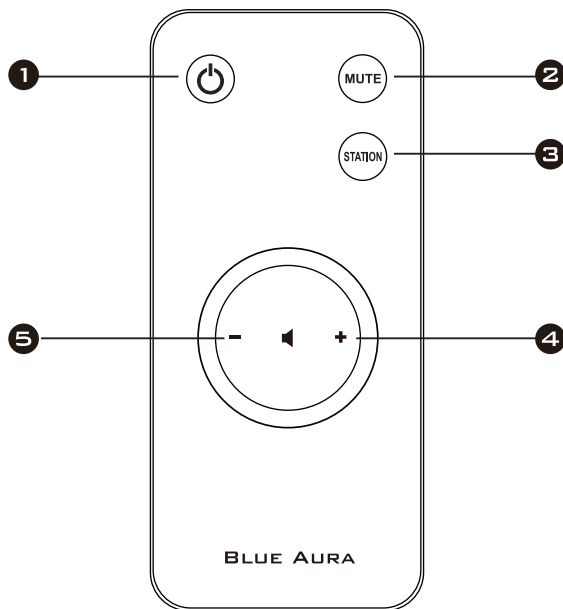 

 
- ❶ POWER ON/OFF
- ❷ MUTE
- ❸ STATION
- ❹ VOL+
- ❺ VOL-



REAR PANEL

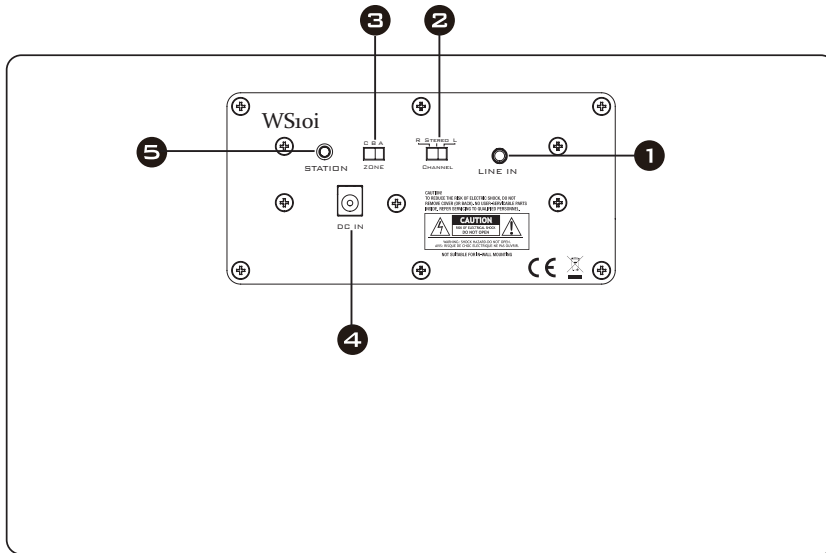 

 - 1** LINE IN
- 2** RIGHT - STEREO - LEFT SWITCH
SET TO STEREO WHEN ONE WS10i IS USED.
- 3** MULTI-ZONE SWITCH
- 4** POWER
- 5** STATION
CHANGE STATION BY PRESSING THIS BUTTON



TO USE YOUR SPEAKERS WITH MP3 DEVICES (HEADPHONE OUT)

 
PLUG ONE END OF THE SUPPLIED 3.5MM MINI JACK LEAD INTO THE TRANSMITTER AND THE OTHER END INTO THE HEADPHONE SOCKET ON YOUR DEVICE.

PLUG THE USB CONNECTOR FROM THE TRANSMITTER INTO THE MAINS ADAPTER AND PLUG THE MAINS ADAPTER INTO A CONVENIENT WALL SOCKET AND TURN ON. PUSH THE BUTTON IN THE CENTRE OF THE TRANSMITTER TO SELECT A FREE ZONE. USING THE REMOTE CONTROL PRESS THE “STATION” BUTTON” TO FIND THE SIGNAL FROM THE NEW SOURCE EQUIPMENT.

...WIRELESS SOUND FROM MULTIPLE DEVICES

BY ADDING MORE TRANSMITTERS (OPTIONAL), THE AUDIO NETWORK CAN BE SEPARATED INTO 3 HOUSE CODES ALLOWING MULTIPLE DEVICES TO BE USED TO PLAY MUSIC THROUGH YOUR WS10i SPEAKERS.


SOME EXAMPLES OF USING MULTIPLE DEVICES WITH ONE PAIR OF WS10i SPEAKERS.

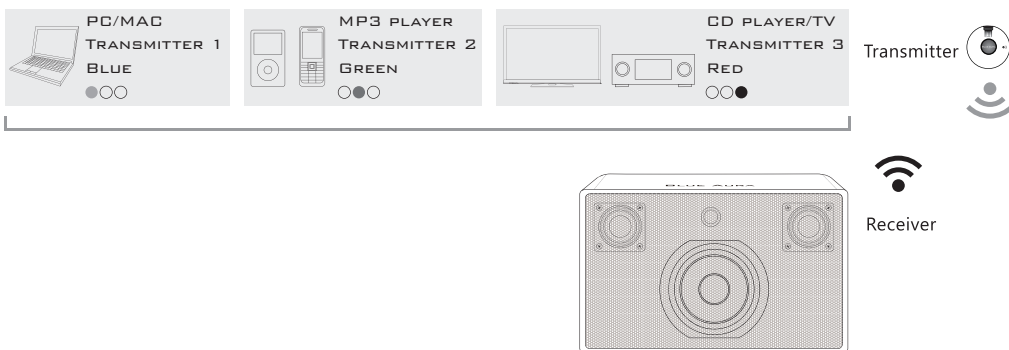


...ADD MORE WS10i SPEAKERS TO THE AUDIO NETWORK

LIMITLESS NUMBERS OF WS10i SPEAKERS CAN BE ADDED TO YOUR SYSTEM WITHIN WIRELESS RANGE OF THE TRANSMITTER. YOU CAN ADD MORE SPEAKERS TO ONE ROOM, OR ADD SPEAKERS IN SEVERAL ROOMS.

 
BY ADDING A SECOND WS10i SPEAKER, DEDICATED LEFT AND RIGHT SPEAKERS CAN BE SET TO ENABLE A PAIR OF STEREO SPEAKERS. SLIDE THE SWITCH (2) TO L ON ONE SPEAKER AND R ON THE OTHER.



COMPLETE HOME WIRELESS NETWORK SET UP.

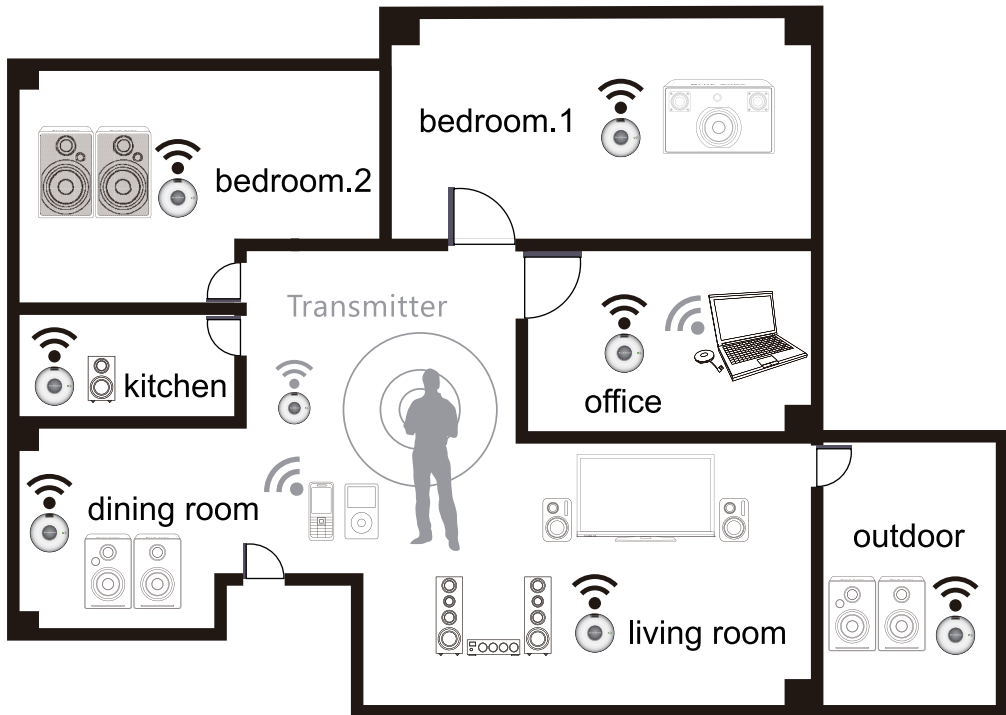 


TAKE IT SERIOUSLY EASY.

 


WIRELESS LINK



 TV Line out cable- (RCA – mini jack)

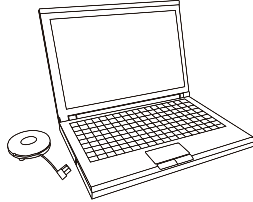


Computer USB

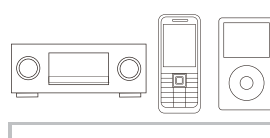 

Cd · MP3 · Mobilephone...
3.5mm Mini Jack cable

 
Step 1

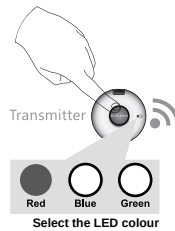

Transmitter

Transmitter


Step 2




Receiver



WS30



 
Subwoofer



Amplifier




 
Speaker

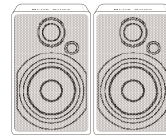

WS80



  WS10

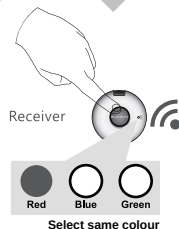


Receiver

Select same colour




Receiver

 Select same colour




OPTIONAL EXTRA'S

 
WS10i ACTIVE LOUDSPEAKERS - ADD MORE SPEAKERS TO
COMPLETE YOUR MULTI ROOM REQUIREMENTS WST TRANSMITTER
- MORE TRANSMITTERS, MORE DEVICES CAN BE USED!

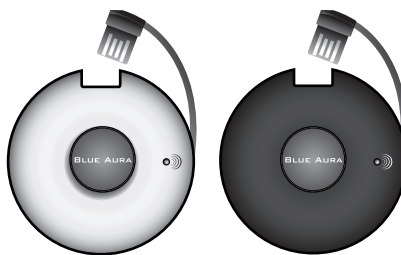

WIRELESS DONGLE

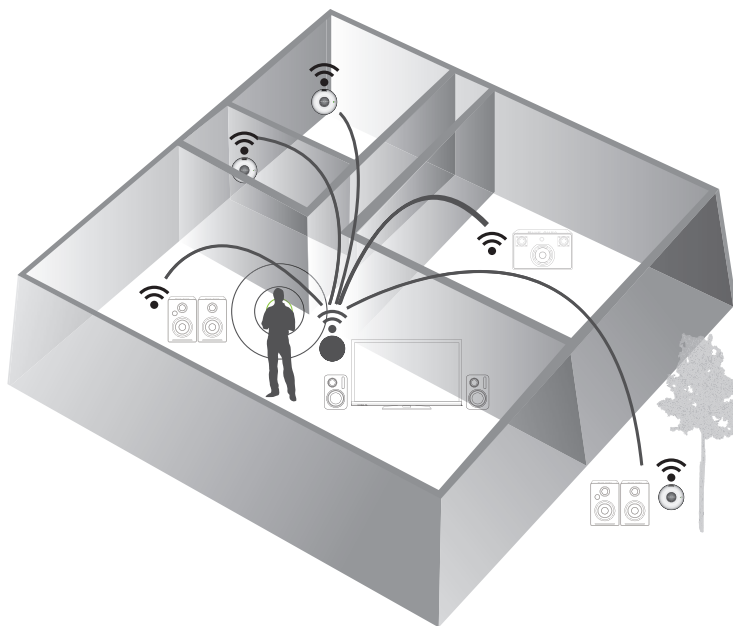 

 FOR MORE INFORMATION PLEASE VISIT
WWW.BLUEAURA.CO.UK OR CONTACT
INFO@BLUEAURA.CO.UK



PRODUCT REGISTRATION

(ADDRESS ON BACK COVER)

MODEL

SERIAL NUMBER

DATE OF PURCHASE

CUSTOMER DETAILS

NAME

ADDRESS LINE 1

ADDRESS LINE 2

TOWN

COUNTRY

POSTCODE/ZIP CODE

TELEPHONE

DEALER DETAILS

DEALER NAME

ADDRESS LINE 1

 
ADDRESS LINE 2

TOWN

COUNTY


POSTCODE

COUNTRY



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

 
WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

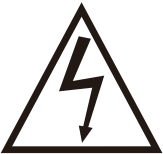

THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF INSULATED “DANGEROUS VOLTAGE” WITHIN THE PRODUCT’S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.




 THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.

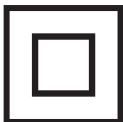

CLASS II PRODUCT

 DOUBLE INSULATED OR CLASS 2 ELECTRICAL APPLIANCES ARE PRODUCTS THAT HAVE BEEN DESIGNED IN A WAY SO AS NOT TO REQUIRE A SAFETY CONNECTION TO ELECTRICAL EARTH (THESE PRODUCTS MUST NOT HAVE A SAFETY CONNECTION TO EARTH).



IMPORTANT SAFETY INSTRUCTIONS

01. READ THESE INSTRUCTIONS.

02. KEEP THESE INSTRUCTIONS.

03. HEED ALL WARNINGS.

04. FOLLOW ALL INSTRUCTIONS.

05. DO NOT USE APPARATUS NEAR WATER.

06. CLEAN ONLY WITH A DRY CLOTH.

07. DO NOT BLOCK ANY VENTILATION OPENINGS. INSTALL IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS.

08. DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDING AMPLIFIERS) THAT PRODUCE HEAT.

09. PROTECT THE POWER CORD FROM BEING WALKED ON OR PINCHED PARTICULARLY AT PLUGS, CONVENIENCE RECEPTACLES, AND THE POINT WHERE THEY EXIT FROM THE APPARATUS.

10. ONLY USE ATTACHMENTS/ACCESSORIES SPECIFIED BY THE MANUFACTURER.

11. UNPLUG THIS APPARATUS DURING LIGHTNING STORMS OR WHEN UNUSED FOR LONG PERIODS OF TIME.

12. REFER ALL SERVICING TO QUALIFIED SERVICE PERSONNEL. SERVICING IS REQUIRED WHEN THE APPARATUS HAS BEEN DAMAGED IN ANY WAY, SUCH AS POWER-SUPPLY CORD OR PLUG IS DAMAGED, LIQUID HAS BEEN SPILLED OR OBJECTS HAVE FALLEN INTO THE APPARATUS, THE APPARATUS HAS BEEN EXPOSED TO RAIN OR MOISTURE, DOES NOT OPERATE NORMALLY, OR HAS BEEN DROPPED.

 
13. DAMAGE REQUIRING SERVICE

UNPLUG THE APPARATUS FROM THE WALL OUTLET AND REFER SERVICING TO QUALIFIED SERVICE PERSONNEL UNDER THE FOLLOWING CONDITIONS:

A. WHEN THE POWER-SUPPLY CORD OR PLUG IS DAMAGED,

B. IF LIQUID HAS BEEN SPILLED, OR OBJECTS HAVE FALLEN INTO THE APPARATUS,

C. IF THE APPARATUS HAS BEEN EXPOSED TO RAIN OR WATER,



IMPORTANT SAFETY INSTRUCTIONS

13. DAMAGE REQUIRING SERVICE

D IF THE APPARATUS DOES NOT OPERATE NORMALLY BY FOLLOWING THE OPERATING INSTRUCTIONS. ADJUST ONLY THOSE CONTROLS THAT ARE COVERED BY THE OPERATING INSTRUCTIONS AS AN IMPROPER ADJUSTMENT OF OTHER CONTROLS MAY RESULT IN DAMAGE AND WILL OFTEN REQUIRE EXTENSIVE WORK BY A QUALIFIED TECHNICIAN TO RESTORE THE APPARATUS TO ITS NORMAL OPERATION.

E. IF THE APPARATUS HAS BEEN DROPPED OR DAMAGED IN ANY WAY, AND.

F. WHEN THE APPARATUS EXHIBITS A DISTINCT CHANGE IN PERFORMANCE THIS INDICATES A NEED FOR SERVICE.

14. OBJECT AND LIQUID ENTRY.

NEVER PUSH OBJECTS OF ANY KIND INTO THE APPARATUS THROUGH OPENINGS AS THEY MAY TOUCH DANGEROUS VOLTAGE POINTS OR SHORT-OUT PARTS THAT COULD RESULT IN A FIRE OR ELECTRIC SHOCK. THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES SHALL BE PLACED ON THE APPARATUS. DON'T PUT CANDLES OR OTHER BURNING OBJECTS ON TOP OF THIS UNIT.

ALWAYS CONSIDER THE ENVIRONMENTAL ISSUES AND FOLLOW LOCAL REGULATIONS WHEN DISPOSING OF BATTERIES.

15 ALWAYS CONSIDER THE ENVIRONMENTAL ISSUES AND FOLLOW LOCAL REGULATIONS WHEN DISPOSING OF BATTERIES.


16. IF YOU INSTALL THE APPARATUS IN A BUILT-IN INSTALLATION, SUCH AS A BOOKCASE OR RACK, ENSURE THAT THERE IS ADEQUATE VENTILATION. LEAVE 20 CM (8") OF FREE SPACE AT THE TOP AND SIDES AND 10CM (4") AT THE REAR. THE REAR EDGE OF THE SHELF OR BOARD ABOVE THE APPARATUS SHALL BE SET 10 CM (4") AWAY FROM THE REAR PANEL OR WALL, CREATING A FLUE-LIKE GAP FOR WARM AIR TO ESCAPE.

17. THE POWER SUPPLY AND POWER CORD FOR THIS APPARATUS IS INTENDED FOR INDOOR USE ONLY.

18. ONLY USE THE ENCLOSED AC ADAPTOR.

DESIGNED, ENGINEERED AND SUPPORTED IN THE UK
WWW.BLUEAURA.CO.UK

PAGE | 15

 


FCC COMPLIANCE

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

 THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED




BLUE AURA
PROFESSIONAL AUDIO

BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

 THE TRANSMITTER OF THIS DEVICE HAS BEEN DESIGNED TO OPERATE WITH THE ATTACHED ANTENNAS, AND HAVING A MAXIMUM GAIN OF 1.5DBI. ANTENNAS NOT IDENTICAL AS THAT OR HAVING A GAIN GREATER THAN 1.5DBI ARE STRICTLY PROHIBITED FOR USE WITH THIS DEVICE. THE REQUIRED ANTENNA IMPEDANCE IS 50 OHMS. TO REDUCE POTENTIAL RADIO INTERFERENCE TO OTHER USERS, THE ANTENNA TYPE AND ITS GAIN SHOULD BE SO CHOSEN THAT THE EQUIVALENT ISOTROPICALLY RADIATED POWER (E.I.R.P.) IS NOT MORE THAN THAT PERMITTED FOR SUCCESSFUL COMMUNICATION




FCC RF EXPOSURE REQUIREMENTS (MPE)

TO SATISFY FCC RF EXPOSURE REQUIREMENTS, A SEPARATION DISTANCE OF 20 CM OR MORE SHOULD BE MAINTAINED BETWEEN THE ANTENNA OF THIS DEVICE AND PERSONS DURING DEVICE OPERATION. TO ENSURE COMPLIANCE, OPERATIONS AT CLOSER THAN THIS DISTANCE IS NOT RECOMMENDED.

LES ANTENNES INSTALLÉES DOIVENT ÊTRE SITUÉES DE FAÇON À CE QUE LA POPULATION NE PUISSE Y ÊTRE EXPOSÉE À UNE DISTANCE DE MOIN DE 20 CM. INSTALLER LES ANTENNES DE FAÇON À CE QUE LE PERSONNEL NE PUISSE APPROCHER À 20 CM OU MOINS DE LA POSITION CENTRALE DE L' ANTENNE.

LA FCC DES ÉTATS-UNIS STIPULE QUE CET APPAREIL DOIT ÊTRE EN TOUT TEMPS ÉLOIGNÉ D'AU MOINS 20 CM DES PERSONNES PENDANT SON FONCTIONNEMENT.

 
UNDER INDUSTRY CANADA REGULATIONS, THIS RADIO TRANSMITTER MAY ONLY OPERATE USING AN ANTENNA OF A TYPE AND MAXIMUM (OR LESSER) GAIN APPROVED FOR THE TRANSMITTER BY INDUSTRY CANADA. TO REDUCE POTENTIAL RADIO INTERFERENCE TO OTHER USERS, THE ANTENNA TYPE



AND ITS GAIN SHOULD BE SO CHOSEN THAT THE EQUIVALENT
ISOTROPICALLY RADIATED POWER (E.I.R.P.) IS NOT MORE
THAN THAT NECESSARY FOR SUCCESSFUL COMMUNICATION.

CONFORMÉMENT À LA RÉGLEMENTATION D'INDUSTRIE
CANADA, LE PRÉSENT ÉMETTEUR RADIO PEUT

 FONCTIONNER AVEC UNE ANTENNE D'UN TYPE ET D'UN GAIN
MAXIMAL (OU INFÉRIEUR) APPROUVÉ POUR L'ÉMETTEUR
PAR INDUSTRIE CANADA. DANS LE BUT DE RÉDUIRE LES
RISQUES DE BROUILLAGE RADIOÉLECTRIQUE À L'INTENTION
DES AUTRES UTILISATEURS, IL FAUT CHOISIR LE TYPE
D'ANTENNE ET SON GAIN DE SORTE QUE LA PUISSANCE
ISOTROPE RAYONNÉE ÉQUIVALENTE (P.I.R.E.) NE DÉPASSE
PAS L'INTENSITÉ NÉCESSAIRE À L'ÉTABLISSEMENT D'UNE
COMMUNICATION SATISFAISANTE.



BLUE AURA WORLDWIDE GUARANTEE

THIS ENTITLES YOU TO HAVE THE UNIT REPAIRED FREE OF CHARGE, DURING THE FIRST TWO YEARS AFTER PURCHASE, AT ANY AUTHORISED BLUE AURA DISTRIBUTOR PROVIDED THAT IT WAS ORIGINALLY PURCHASED FROM AN AUTHORISED BLUE AURA DEALER OR DISTRIBUTOR. THE MANUFACTURER CAN TAKE NO RESPONSIBILITY FOR DEFECTS ARISING FROM ACCIDENT, MISUSE, ABUSE, WEAR AND TEAR, NEGLIGENCE OR THROUGH UNAUTHORISED ADJUSTMENT AND/OR REPAIR, NEITHER CAN THEY ACCEPT RESPONSIBILITY FOR DAMAGE OR LOSS OCCURRING DURING TRANSIT TO OR FROM THE PERSON CLAIMING UNDER THE GUARANTEE.

THE WARRANTY COVERS:

PARTS AND LABOUR COSTS FOR TWO YEARS FROM THE PURCHASE DATE. AFTER TWO YEARS YOU MUST PAY FOR BOTH PARTS AND LABOUR COSTS, THE WARRANTY DOES NOT COVER TRANSPORTATION COSTS AT ANY TIME.

CLAIMS UNDER GUARANTEE

THIS EQUIPMENT SHOULD BE PACKED IN THE ORIGINAL PACKING AND RETURNED TO THE DEALER FROM WHOM IT WAS PURCHASED, OR FAILING THIS, DIRECTLY TO THE BLUE AURA DISTRIBUTOR IN THE COUNTRY OF RESIDENCE. IT SHOULD BE SENT CARRIAGE PREPAID BY A REPUTABLE CARRIER. NO RESPONSIBILITY CAN BE ACCEPTED FOR THE UNIT WHILST IN TRANSIT TO THE DEALER OR DISTRIBUTOR AND CUSTOMERS ARE THEREFORE ADVISED TO INSURE THE UNIT AGAINST LOSS OR DAMAGE WHILST IN TRANSIT.

FOR FURTHER DETAILS CONTACT BLUE AURA AT:

BLUE AURA CUSTOMER SUPPORT,
01480 477738
OR EMAIL SUPPORT@BLUEAURA.CO.UK.

PROBLEMS?

IF YOUR BLUE AURA DEALER IS UNABLE TO ANSWER ANY QUERY REGARDING THIS OR ANY OTHER BLUE AURA PRODUCT PLEASE CONTACT BLUE AURA CUSTOMER SUPPORT AT THE ABOVE ADDRESS AND WE WILL DO OUR BEST TO HELP YOU.

BLUE AURA RESERVES THE RIGHT TO CHANGE ALL SPECIFICATIONS WITHOUT NOTICE. (E & OE)



BLUE AURA
PROFESSIONAL AUDIO

BLUE AURA
PO Box 293
ST NEOTS
PE19 9EW



WS10iMANV.01