

RESTART/SYNCING INSTRUCTIONS

If the game is not responding to the controller, or if the controller's LED is on solid, it may have lost sync. Follow these steps to resync:

Step 1: Turn off the game console and turn it back on again.

Step 2: Press the A button on the controller.

Step 3: If sync has not been re-established after about 30 seconds, press and hold both the B Button and Menu Button on the controller. (This should cause the controller's LED to blink rapidly.) While still holding the B Button and Menu Button, press the Sync Button on the Game Console for 1 second, then release the B Button and Menu Button on the controller.

Wait several seconds for the controller to attempt to sync with the game console. Once the game and controller have synced, the red LED light on the controller should be blinking slower (once every 2 seconds).

If sync has still not been established, press the pin hole Button located on the back side of the Controller using the tip of a pencil or paper clip. Repeat Steps 1-3 and make sure both the controller and console have fresh batteries installed.

FCC ID: OTA61045R

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

JAKKS Pacific

ULTIMOTION
MOTION CONTROLLED VIDEO GAME