

**HAVE AN ADULT** 




**VEHICLE (X1)** 


**CONTROLLER (X1)** 

**ANTENNA (X1)** 

## BATTERY INSTALLATION

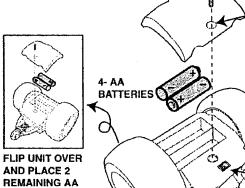


**REMOVE BATTERY COVERS WITH SCREWDRIVER** (NOT INCLUDED) ON/ OFF

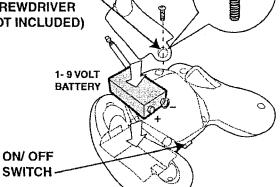


**REMAINING AA BATTERIES INTO** THE SECOND **BATTERY** COMPARTMENT.

## **OPERATION**


THIS FLY WHEELS RADIO CONTROL VEHICLE IS POWERED BY TWO SEPARATE MOTORS WHICH CAUSE THE VEHICLE TO FLIP OVER AND REVERSE DIRECTION. WHEN VEHICLE IS FLIPPED, THE CONTROLS WILL PERFORM THE OPPOSITE FUNCTION AS SHOWN BELOW.

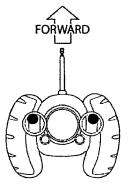


**PUSH BOTH CONTROLS UP** 

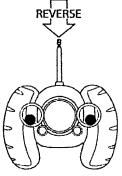

**PUSH BOTH CONTROLS DOWN** 

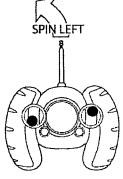


**PUSH LEFT CONTROL** DOWN. PUSH RIGHT **CONTROL UP** 

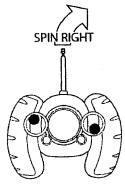


**PUSH LEFT CONTROL** UP. PUSH RIGHT **CONTROL DOWN** 

**VARY THE CONTROLS FOR ADDITIONAL FUN!** 

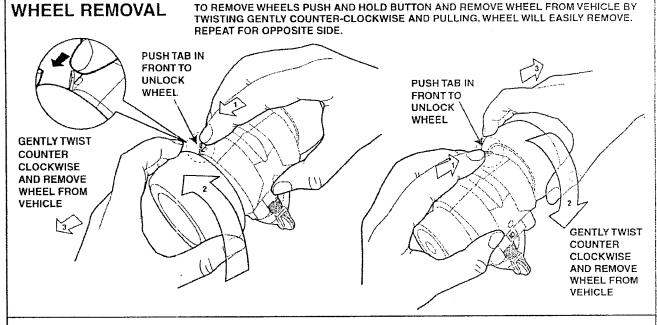

## WHEEL INSTALLATION

TO INSTALL WHEELS FIRST ALIGN TABS ON VEHICLE SIDE TO **GROOVES ON INNER WHEEL HUB (SEE DIAGRAM A). INSTALL WHEEL** ONTO VEHICLE AND GENTLY TWIST CLOCKWISE UNTIL IT LOCKS

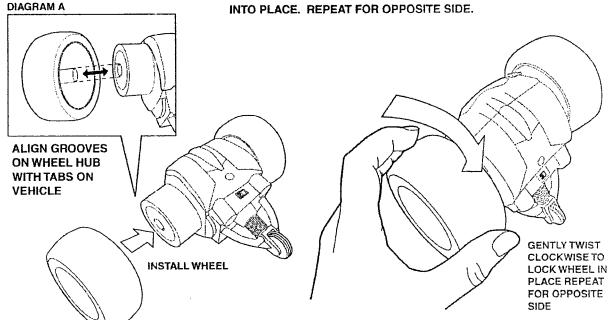

RADIO CONTROL VEHICLE IS DESIGNED TO WORK WITH ALL FLY WHEELS BRAND VEHICLE WHEELS. DIFFERENT DIAMETER WHEELS WILL AFFECT PERFORMANCE. COLLECT THEM ALL AND TRY THEM OUT!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Recommended age: 8+ Recommended for use in outdoor areas.

ROAD CHAMPS, FLY WHEELS AND JAKKS PACIFIC ARE REGISTERED TRADEMARKS OF JAKKS PACIFIC, INC.

©2005 Road Champs, Inc., a subsidiary of JAKKS Pacific, Inc., Matibu, CA 90265 1-877-875-2557 toll free.

Printed in China. Patents Pending.

## FOR BEST RESULTS:

- 1. Be aware of Radio frequencies. Avoid operating within range of another unit using the same frequency. Radio frequency is indicated on the Package and
- 2. Use fresh Alkaline Batteries. Do not mix old and new batteries. If malfunction occurs, replace Batteries. 3. Keep Antennae tightly screwed into Controller. Extend
- Antennae to maximum length when in use.

  4. Keep ON:OFF switch in "OFF" position when toy is not in use.
- 5. Remove Batteries when toy is not in use for extended
- periods of time. Operate Controller within 45 leet of vehicle.
- 7. Keep contacts clean from rust and dust.
- 8. To prevent the vehicle from overheating, a protective circuit will disable the vehicle MOMENTARILY if any function is run continuously for a protonged period of



If you experience poor performance or limited reception, batteries may need to be changed.

Only adults should install and change the batteries.

- Never mix old and new batteries or different brands of batteries.
- Never mix alkaline, standard (carbon-zinc) and redusrgeable (nickel-cadmium) betterles.
   Never use rechargeable batteries with this product.
- On not dispose of batteries in fire. Batteries may leak and explorte.

   Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.