

Contents

Vehicle x 1

5F6239F

A4 size: (balck & White) - English -Back




# **B-FURIOUS**

### Battery Requirement 1. Vehicle: 4 x 1.5V "AA/LR6" batteries ( Not Included ) 2. Transmitter: 1 x 9V/6LR61 battery ( Not Included ) Transmitter x 1 Antenna for transmitter x 1 1 x 9V/6LR61 Instruction manual x 1 4 x AA/LR6 **9V** (Not Included) (Not Included) **Battery Precaution** Alkaline batteries are recommended to be used Only batteries of the same or equivalent type as recommended are to be used Do not mix alkaline, standard or rechargeable batteries Do not mix old and new batteries or different type of batteries Non-rechargeable batteries are not to be charged If rechargeable batteries are to be used, they are only to be charged under adult supervision Rechargeable batteries are to be removed from the product before they are charged Be sure to insert batteries with correct polarities and always follow the battery manufacturer's instructions Remove all batteries from the Vehicle and Transmitter when not in use Exhausted batteries are to be removed from the product The supply terminals are not to be short-circuited 12. Dispose of batteries properly. Do not dispose the batteries in fire - it may cause them to explode or leak causing injury or damage 13. Battery installation and removal must only be done by adult Fig. 2 Fig.

## For Transmitter Battery Installation

- 1. Switch OFF the power (Fig.1) 2. Using a screwdriver (not included), remove the screw on the battery cover (Fig.2)
- 3. Open the battery compartment cover 4. Install 1 new 9V/6LR61 battery with correct polarity (+/-) as shown inside the battery compartment
- 5. Close the battery compartment cover 6. Insert the screw and securely tighten using the
- screwdriver. 7. Insert the antenna into the top of transmitter, tighten it by rotating clockwise

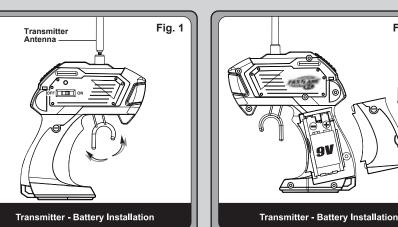


### For Vehicle Battery Installation

(viewing from top of transmitter)

- 1. Switch OFF the power (See Fig.3 A)
- 2. Using a screwdriver (not included), unscrew the screw on
- the battery compartment (Fig.4)
- 3. Take out the battery compartment. (Fig.5)
- 4. Install 4 new 1.5V "AA/LR6" batteries with correct polarities (+/-) as shown inside the battery compartment (Fig.6) 5. Insert the battery compartment into the original position (Fig.7)
- 6. Replace the battery compartment.
- 7 Tighten the screw using the screwdriver to lock battery compartment securely
  - Vehicle Fig. 3

(See Fig.3) A. ON/OFF switch.

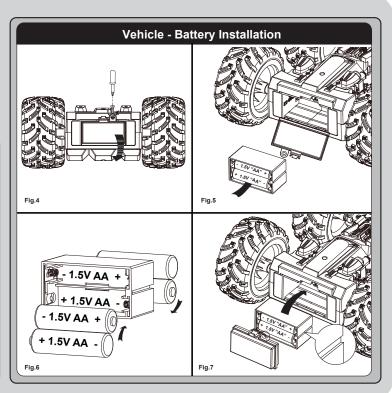


- 1. Do not attempt to disassemble the Vehicle or Transmitter

### FCC label compliance statement:

- **Environmental notes:**



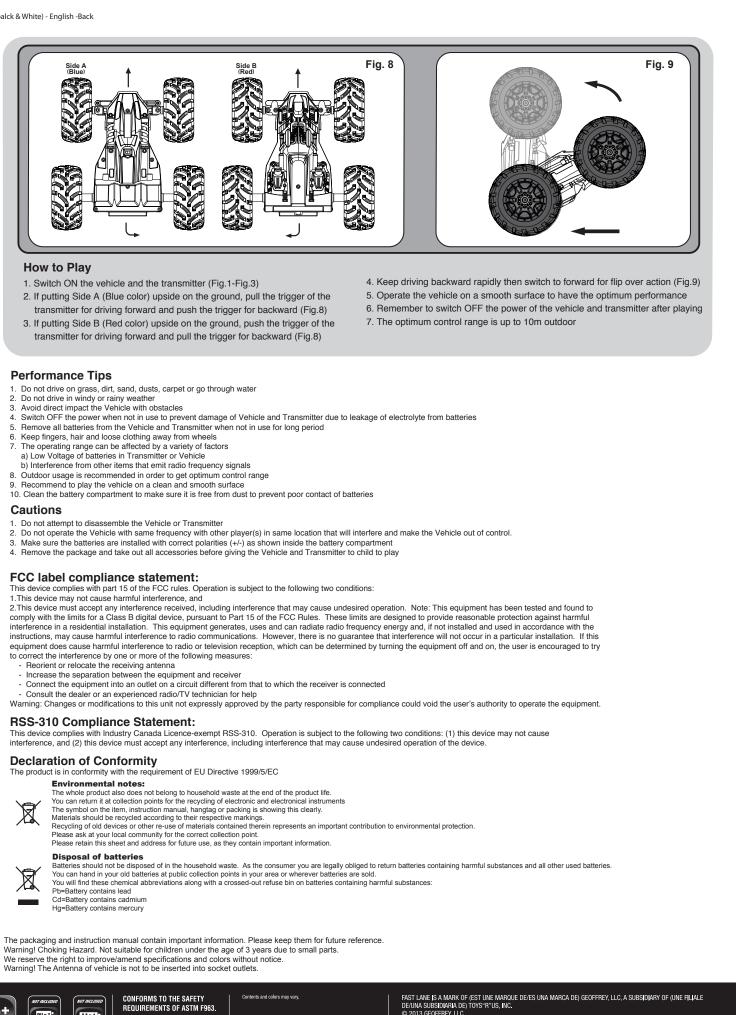

- 9. Recommend to play the vehicle on a clean and smooth surface

© 2013 GEOFFREY, LLC MADE IN CHINI (FABRIQUE EN CHINE/FABRICADO EN CHINA) DISTRIBUTED IN THE UNITED STATES BY (DISTRIBUÉ AUX ÉTATS-UNIS PAR/DISTRIBUIDO EN LOS ESTADOS UNIDOS POR) TOYS"R"US, INC. WAYNE, NJ 07470 MIPORTED BY (IMPORTÉ PAR/IMPORTADO POR) TOYS"R"US (CANADA), LTD. (LTÉE), 2777 LANGSTAFF ROAD, CONCORD, OH LAK 4M5 DISTRIBUTED IN JUSTATALI BY (IDISTRIBUÉ AUX AUSTRALIE PAR/DISTRIBUIDO EN AUSTRALIA POR) TOYS"R"US (AUSTRALIS (USTRIALE)) PTY LTD.(LTÉE), REGENTS PARK NSW 2143

www.toysrus.com www.toysrus.ca