


Battery Precaution

- 1. Alkaline batteries are recommended to be used
- 2. Only batteries of the same or equivalent type as recommended are to be used
- 3. Do not mix alkaline, standard or rechargeable batteries
- 4. Do not mix old and new batteries or different type of batteries
- 5. Non-rechargeable batteries are not to be charged
- 6. Rechargeable batteries for adult charging only
- 7. Rechargeable batteries are to be removed from the product before they are charged
- 8. Be sure to insert batteries with correct polarities and always follow the battery manufacturer's instructions
- 9. Remove all batteries from the Vehicle and Transmitter when not in use
- 10. Exhausted batteries are to be removed from the product
- 11 The supply terminals are not to be short-circuited
- 12. Dispose of batteries properly. Do not dispose the batteries in fire it may cause them to explode or leak causing injury or damage
- 13. Battery installation and removal must only be done by adult


Battery Installation

- For Vehicle (Fig. 1 and Fig. 2)
- 1. Switch OFF the power
- 2. Unscrew the screw on the battery cover.
- 3. Open the battery cover.
- 4. Install a new 9.6V battery pack with correct polarities (+/-) as shown inside the battery compartment.
- 5. Close the battery cover.
- 6. Tighten the screw on the battery cover.

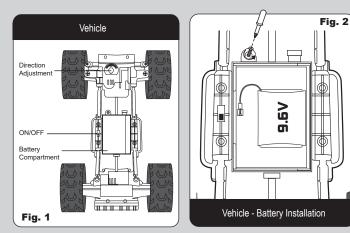

For Transmitter (Fig. 3 and Fig. 4)


- 4. Install 3 new 1.5V "AA" batteries with correct polarities

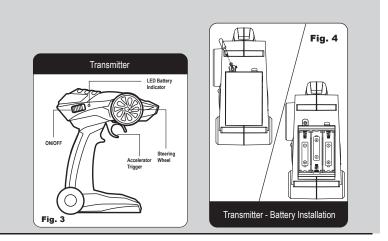

How To Bind

- 1 Turn on the Vehicle
- 3. The LED light of the Transmitter will keep flashing for the binding process, which is within 8 seconds. Do not turn off any buttons while in progress, otherwise, the process will be terminated.
- - 5. If it cannot complete within 8 seconds, please turn off both Vehicle and Transmitter and re-start the binding process.

 - Transmitter signal containing that code. 7. Please turn off both Vehicle and Transmitter and re-start all binding process if changing to another 2.4GHz Transmitter for playing.

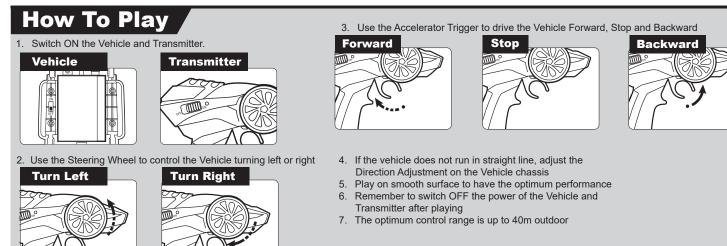

Performance Tips

- Do not drive on grass, dirt, sand, dusts, carpet or go through water
- Do not drive in windy or rainy weather
- Avoid direct impact the Vehicle with obstacles
- 4. Switch OFF the power when not in use to prevent damage of Vehicle and Transmitte due to leakage of electrolyte from batteries
- 5. Remove all batteries from the Vehicle and Transmitter when not in use for long period
- 6. Keep fingers, hair and loose clothing away from wheels 7. The operating range can be affected by a variety of factors a) Low Voltage of batteries in Transmitter or Vehicle
- b) Interference from other items that emit radio frequency signals
- 8. Outdoor usage is recommended in order to get optimum control range
- 9. Recommend to play the vehicle on a clean and smooth surface 10. Clean the battery compartment to make sure it is free from dust to prevent poor contact of batteries

FCC label compliance statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and

- 2. This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

RSS 210 Compliance Statement:

This device complies with Industry Canada Licence-exempt RSS 210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Declaration of Conformity The product is in conformity with the requirement of EU Directive 2014/53/EU

Environmental notes:



The whole product also does not belong to household waste at the end of the product life. You can return it at collection points for the recycling of electronic and electronical instruments The symbol on the item, instruction manual, hangtag or packing is showing this clearly. Materials should be recycled according to their respective markings. Recycling of old devices or other re-use of materials contained therein represents an important contribution to environmental protection.

Please ask at your local community for the correct collection point.

Disposal of batteries

Batteries should not be disposed of in the household waste. As the consumer you are legally obliged to return batteries containing harmful substances and all other used batteries. You can hand in your old batteries at public collection points in your area or wherever batteries are sold. You will find these chemical abbreviations along with a crossed-out refuse bin on batteries

containing harmful substances: Pb=Battery contains lead Cd=Battery contains cadmium Hg=Battery contains mercury

Frequency band : 2405 - 2475 MHz Maximum radio frequency power transmitted : <10 dBm

Unscrew the screw on the battery cover.

- 3. Open the battery cover.
- (+/-) as shown inside the battery compartment.

5. Close the battery cover. 6. Tighten the screw on the battery cover.

Switch OFF the power.

NO.: 84553

2. Keep pulling the trigger of the Transmitter forward then turn the Transmitter on. Do not release the trigger until the binding process completed.

4. After the wheels of the Vehicle turn left and right and the LED light of the Transmitter stops flashing, the binding process completed for playing.

6. When the binding process is done, whenever switching the Vehicle and Transmitter on and off, it searches for the code that it memorized, and will only lock on to the

Cautions

- Do not attempt to disassemble the Vehicle or Transmitter
- . Make sure the batteries are installed with correct polarities (+/-) as shown inside the battery compartment
- Remove the package and take out all accessories before giving the Vehicle and Transmitter to child to play
- The packaging and instruction manual contain important information. Please keep them for future r erence

Warning! Choking Hazard. Not suitable for children under the age of 3 years due to small parts.

We reserve the right to improve/amend specifications and colors without notice. It shall be regularly examined for damage to the cord, plug enclosure and other parts, and they must not be used until the damage has been repaired.

comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.





Conforms to the safety requirements of ASTM F963



ng, Chenghai, Shantou