



88572/88592/88602/88612/88622/88632/88682/88722/88732/88742/88782/
88792/88802/88812/88822/88832/88842/88852/88922/88932

RADIO CONTROL VEHICLE 1:12

Contents

- RC Vehicle (Vehicle) x 1
- RC Transmitter (Transmitter) x 1
- Instruction Manual x 1
- 7.2V rechargeable Battery Pack x 1
- Charger x 1
- AA Battery x 4

Battery Requirement

- Vehicle: 1 x 7.2V rechargeable battery pack
- Transmitter: 4 x AA battery



Battery Precaution

- The 7.2V rechargeable battery pack must be charged before use by utilizing the battery charger which included.
- Do not overcharge the battery pack. Do not charge for more than 6 hours.
- Do not charge the battery pack if it shows leakage, corrosion, or has loose or exposed wires or other damage.
- Do not cover the battery pack with any sort of materials while charging.
- Do not touch the battery pack when it is hot. Wait until the battery pack cools before installing it in the Vehicle and before recharging.
- Do not dispose of the battery in fire.
- Do not dismantle the battery or charger, and do not cut the battery or charger cables.
- The battery pack will be warm after charging and hot after use in a vehicle.
- The supply terminals are not to be short-circuited
- Rechargeable batteries are to be removed from the toy before being charged
- Rechargeable batteries are only to be charged under adult supervision

- Battery replacement must be only made by adults
- The transformer (charger) is not a toy
- Charge only type (700mAh Max.) rechargeable battery packs. Other types of batteries may burst causing injury to persons and damage. This power unit is intended to be correctly orientated in a vertical or floor mount position. This charger is intended to be used for charging 7.2V rechargeable battery pack with capacity 700mAh Max. It cannot be used for charging non-rechargeable batteries. Regular examination of battery charger for any damage to their cord, plug, enclosure and other parts, and that, in the event of such damage, it must not be used with the charger or battery pack charge until such damage has been repaired. Note that the AA batteries are non-rechargeable and are not to be recharged. Only batteries of the same or equivalent type as recommended are to be used. It will need replacement when transmission is poor.
- Exhausted batteries are to be removed from the product.



Battery Installation

For Vehicle (Fig. 1 and Fig. 2)

- Switch OFF the power.
- Unscrew the screw on the battery cover.
- Open the battery cover.
- Install a new 7.2V battery pack with correct polarities (+/-) as shown inside the battery compartment.
- Close the battery cover.
- Tighten the screw on the battery cover.

For Transmitter (Fig. 3 and Fig. 4)

- Switch OFF the power.
- Unscrew the screw on the battery cover.
- Open the battery cover.
- Install 4 new AA batteries with correct polarities (+/-) as shown inside the battery compartment.
- Close the battery cover.
- Tighten the screw on the battery cover.

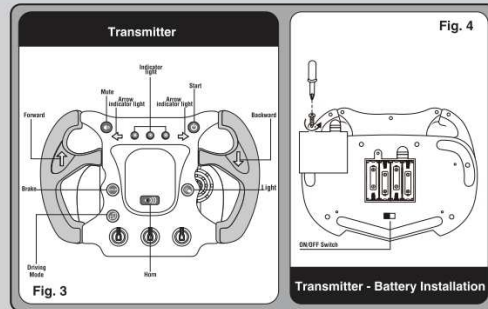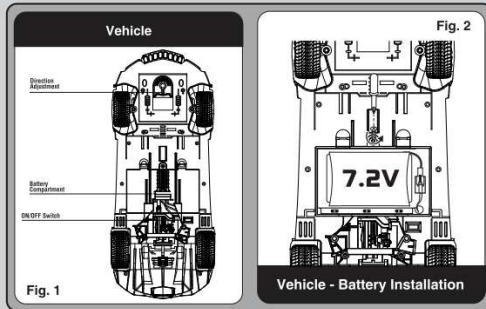

Charging the Rechargeable Battery Pack for the Vehicle:

- Connect the 7.2V rechargeable battery pack to the battery charger
- Plug the charger into the standard AC socket
- The charging time for a full charge is about 5 hours
- When charging is completed, unplug the charger from the AC socket
- Disconnect the rechargeable battery pack from the battery charger

How to Play

- Switch ON the Vehicle, the front lights of the Vehicle will be flashing.
- Switch ON the Transmitter, the indicator light (center one) of the Transmitter will be flashing.
- Touch the Start button, the indicator light (center one) of the Transmitter stop flashing, there will be engine sound and now the Transmitter is connected with the Vehicle.
- Touch the Forward button, to drive the car forward. The indicator light (left one) on the Transmitter will be lighting up, with driving sound from the Transmitter.
- Touch the Backward button, to drive the car backward. The indicator light (right one) on the Transmitter will be flashing, with backward warning sound from the Transmitter.
- Turn the Transmitter left, to drive the Vehicle to the left, the left arrow indicator light of the Transmitter will be flashing. There will be turning sound from the Transmitter.
- Turn the Transmitter right, to drive the Vehicle to the right, the right arrow indicator light of the Transmitter will be flashing. There will be turning sound from the Transmitter.
- Touch the Light button, to turn ON or OFF the lights of the Vehicle.
- Touch the Brake button, to stop the Vehicle from forward or backward, there will be a brake sound from the Transmitter.
- Touch the Mute button, to turn ON or OFF the sound of the Transmitter.
- Touch the Horn button, to activate the horn sound of the Transmitter.
- Touch the Start button again, to disconnect the Transmitter with the Vehicle. The indicator light (center one) of the Transmitter will be flashing again.
- If the Vehicle does not run in straight line, adjust the Direction Adjustment on the Vehicle chassis (Fig. 1).
- Play on smooth surface to have the optimum performance.
- Remember to switch OFF the power of the Vehicle and Transmitter after playing.
- The optimum control range is up to 20m outdoor.

Driving Mode

- The default driving mode is TABLE DRIVING, where you need to put the Transmitter on the horizontal surface, and turn the Transmitter left or right to drive the Vehicle.
- Touch the Driving Mode button, the arrow indicator lights (left and right ones) will be lighting up and now it is in MOTION SENSOR driving mode, take the Transmitter with you and simply turn it left or right like real driving.
- Touch the Driving Mode button again to switch between TABLE DRIVING and MOTION SENSOR driving mode.

Lighting Pattern of the Vehicle under the Lights on mode

- When the Vehicle goes forward, the front lights and back lights are on.
- When the Vehicle goes backward, the front lights and back lights will be flashing.
- When the Vehicle turns left, front left indicator light and back left indicator light flash.
- When the Vehicle turns right, front right indicator light and back right indicator light flash.
- When the Vehicle brakes, the front lights and back lights will be brighter.

Performance Tips

- Do not drive on grass, dirt, sand, dusts, carpet or go through water.
- Do not drive in windy or rainy weather.
- Avoid direct impact the Vehicle with obstacles.
- Switch OFF the power when not in use to prevent damage of Vehicle and Transmitter due to leakage of electrolyte from batteries.
- Remove all batteries from the Vehicle and Transmitter when not in use for long period.
- Keep fingers, hair and loose clothing away from wheels.
- The operating range can be affected by a variety of factors.
 - Low Voltage of batteries in Transmitter or Vehicle.
 - Interference from other items that emit radio frequency signals.
- Outdoor usage is recommended in order to get optimum control range.
- Recommend to play the Vehicle on a clean and smooth surface.
- Clean the battery compartment to make sure it is free from dust to prevent poor contact of batteries.

Cautions

- Do not attempt to disassemble the Vehicle or Transmitter.
- Do not operate the Vehicle with same frequency with other player(s) in same location that will interfere and make the Vehicle out of control.
- Make sure the batteries are installed with correct polarities (+/-) as shown inside the battery compartment.
- Remove the package and take out all accessories before giving the Vehicle and Transmitter to child to play.

FCC label compliance statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna
 - Increase the separation between the equipment and receiver
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
 - Consult the dealer or an experienced radio/TV technician for help

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration of Conformity

The product is in conformity with the requirement of EU Directive 2014/53/EU

Environmental notes:

The whole product also does not belong to household waste at the end of the product life. You can return it at collection points for the recycling of electronic and electrical instruments. The symbol on the item, instruction manual, hangtag or packing is showing this clearly. Materials should be recycled according to their respective markings. Recycling of old devices or other re-use of materials contained therein represents an important contribution to environmental protection. Please ask at your local community for the correct collection point.

Disposal of batteries

Batteries should not be disposed of in the household waste. As the consumer you are legally obliged to return batteries containing harmful substances and all other used batteries. You can hand in your old batteries at public collection points in your area or wherever batteries are sold. You will find these chemical abbreviations along with a crossed-out refuse bin on batteries containing harmful substances:
 Pb=Battery contains lead
 Cd=Battery contains cadmium
 Hg=Battery contains mercury

The packaging and instruction manual contain important information. Please keep them for future reference. Warning! Choking Hazard. Not suitable for children under the age of 3 years due to small parts. We reserve the right to improve/amend specifications and colors without notice.



www.kidztech.net

The trademarks, copyrights and design rights in and associated with Mercedes-Benz, and associated with Mercedes-Benz, are trademarks owned and licensed by Mercedes-Benz.
 General Motors Trademarks used under license to Kidztech Toys Manufacturing Ltd.
 Nissan Motor Co., Ltd. trademarks, design, copyrights and/or other intellectual property rights are used under license.
 Land Rover and the Land Rover Logo are trademarks owned and licensed by Jaguar Land Rover Limited.
 Porsche, the Porsche shield and the distinctive design of Porsche cars are trademarks and trade dress of Porsche AG. Permission granted. Licensed Manufacturer: Kidztech Toys Manufacturing Limited.
 KIDZTECH TOYS MANUFACTURING LTD. Room 802, 8/F., Inter-Continental Plaza, 94 Granville Road, TST East, Hong Kong. Tel: (852) 27218868 info@kidztech.net Made in China http://www.kidztech.net
 Official Licensed Product
 Ford Motor Company vTrademarks and Trade Dress used under license to KidzTech Toys Manufacturing Ltd.
 Manufactured under license from McLaren Automotive Limited. The McLaren name and logo are registered trademarks of McLaren.
 THE BUCATTI LOGO AND BUCATTI WORDMARK ARE TRADEMARKS OF BUCATTI INTERNATIONAL S.p.A. AND ARE USED UNDER LICENSE. KIDZTECH TOYS MANUFACTURING LIMITED.
 2018 CHEVROLET USED UNDER LICENSE
 Conforms to the safety requirements of ASTM F963