


## 2. User's manual (provisionally)

### REMOTE TRANSMITTER

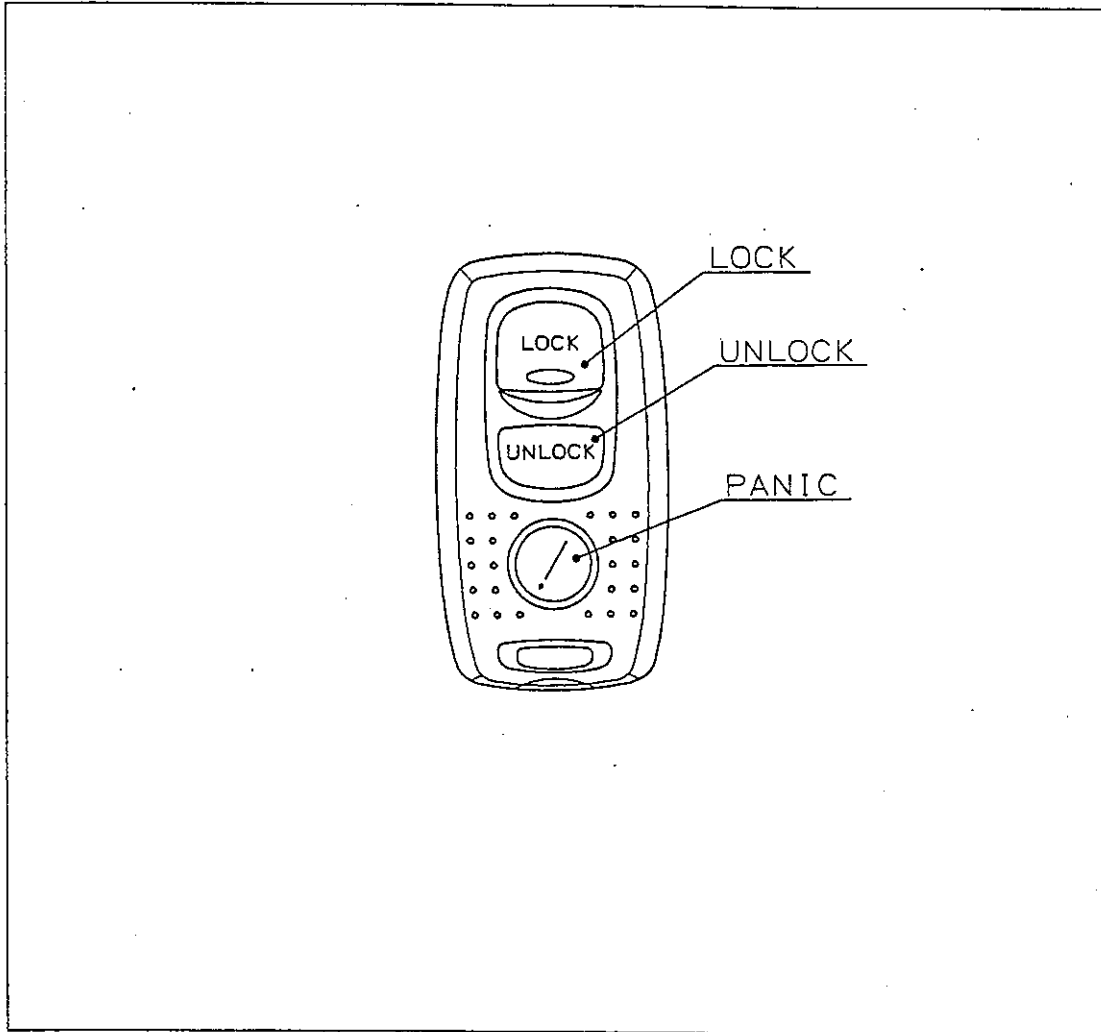

You can lock and unlock your vehicle with the remote transmitter.

#### **LOCK**

When you push the LOCK button, all the doors will lock.

You cannot lock any of the doors with the remote transmitter if any door is open or the key is in the ignition switch.

#### **UNLOCK**

When you push the UNLOCK button once, all the doors will unlock. If you unlock the doors with the remote transmitter, but do not open any of the doors within 30 seconds, the doors will automatically relocks.

You cannot unlock any of the doors with the remote transmitter if the key is in the ignition switch.

#### **PANIC**

Panic mode allows you to remotely sound's horn to attention. To activate this mode, press the PANIC button. Your vehicle's horn will beep for about 150 seconds.

To cancel Panic mode before 150 seconds, press any button on the remote transmitter.

## ! CAUTION

The remote control switch is a precision electronic device. Therefore, pay attention to the following:

- Do not impose shock on the remote control switch.
- Keep the remote control switch dry.
- Do not disassemble the remote control switch.

Your keyless entry system operates on a radio frequency subject to Federal Communications Commission (FCC) rules and Industry Canada rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation of the device.

“Complies with RSS-210 of Industry Canada.”

## FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.