

3. User's manual (Function)

[1] Keyless entry function

- Lock function

All doors and tail gate can be locked by pressing T/M lock button.

- Unlock function

All doors and tail gate can be unlocked by pressing T/M unlock button.

[2] Engine start function with Remote engine starter

Engine start/stop are possible by operating a remote control engine starter

[3] Immobilizer function

Engine start permission/prohibition controls are possible by turning ignition ON after inserting a mechanical key with a transponder into a key cylinder.

[4] TPMS function

This can warn a driver by lighting or flashing a warning lamp when tire air pressure decrease is detected.

OFCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and RSS-Gen of IC Rules.. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

“Complies with RSS-GEN of Industry Canada”