


2. User's manual

REMOTE TRANSMITTER

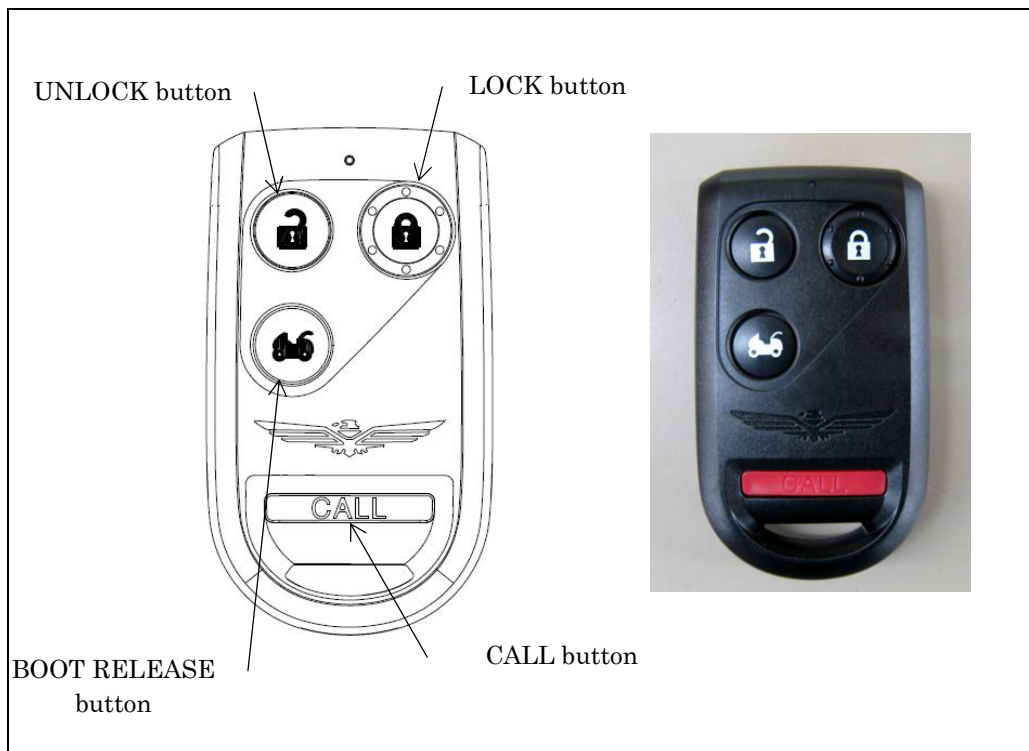

You can lock and unlock your vehicle with the remote transmitter.

You don't have to operate the receiver directly. The receiver is installed inside the vehicle and receives the signal from the remote transmitter automatically.

LOCK

When you push the LOCK button, all the doors will lock.

You cannot lock any of the doors with the remote transmitter if any door is open or the key is in the ignition switch.

UNLOCK

When you push the UNLOCK button, all the doors will unlock.

You cannot unlock any of the doors with the remote transmitter if the key is in the ignition switch.

POP UP

To open the boot, push the BOOT RELEASE button for approximately one second.

The boot will not open if the key is in the ignition switch.

CALL

Call mode allows you to remotely sound your vehicle's horn to attract attention. To activate this mode, press and hold the CALL button for about one second. Your vehicle's horn will beep for about 30 seconds.

To cancel CALL mode before 30 seconds, press any button on the remote transmitter. You can also turn the ignition switch is in ON.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.