

### 3. User's manual (Function)

[1] Keyless entry function

- Lock function

All doors and tail gate can be locked by pressing T/M lock button.

- Unlock function

All doors and tail gate can be unlocked by pressing T/M unlock button.

[2] Engine start function with Remote engine starter

Engine start/stop are possible by operating a remote control engine starter

[3] Immobilizer function

Engine start permission/prohibition controls are possible by turning ignition ON after inserting a mechanical key with a transponder into a key cylinder.

**FCC WARNING**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Le présent appareil est conforme aux la partie 15 des règles de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.