

3. User's manual (Function)

The functions of TPMS system are as below.

1. Indicate warning state function

1) When the air pressure signal received from the TPS falls below the threshold, the warning indicator LED is turned on.

2) When the received sensor battery voltage signal from the TPS falls below the threshold, the warning indicator LED is turned on.

3) When a certain amount of time has passed since the previous TPS signal was received, or when a signal cannot be received within a certain amount of time while driving, the warning indicator LED is turned on.

4) When the received sensor status signal from the TPS is an abnormal value, the warning indicator LED is turned on.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.