
2. User's manual (provisionally)

TRANSMITTER

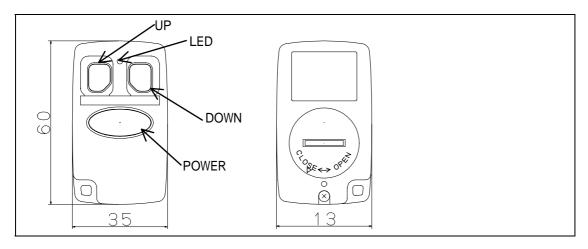

POWER

When you push the POWER, the transmitter start to be active for three seconds. When you push UP or DOWN button within these three seconds, the transmitter can transmit signal. (Mode1) If you push UP or DOWN button, it continues being active for three seconds more. (Mode2)

UP


After you push POWER button, when you continue pushing the UP button, continue transmitting UP code from the transmitter.

The target to control continues moving up.

DOWN

After you push POWER button, when you continue pushing the DOWN button, continue transmitting DOWN code from the transmitter.

The target to control continues moving down.

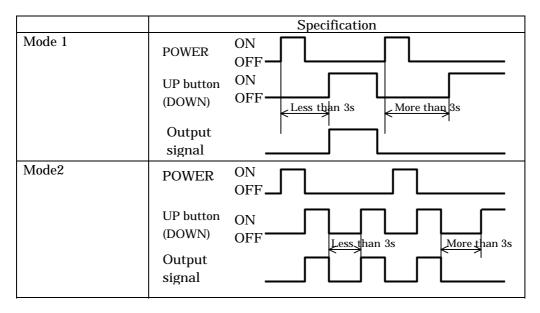

! CAUTION

The remote control switch is a precision electronic device. Therefore, pay attention to the following.

- Do not impose shock on the remote control switch.
- Keep the remote control switch dry.
- · Do not disassemble the remote control switch.

Your keyless entry system operates on a radio frequency subject to Federal Communications Commission (FCC) rules and Industry Canada rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation of the device.

"Complies with RSS-210 of Industry Canada."

NOTICE

This equipment has been tested and found to comply with the limits for a Class B device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment dose cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.