

Part # WT400

\* The WT400 remote transmitter can be programmed into any of the following receivers; Code Encryptor LX2, LT400, RA400 or WA6R. The WT400 remote can be programmed into more than one receiver if desired.

To Program into Code Encryptor LX2

ADD OR DELETE REMOTES:

TO ADD A NEW REMOTE

METHOD #1

To add a remote to your Code Encryptor LX2, disarm the panel and Enter 78738 from the keypad. The system will arm in the "STAY" mode. Press button #1 until the arm system disarms. It should take a total of four presses. THIS FEATURE IS NOT AVAILABLE ON THE MOOSE ZX200/ZX400.

METHOD #2

To add a remote to your Code Encryptor LX2 PRESS AND RELEASE the program button on the receiver. The light on the receiver will come ON.

Immediately PRESS button 1 on the new remote control THREE TIMES. The light on the receiver should go OFF, indicating the remote has been learned. If the light on the receiver stays ON, the remote has not been learned. Remove and replace the harness, wait 15 seconds while auto recognition occurs and follow these instructions again.

TO DELETE ALL REMOTES:

METHOD #1

To delete a lost or stolen remote from the Code Encryptor LX2, you must purge the entire memory. This will delete all of the current remotes. You will then have to add them back in one at a time. To purge the memory, disarm the panel. Enter 76278 from the keypad. The keypad on most panels will "beep" or the lights will turn off momentarily to confirm delete. Follow the instructions on page 14 (To Add a New Remote).

METHOD #2

To delete a lost or stolen remote from the Code Encryptor LX2, you must purge the entire memory. This will delete all of the current remotes. You will then have to add them back into memory. To purge, PRESS AND HOLD the program button, the light will come ON for four seconds, then go OFF, and finally it will come ON again, indicating that all the remotes in memory have been purged. Release the program button and follow the instructions (To Add a New Remote).

To Program into WA6R- Wireless Automator

ADD OR DELETE REMOTES:

TO ADD A NEW REMOTE

To add a remote to your Wireless Automator PRESS AND RELEASE the program button on the receiver. The light on the receiver will come ON. Immediately PRESS button 1 on the new remote control THREE TIMES. The light on the receiver should go OFF, indicating the remote has been learned. If the light on the receiver stays ON, the remote has not been learned. Remove and replace power, wait 15 seconds and follow these instructions again.

TO DELETE ALL REMOTES:

To delete a lost or stolen remote from the Wireless Automator, you must purge all remotes. This will delete all of the current remotes. You will then have to add them back into memory. To purge, remove both jumpers, PRESS AND HOLD the program button, the light will come ON for four seconds, then go OFF, and finally it will come ON again, indicating that all the remotes in memory have been purged. Release the program button and replace the jumpers. Follow the instructions (To Add a New Remote).

To Program into LT400- RF Lamp Module

ADD OR DELETE REMOTES:

TO ADD A NEW REMOTE

To add a remote to your LT400 PRESS AND HOLD the program button on the receiver. The light plug into the receiver will come ON. Continue to hold program button, the light will turn off. Immediately RELEASE button, the light will turn back on. Within 5 seconds press desired button on the new remote control ONE TIME. The light on the receiver should flicker OFF then ON, indicating the remote has been learned. If the light on the receiver stays OFF, the remote has not been learned. To add another remote follow these instructions again.

TO DELETE ALL REMOTES:

To delete a lost or stolen remote from the LT400, you must purge the entire memory. This will delete all of the current remotes. You will then have to add them back into memory. To purge, PRESS AND HOLD the program button, the light will come ON for four seconds, then go OFF, then it will come ON a second time, then off a second time indicating that all the remotes in memory have been purged. Release the program button and follow the instructions (To Add a New Remote).

Specifications:

Dimensions 4.50"x2.75"x.50"

Frequency 433.92Mhz

Temperature Range -5°F to 160°F (Indoor use only)

Battery 3VDC Mini (Part #CR2032) Replace battery once a year. Range 50+ feet

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Per FCC 15.21, you are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.