

**Tune-up procedure over the power range**

All frequency and power adjustments are set at the factory and there are no field adjustments for his product. Under digital mode, frequency is locked to the base station and controlled by CTCXO adjustments to offset any possible errors.