

Statement

Please read this guide carefully before using the device to ensure your safety and correct use of the device. For information about the device configuration, please refer to the contract or information related to the device and the seller of the device to you.

The pictures in this guide are for reference only. If some pictures do not match the actual products, please refer to the actual products. Many network functions described in this document are special services provided by network service providers (ISPs). The availability of these network functions depends on the ISPs that provide the services to you.

 
No part of this Manual shall be reproduced, excerpted, backed up, modified, transmitted, translated into other languages, or used in whole or in part for commercial purposes in any form or by any means without the permission of the Company.

Package Content

| Components Name | Quantity |
|---|----------|
| V66 MiniPOS Terminal | 1 |
| Battery | 1 |
| USB Cable | 1 |
| Power Adapter (Optional) | 1 |
| Stylus (Optional) | 1 |
| Quick operation guide (Certificate of qualification and Warranty card) | 1 |

-1-

Product Description

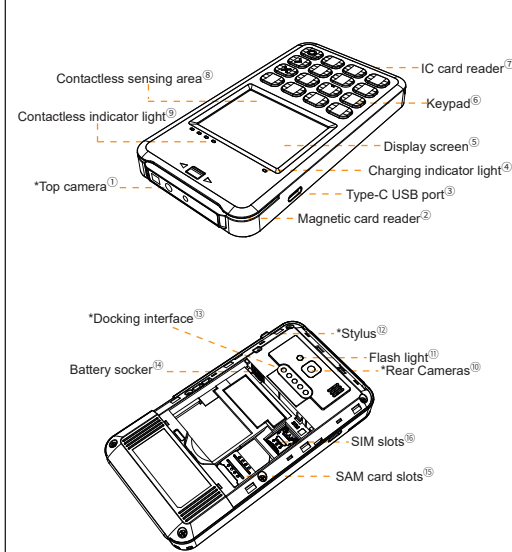

-2-

| Name | Function introduction |
|--|--|
| *Top camera ⁽¹⁾ | Used for bar and QR code scanning. |
| Magnetic card reader ⁽²⁾ | Magnetic stripe card reader, support bi-direction swiping. |
| Type-C USB port ⁽³⁾ | Used for connecting external PC or other terminals, allows to do data transmission and battery charging. |
| Charging indicator light ⁽⁴⁾ | The battery charging indicator light. |
| Display screen ⁽⁵⁾ | Optional Touch screen, display transaction and operation prompt information, etc. |
| Keypad ⁽⁶⁾ | Power on and off, input amount and code, confirm and cancel transaction etc. |
| IC card reader ⁽⁷⁾ | IC card reader. |
| Contactless sensing area ⁽⁸⁾ | Induction area for contactless IC card reading and writing. |
| Contactless indicator light ⁽⁹⁾ | The 4-color indicator provides a status indication for the operation that may vary depending on the application configuration. |
| *Rear Cameras ⁽¹⁰⁾ | Used for bar and QR code scanning. |
| Flash light ⁽¹¹⁾ | Use when the light is dim when taking pictures or scanning code. |
| *Stylus ⁽¹²⁾ | Pair with machine equipped with a resistive touch screen for electronic signature operations. |
| *Docking interface ⁽¹³⁾ | Connecting Charging Dock or Docking Station. |
| Battery socket ⁽¹⁴⁾ | Battery insertion port. |
| SAM card slots ⁽¹⁵⁾ | SAM card slots. |
| SIM slots ⁽¹⁶⁾ | SIM card slots. |

Note: Those marked with "*" in front of the module name in the above table are optional parts, which shall be subject to the specific order requirements.

-3-

Quick installation

Take out the POS terminal, lithium battery, the power adapter, and other necessary parts from the packing box, then follow the steps below for a quick installation.

1 Install the SIM/ SAM(PSAM) card:

- Open the battery cover.
- Follow the silkscreen indication and place each of the needed SIM/ SAM card separately into the right slot.

【Cautions】

- When installing or removing the SIM/ SAM card, please confirm that the device is power-offed, otherwise the cards may be damaged.
- When installing the SIM/ SAM card, the chip faces toward the internal side of the device.
- SIM/ SAM card cannot paste stickers, tags, or other materials that may change the thickness of the card to prevent non-smooth installation or disassembly.

2 Install the lithium battery:

- Open the battery cover.
- Hold the battery with the label facing upwards and place it in the battery slot in the direction of the contact point between the battery and Host.
- Close the battery cover.

-4-

Usage and Operation

1.Power on / Power off / Restart:

- Power on: press and hold the "power" key on the keyboard for 3 seconds. When the backlight of the display screen is on, the device is activating.
- Power off/ Restart: press and hold the "power" key for 3 seconds. The screen will display options for "standby/shutdown/restart mode" menu. Press the "shutdown" key to complete the shutdown; Press the "restart" key to restart the device.

 
[Cautions] When operating a transaction, the user interface is in the communication status. Please do not turn off your device.

2.Magstrip card swiping:

- When the screen prompts to swipe the card, swipe the card at the magnetic stripe reader, which is available in both directions.
- [Cautions]
 - The card must be in parallel contact with the bottom of the card slot during the swiping process, otherwise the data may be read incorrectly.
 - Swipe the card at a moderate speed.



- Contact IC card: When the screen prompts to insert the card, place the IC card chip side up and push it into the IC card holder, do not pull the card out during use.
 - [Cautions]
 - Do not pull out the card while it is being read.
 - Do not wrap the card in metal, otherwise it may cause a short circuit.




-6-

- Contactless card: When the screen prompts to touch the card, place the contactless card on top of the screen and remove the card after successful reading.
 - [Cautions]
 - Do not move the card during the card reading process.
 - Do not place more than one card in the reading area at the same time, otherwise the card will fail to be read.



-7-

 - Barcode scanning: When the screen prompts to scan, point the camera at the barcode or QR code and wait until the device beeps to indicate that the scan is complete.
 - [Cautions]
 - If the barcode is small, the scanning port should be close to the barcode, while larger barcodes should be kept at a distance from the scanning port, which will help you to identify the barcode more easily.
 - If the barcode is highly reflective, you may need to scan at an angle to identify the barcode.

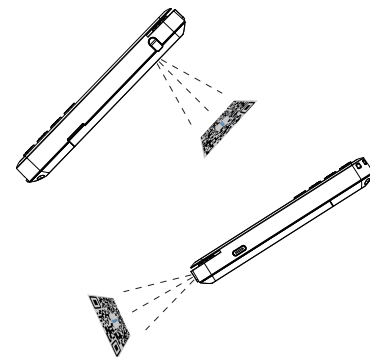

- Charge: Plug the USB into the adapter, when the power adapter is connected to the power supply, the machine will have a charging icon, a full charge takes about 3 hours.

-8-

After-sale service

If you have any questions, please contact your local dealer.

Warranty card

Product Name: _____

Product Model: _____

Warranty terms:

- Our company will provide you with high quality after-sales service.
- If the user causes product damage due to human factors, the company will charge maintenance fee when repairing.
- Please take good care of this card, which will be the warranty basis of our company.

Certificate

Inspector: _____

Date: _____

-9-

Aisino Vanstone Electronic (Beijing) Co., Ltd.

Address: 3F, No.2 Building, Aisino Corporation Park 18A, Xingshikou Road, Haidian District, Beijing, China 100195.
Email: info@vanstone.com.cn
Factory Name: Huizhou Vanstone Electronic Co., Ltd.
Factory Address: 4F, No.12 Building, Aerospace Science and Technology Industrial Park, No.51, Zhongkai Road, Huizhou City, Guangdong Province, China 516006.
Website: https://www.vanstone.com.cn/en

-9-

Troubles and Troubleshooting

| Troubles | Troubleshooting |
|---|---|
| Failing to turn on the device when pressing the power key | 1. The battery is exhausted and cannot be recharged. Please change the battery. 2. The battery volume is low. Please recharge the battery. |
| Display screen shows error message about network or service | 1. The device may lost the ability of receiving signal when you are in a place where the signal is weak or reception is bad. Please try to relocate and try it again. 2. Some of the options may not be able to use because of the lack of reservation. Please contact your service providers for more information. |
| Touch screen slow or incorrect reaction | If the device has a touch screen, and the screen reaction is incorrect, please try with the following options: 1. Take off the protective film on the screen because it may prevent the device recognize input correctly. We do not recommend to use any type of protective films for touch screens. 2. Please ensure that the screen is clean without greasy dirt. Please keep fingers dry and clean when touching the screen. 3. Please restart the device to solve any type of temporary software errors. 4. If the screen is scratched or damaged, please contact the agent or distributor selling the device to you. |

| Troubles | Troubleshooting |
|--------------------------------------|---|
| Short standby duration | 1. Please turn off some functions for saving power when do not using them, such as Bluetooth/WiFi/Data service, and etc. 2. Turn off not-in-use applications on the backstage will help to save power. |
| Cannot find another Bluetooth device | 1. Please ensure that Bluetooth and wireless functions have been turned on. 2. Please ensure that the connected device has turned on its Bluetooth and wireless functions. 3. Please ensure that the POS terminal and the connected device are within the maximum Bluetooth range of 10 meters. |

If the problem remains the same, please contact customer service.

Matters need attention

- Unauthorized disassembly of this device will cause the built-in security key to be destroyed resulting in unusable
- If the power adapter plug or power cord is damaged, please do not use them in case of electric shock or fire.
- Please do not touch power cord with wet hand or pull out the power adapter like pulling power cable.
- Please do not touch the device and power adapter with wet hand in case of short circuit, malfunction, or electric shock.
- Please stop using the power adapter and contact sales representatives for exchanging if the power adapter is caught in the rain, getting wet, or affected with damp seriously.

-10-

- The charge must be certified by local regulations and meet the charging specifications of the device.
- If the device has to connect USB ports, please ensure that the USB ports has USB-IF identification, and its performance is qualified with the USB-IF requirements.

Operating environment

- Do not use the device during thunderstorms. Otherwise, the device may fail or you could get an electric shock.
- Keep the device away from rain, moisture and acid liquids that corrode circuit boards.
- Do not store or use the device in dusty or dirty places.
- Do not store the device at high temperature. High temperature shortens the life of electronic devices.
- Do not place the device in a too cold environment. When the temperature of the device rises, moisture may form inside the device, which may damage the circuit board.
- Please do not disassemble the device without permission. Non-professional operation may damage the device.
- Do not touch the screen with pens, pencils or other sharp objects.
- Do not strike, throw, step on, or subject batteries to severe physical shock.

-11-

Accessories requirements

- Please use manufacturer-authorized batteries, power adapters and other accessories. Use of unauthorized or incompatible accessories may result in fire, explosion or other hazard.
- The usage of unauthorized accessories will result in the violation of the warranty provisions or local relevant provisions, and may cause safety accidents. To obtain authorized accessories, contact the sales agent or distributor who sold the devices to you.

Charger safety

- If the power adapter plug or usb cable is damaged, do not use it to avoid electric shock or fire.
- Do not touch the device and power adapter with wet hands to avoid short circuit, device failure or electric shock.
- When charging the device, the power socket should be near the device and easily accessible. The charging area of the device must be kept away from debris, combustible materials or chemicals.
- Disconnect the charger from the device and the power socket when the battery is fully charged. Disconnect the power cord when you are not charging the device.
- Do not charge for a long time unattended.
- Do not strike, throw, step on, or subject the charger to severe physical shock. If the charger cover is damaged, contact the seller who sold the device to you to get it replaced.

-12-

Battery safety

- Do not short circuit batteries, do not let metal objects or other conductive objects be in contact with the battery terminals.
- Do not crush, puncture, dismantle, bend or cut the batteries.
- Do not insert foreign bodies into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Do not place or store the battery in high temperature environment.
- Do not put the battery in water.
- If there is a battery fluid leakage, avoid contact with eyes or skin. In case of contact with eyes or skin, rinse immediately with plenty of water and seek medical advice.
- Do not use damaged batteries.
- When the standby time gets shorter than normal, please replace the battery.

Environmental protection and resource recovery
This product uses lithium batteries. If your country has regulations, be sure to dispose old batteries in the right way.

Cautions:
There will be a danger of explosion using the wrong model of battery. The battery must be disposed in accordance with the instructions.

-13-

FCC compliance statement

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.

-14-

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

 
FCC SAR statement

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA).
- These requirements set a SAR limit of 4.0 W/kg averaged over ten grams of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the limbs.

-15-

Aisino Vanstone Electronic (Beijing) Co., Ltd.

Quick Operation Guide V66 MiniPOS Terminal

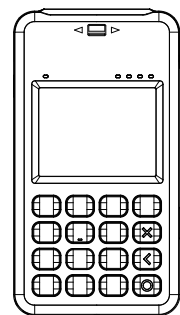

The pictures and descriptions in this guide are for reference only, please prevail in kind.

-15-