


SETUP PHOTOS

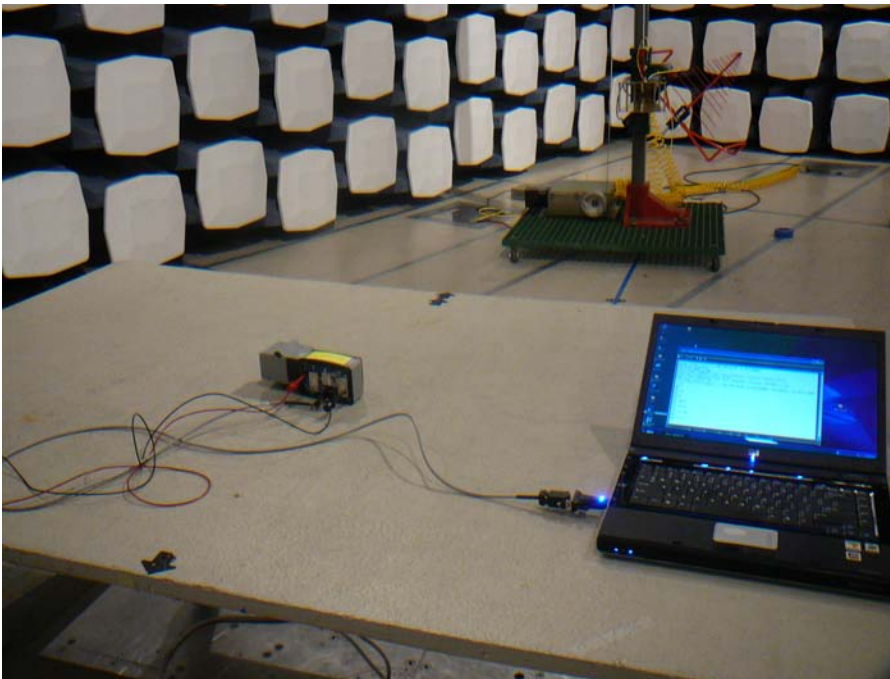

NOTE: Laptop and serial cable were removed after EUT parameters were set and the EUT was transmitting continuously at the desired channel and power.