

SHOW BOX MINI




ATTACH YOUR RECEIPT HERE	
Serial Number	Purchase Date



PACKAGE CONTENTS



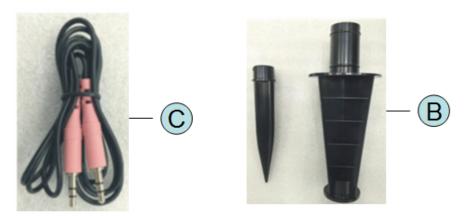


PART	DESCRIPTION	QUANTITY
А	Show box mini	1
В	Ground stake	1
С	Audio cable	1



A PRODUCT FUNCTION

The show box mini enables the user to plug in lights, trees and yard decorations, connect your favorite music, and select from 9 functions to create your very own light and sound show.

Introduction of mini show box

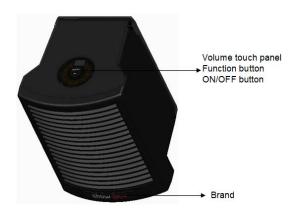



- 1. There are 3 outlets behind the mini show box for plugging in.
- 2. Touch panel, manual operation:
 - Choose different light show mode.
 - LED display, indicate different light show mode.
 - Volume adjustment.
- 3. The mini show box has Wi-Fi function, you can control mini show box through smart mobile devices App.
 - Deliver the music on the smart mobile devices to the mini show box. The music will play on the mini show box.
 - Turn ON/OFF the mini show box.
 - Choose different light show mode.
 - Choose different timer (choose the working time of mini show box).
 - Control the power of 3 outlets individually as power output.



A OPERATION INSTRUCTIONS

The mini show box needs to be plugged into a power source. It can be plugged into a wall socket directly or into a power cord.

Note: always use UL approved power cords with outdoor rating GFCI outlet, when plugging in your lights, trees and yard décor.

Plug 3 different combinations of lights, trees, and decorations into the 3 outlets on the back of show box. Please make sure the power consumption (Watts) of the each combination is under the max Watts limitation. When the power supply is on, turn on the power switch on the back of show box. The LED display panel shows "- -"



Press the Function Button on mini show box panel.

The LED display panel shows "00"

The 3 different receptacles turn on one time sequentially, then all turn on.

2. There are 8 functions of programmed light show modes. Press the Function Button on show box panel to select.

Function 1-7: LED Display panel shows "01-07"

Function 8: Lights dance along with the melody of music.

- 3. Press the ON/OFF Button power off.
- 4. Line in mode: Deliver the music to the mini show box via the audio cable. The light show mode automatically changes to function 8 (LED display panel shows "08")
- 5. During Line in mode, the Wi-Fi from smart mobile devices cannot be used to transmit music.



▲ SAFETY INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, operate or install the product.

- 1. When in the mode of light & sound show (Light of output plug dances along with music), the maximum output amperage of each plug is 2.5A.
- 2. When using remote control to control the power (using phone app), the output amperage of each output plug is 2.5A(maximum).
- 3. **CAUTION** Risk of Fire. Not for permanent installation. Use only with a total of 10.2 Ampere maximum lighting products. Do not install or use this product for more than a 90-day period.
- 4. If using lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (push-in) lamps to this cord set.
- 5. If using an Outdoor Seasonal Use Cord Connected Wiring Device for an extended period of time (greater than 90 days) please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a licensed electrician for proper installation of permanent wiring.
- 6. SUITABLE FOR INDOOR/OUTDOOR USE STORE INDOORS WHILE NOT IN USE.
- 7. CAUTION: PLUG INTO GROUND FAULT PROTECTED RECEPTACLE ONLY.
- 8. After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product.

Estimated Assembly Time: 20 minutes

No tools required for assembly.

ASSEMBLY INSTRUCTIONS

 Assemble the ground stake. (Only if need to use the ground stake.)





2. Choose a location of installation in your yard.

Insert the ground stake into ground stake jack of show box at the bottom of show box mini.

Insert the ground stake with mini show box into the ground.



Note: Plug the power cord of show box to the wall receptacle of the house to avoid damage from rain or water.

Fn Button

Function 1-10:


- 01: Sequential
- 02: Back and Forth
- 03: Step up Flashing
- 04: Paired Flashing
- 05: Step on/ Step off
- 06: Group Flashing
- 07: Random Flashing
- 08: Half and Half
- 09: Steady On
- 10: Music Synch



Smart Mobile Devices Operation

Please remove the audio cable from Mini Show Box if using Wi-Fi operations.

- 1. Download application named "Show Box" App on your smart mobile devices. (iOS: App store/Android/HTC: Google play, play store)
- 2. Go to Set on device for Wi-Fi setting. Look for "Mini Show Box" and select it to get connected. (Fig. 1)
- 3. Start "Show Box" App. (Fig. 2)
- 4. The opening screen of application "Show Box" is shown on Fig. 3.
- 5. Main Menu is shown on Fig. 4.

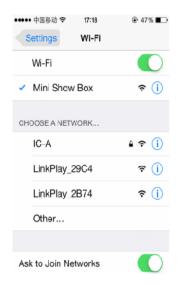



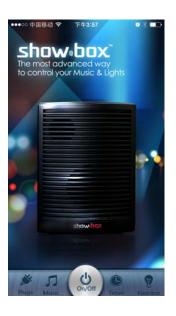


Fig. 1 Fig. 2 Fig. 3



Fig. 4
POWER SWITCH

This is to turn on/off the Mini Show Box.

FUNCTIONS SELECTION

10 functions can be selected by sliding horizontally. The color of this icon changes after each pressing.





TIMER FUNCTION

Power will stay on during the selected time is count down. Set the timer of Show Box for 1/2/4/8/12 hours.

PLUG FUNCTION

Switch of 3 plugs: Individually turn on/off these 3 plugs.





MUSIC PLAYER FUNCTION

For Android:


- 1. Music Selection
- 2. Player Functions (from left to right):
 - Random Play
 - Back
 - Play
 - Forward
 - Stop
- 3. Current Music Playing Position






MUSIC PLAYER OPERATION FOR IPHONE USER

- 1. Touch the music icon from the main menu.
- 2. Application will open your music playlist.
- 3. Select a song from the playlist. Once selected, swipe screen from bottom to top to open new screen as Fig. 3.
- 4. Select "AirPlay" in the new screen as Fig. 4.
- 5. On the next screen, select "Show Box". The music will begin playing through the Show Box and lights will dance with music.
- 6. Detailed step by step images shown from Fig. 1 to 5.

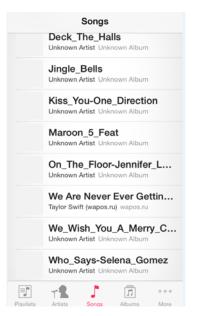



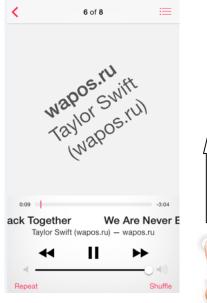

 


Fig.1

Fig. 2

Fig. 3





Fig. 4

Fig. 5



Federal Communications Commission (FCC) Statement

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

IC Caution:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

DECLARATION DE CONFORMITE D'INDUSTRIE CANADA

Ce périphérique a été testé et reconnu conforme aux limites spécifiées dans RSS-210. Son utilisation est soumise aux deux conditions suivantes :

- (1) il ne doit pas provoquer d'interférences gênantes et
- (2) il doit tolérer les interférences re.ues, notamment cellessusceptibles d'en perturber le fonctionnement.