

(READ AND FOLLOW ALL SAFETY INSTRUCTIONS)

# *Holiday* **show»home™** APP



 
Quick Reference Guide

# How to operate the show<sup>»</sup>home™ App? /

2

---

**Step 1: Download your Free Showhome App for your smartphone at:**



Type show<sup>»</sup>home™ in the search option of either store and look for this icon.

---

**Step 2: Plug show<sup>»</sup>home™ item. into an electrical socket.**

---

**Step 3: Turn ON Bluetooth function.**



Bluetooth

Make sure your Bluetooth on your smartphone is turned on.

Smart device must be compatible with Bluetooth 4.0 and above

## Smartphone compatibility

- Android 4.3 or higher version, Supporting 4.0 Bluetooth.
- iOS 7.0 or higher version, iPhone: 4S, 5, 5S, 6, 6+, 6S, 6S+, SE, 7, 7+, 8, 8+, X.
- iPad: iPad3, iPad mini (1, 2, 3, 4 series), iPad Air (1, 2 series), iPad Pro.
- iPod touch

Depending on what phone you use, there could be a delay of 10 seconds before your phone fully syncs with your show<sup>»</sup>home™.

**Step 4:** You're now ready to control your show»home™ App product. This is the MAIN MENU and function of show»home™ App.



## show»home™ App+

ShowHome App is the most advanced way to control all your lights. Easily switch between colors and lighting effects. Combine colors with lighting effects and find the setting that works best for you.

## Step 5: Control your products with the below 11 main functions on your App.

### 1: ON / OFF (Tap to turn On or Off)

 


### 2: Light Shows (Customizing your show mode)




## Step 5: Control your products with the below 11 main functions on your App.

### 3: Timer Settings (Set and cancel the time you want)

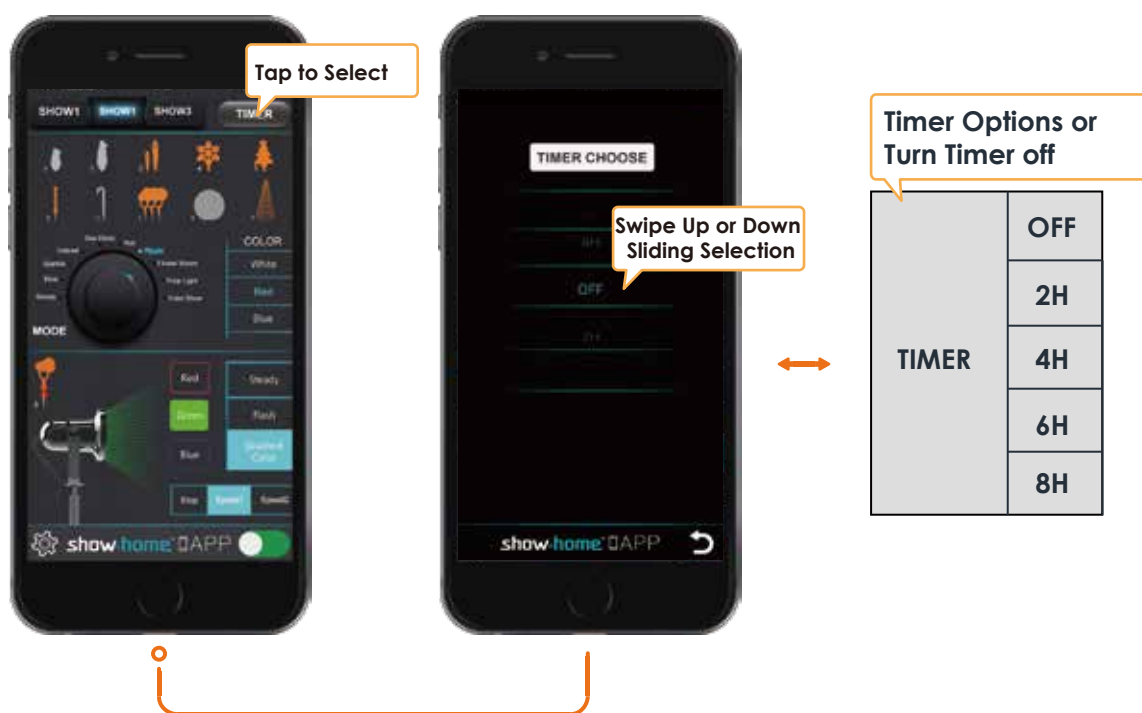


### 4: ShowHome Products (Sync all ShowHome products)

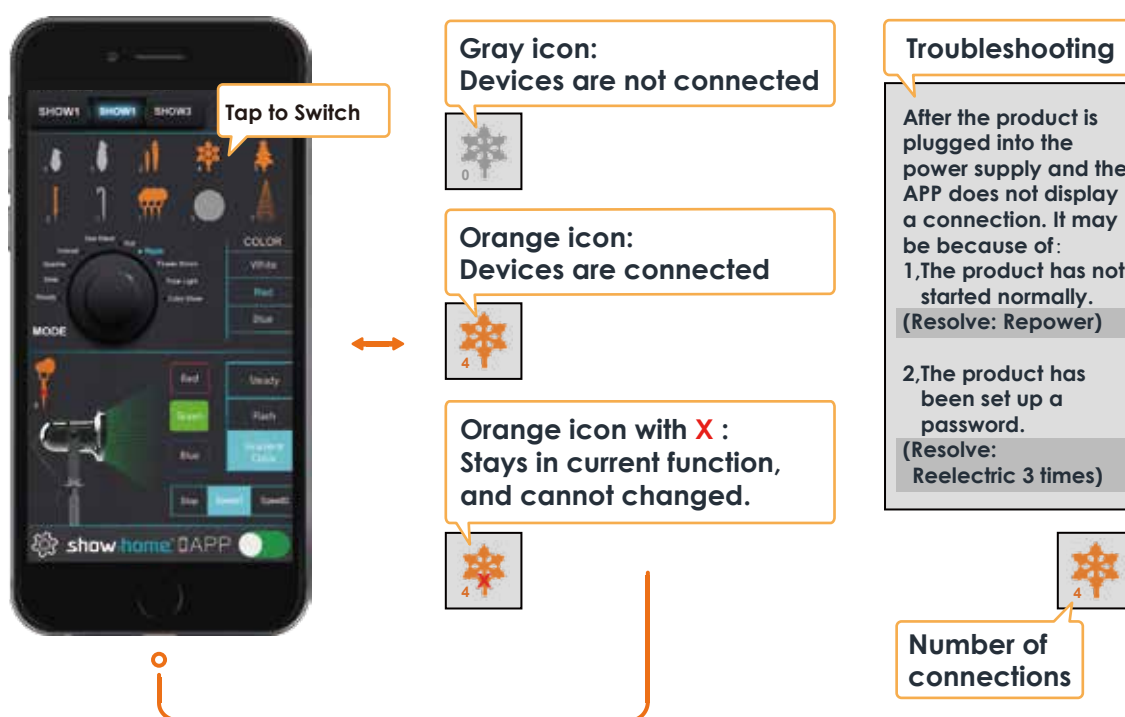 

## Step 5: Control your products with the below 11 main functions on your App.
 
### 5: Product Mode (Customize your show mode)

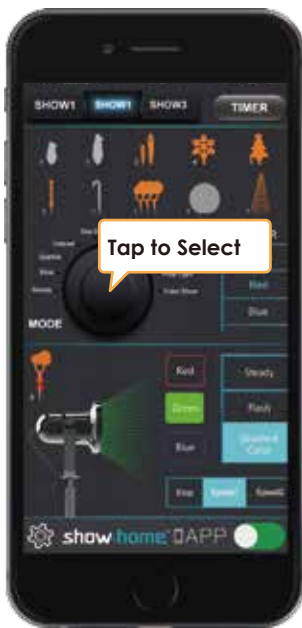

There are 10 kinds of show modes to choose from

No.	Mode Name
1	Steady
2	Blink
3	Sparkle
4	Instead
5	Fade
6	Roll
7	Ripple
8	Fireworks
9	Polar Light
10	Color Show

### 6: Color Reference (Customize your show color)




There are 28 color patterns to choose from

No.	Color Name	No.	Color Name	No.	Color Name
1	Red	11	Cyan	21	Valentines' day
2	Green	12	Yellow	22	Independence day
3	Gule	13	purple	23	Thanksgiving Day
4	Orange	14	Pure white	24	St. Patrick's day
5	Pink	15	Cold white	25	Halloween
6	Aque	16	Spring	26	Sun
7	Gold	17	Summer	27	Earth
8	Fuchsia	18	Autumn	28	Multi Color
9	Lawn green	19	Winter		
10	Magenta	20	Christmas day		

## Step 5: Control your products with the below 11 main functions on your App.

### 7: Laser Projector Control (Tap to Control)



**Tap to Switch**

**Gray icon:**  
Devices are not connected

**Orange icon:**  
Devices are connected

 
**Orange icon with X :**  
Stay in current function, and cannot by any click.

**Troubleshooting**

After the product is plugged into the power supply, APP does not display the connection. It may be:

- 1, The product has no normal start.  
(Resolvent: REpower)
- 2, The product has been set up a password.  
(Resolvent: Reelectric 3 times)

### 8: Laser Projector Color Reference (Multiple choices)

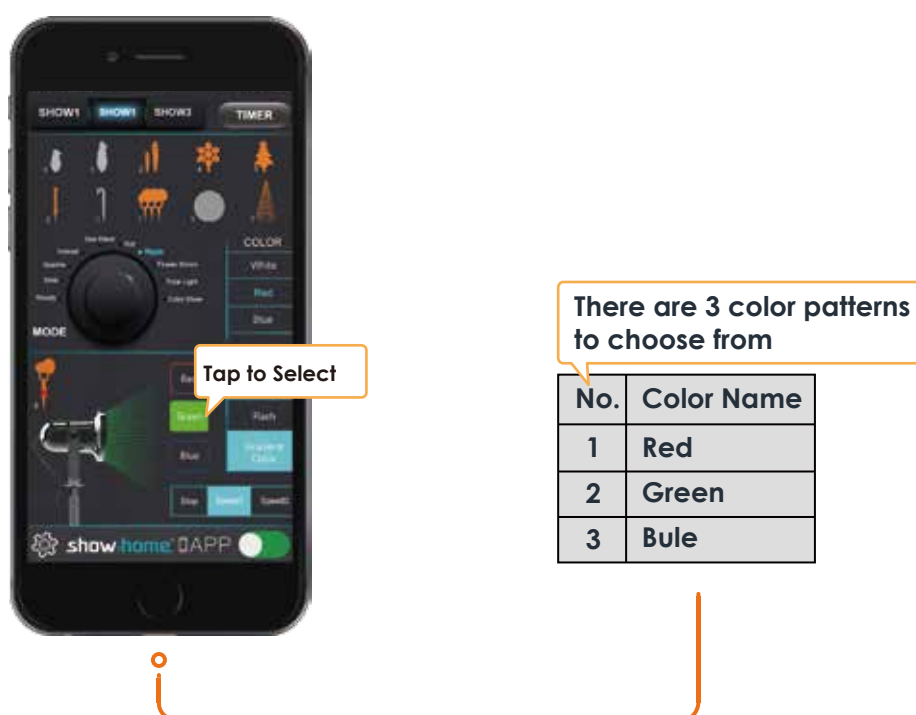

**Tap to Select**

There are 3 color patterns to choose from

No.	Color Name
1	Red
2	Green
3	Bule

**Step 5:** Control your products with the below 11 main functions on your App.

### 9: Laser Projector Mode (Customize mode)



3 models to choose from

No.	Mode Name
1	Steady
2	Flash
3	Gradient color

### 10: Laser Projector Motor (Customize motor)



3 options for the motor to be controlled

No.	Motor Name
1	Stop
2	Speed1
3	Speed2



# Step 5: Control your products with the below 11 main functions on your App.

## 11: Function Setting (Main page)

Other settings  
4 options

No.	Setting name
1	String lights show
2	LED light bar show
3	Set password
4	User guided

Tap

Return

### a. String Lights Show

Tap to Select

Return

Return

Control the direction of the lights flicker: left or right

Flashing light, prompting its location

Set the sequence of light flicker

Selection of numbers

# Step 5: Control your products with the below 11 main functions on your App.

## b. LED Light Bar Show









## c. Set Password



# More information about / show»home™ products





 
11

## 11 product parameters :

No.	Product Name	Picture	Describe
1	C9 Lights		<b>Function:</b> 1. RGB Lights 2. Timer 3. Function: 26 kinds of theme colors Standard: 10 kinds of patterns 3 kinds of theme shows selected 4. with APP+Bluetooth Smart controled control distance: >50m 5. with auto setting string lights illuminate sequentially 6. Multiple color+Super brightness 7. Control over 100 sets synchronized Standard / Approval: FCC / UL / Bluetooth Certified
2	C6 Lights		
3	Icicles		<b>Function:</b> 1. RGB Lights 2. Timer 3. Function: 26 kinds of theme colors Standard: 10 kinds of patterns 3 kinds of theme shows selected 4. with APP+Bluetooth Smart controled control distance: >50m 5. with auto setting string lights illuminate sequentially 6. Multiple color+Super brightness 7. Control over 100 sets synchronized Standard / Approval: FCC / UL / Bluetooth Certified
4	LED Light Strip		
5	Snow Flake		<b>Function:</b> 1. RGB Lights 2. Timer 3. Function: 26 kinds of theme colors Standard: 10 kinds of patterns 3 kinds of theme shows selected 4. with APP+Bluetooth Smart controledcontrol distance: >50m 5. Multiple color+Super brightness 6. Control over 100 sets synchronized Standard / Approval: FCC / UL / Bluetooth Certified
6	Christmas Tree		

# More information about / show»home™ products

## 11 product parameters:

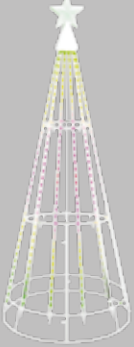No.	Product Name	Picture	Describe
7	LED Spotlights		<p>Function:</p> <ol style="list-style-type: none"> <li>1. RGB Lights</li> <li>2. Timer</li> <li>3. Function: 26 kinds of theme colors Standard: 10 kinds of patterns 3 kinds of theme shows selected</li> </ol>
8	Candy Canes		<ol style="list-style-type: none"> <li>4. with APP+Bluetooth Smart controled control distance: &gt;50m</li> <li>5. Multiple color+Super brightness</li> <li>6. Control over 100 sets synchronized</li> </ol> <p>Standard / Approval: FCC / UL / Bluetooth Certified</p>
9	Laser RGB 3D Hologram Projector		<p>Function:</p> <ol style="list-style-type: none"> <li>1. RGB Lights</li> <li>2. Timer</li> <li>3. With APP+Bluetooth Smart controled control distance: &gt;50m</li> <li>4. Control over 100 sets synchronized</li> <li>5. Unique patterns show</li> <li>6. Project distance: &gt;10m</li> </ol> <p>Standard / Approval: FCC / UL / FDA / Bluetooth Certified</p>
10	light Ball		<p>Function:</p> <ol style="list-style-type: none"> <li>1. RGB &amp; White Lighs</li> <li>2. Timer</li> <li>3. with APP+Bluetooth Smart controled control distance:&gt;50m</li> <li>4. Control over 100 sets synchronized</li> <li>5. Unique patterns show</li> <li>6. Battery supply Used for floating on water</li> </ol> <p>Standard / Approval: FCC / UL / Bluetooth Certified</p>
11	RGB Show Tree		<p>Function:</p> <ol style="list-style-type: none"> <li>1. RGB Lights</li> <li>2. Timer</li> <li>3. Function: 26 kinds of theme colors Standard: 10 kinds of patterns 3 kinds of theme shows selected</li> <li>4. with APP+Bluetooth Smart controled control distance: &gt;50m</li> <li>5. Multiple color+Super brightness</li> <li>6. Control over 100 sets synchronized</li> </ol> <p>Standard / Approval: FCC / UL / Bluetooth Certified</p>

---

**Q:** **My App can't connect with my products / devices**

**A:** Connectivity issues mainly occur because of a weak bluetooth signal. Try these steps and see if they help the connection.

1. Shorten the distance between your phone and the product.
2. Turn off bluetooth functionality on your phone, and turn back on it again, Try reconnect the App with device again.
3. If the Above to options fail, then try cutting the power supply, take the plug out of the socket. Once clear for a few second place the plug back in to the socket and turn the power back on. Try reconnect the App with device again.

---

**Q:** **App can connect with devices, but there are no product numbers displaying on the App, or product numbers are visible, but App cannot connect and control the products.**

**A:**

1. This could be because of a bad connection to the power supply. Cut the power supply, unplug. Re insert the plug into the socket and turn the power on again.
2. If the present password is different between the products and App, then reset the products ( to do this, cut the power supply and plug into a socket, repeat this for 3 times quickly)
3. If the above options fail, then exit the App close it down completely then turn the App back on again.

---

**Q:** **If the product numbers visible are more than the actual actual products.**

**A:** 1. The App may likely be connecting with nearby products, try setting a password for the products.

---

**Q:** **If products change their mode without being controlled.**

**A:** This could be because of a nearby neighbor using the App, you need to set a password for the products.

---

**When using electrical products, basic precautions should always be followed including the following:**

- a) **Read and following all safety instructions.**
- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let lamps rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- n) Read and follow all instructions that are on the product or provided with the product.
- o) **Save these instructions.**

---

# Important Safety Instructions

15

---

## Use and Care Instructions :

 
- a) When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- b) If the product is placed on a tree, the tree should be well secured and stable.
- c) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connectors connections, and wires.
- d) When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires
- e) When not the use, store neatly in a cool, dry location protected from sunlight.

---

## User Servicing Instructions :

Replace the fuse.

- a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling o
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- c) Remove fuse carefully.
- d) Risk of fire. Replace fuse only with 3 Amp, 125 Volt fuse (provided with product)
- e) Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- f) Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product of the attachment plug is damaged.

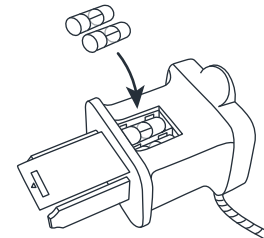

If connecting to a lighting string that does not have a Wattage (W) rating {found on the tag within 6 inches of the plug} calculate the wattage as follows: Multiply the current ( A ) which is on the flag-type tag by 120.

For Example: Lighting string is rated 120V, 60Hz, 0.2 Amps.  $0.2 \times 120 = 24$  Watts  
Add the wattage of each light string together for a total of 216 Watts or less. (Do not exceed 216 Watts)

---

# Important Safety Instructions

---

## CAUTION

1. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify string.
2. To reduce the risk of fire and electric shock: a) Do not install on trees having needles leaves or branch coverings of metal or materials which look like metal, and b) Do not mount or support strings in a manner that can cut or damage wire insulation.

Model No.: AL 91, AL92



---

# FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENT

17

---

**FCC Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:-Reorient or relocate the receiving antenna.-Increase the separation between the equipment and receiver.-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.-Consult the dealer or an experienced radio/TV technician for help.

\*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

**(SAVE THESE INSTRUCTIONS)**