



AGES: 3+

WALKIE TALKIES

HOW TO OPERATE :

1. Open battery door and snap in a 9 volt battery (not included) per unit.
2. Turn ON/OFF switch to ON.
3. Press PUSH-TO-TALK button for transmitting, and speak in a normal voice level into the SPEAKER / MICROPHONE grille.
4. To send Morse code signals, depress the PUSH-TO-TALK button, and press the MORSE CODE key. Release MORSE CODE key quickly to send a • (dot), or hold key longer to send a - (dash).
5. You can practice Morse code without transmitting to other units by pressing the code key without depressing the PUSH-TO-TALK button.
6. Release the PUSH-TO-TALK button for receiving.


WARNING : The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment, such modifications could void the user's authority to operate the equipment.

DO NOT MIX OLD AND NEW BATTERIES.

DO NOT MIX ALKALINE, STANDARD (CARBON ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.

Item #60901

REMARK: Modifications not authorized by the manufacturer may void users authority to operate this device.

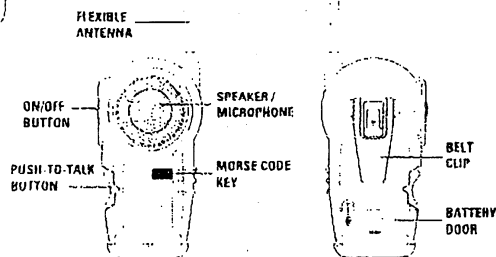

CAUTION :

- Insert "9V" size or equivalent alkaline batteries as indicated inside the battery compartment. Batteries are to be inserted with the correct polarity.
- Your transceiver set has been fully adjusted prior to shipment from the factory, and be sure not to touch the internal components other than replacing the batteries.
- When the sound becomes weak, it is time to change the batteries.
- After use, always turn the ON/OFF switch to OFF position.
- Keep your set in a dry and clean place.
- Take out the batteries when walkie talkies are not in use.

