

1. Power Newly connected or Re connect ted, sensor has 5 secnods delay.
During the period and sensor will not alert adainst object detected.
2. Sensitivetty Adjustment: Adjust alert range of External sensitivtty firstly
tune the aiert range of Internal sensitivtty lastly.