



SPRING BEE INTERNATIONAL CO., LTD.


SP BEE TEL : 886-2-29339779 FAX : 886-2-29314858 E-mail : spbee @ msl7. hinet . net

Address : NO. 1, ALLEY 6, LANE 217, SEC. 2, SHIN LONG RD., TAIPEI, TAIWAN, R. O. C.

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

DUAL ZONE RADAR SENSOR

NOTE :

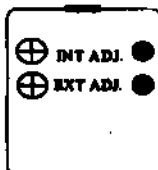

- Power Newly connected or Re connected, sensor has 5 seconds delay During the period and sensor will not alert against object detected.
- Sensitivity Adjustment :
Adjust alert range of EXTERNAL sensitivity firstly tune the alert range of INTERNAL sensitivity lastly.

Principle for adjustment :

1. EXT ADJ. : TURN CLOCKWISE EXTERNAL ZONE MORE SENSITIVE (+)
2. EXT ADJ. : TURN COUNTER-CLOCKWISE EXTERNAL ZONE LESS SENSITIVE (-)
3. INT ADJ. : TURN CLOCKWISE INTERNAL ZONE MORE SENSITIVE (+)
4. INT ADJ. : TURN COUNTER-CLOCKWISE INTERNAL ZONE LESS SENSITIVE (-)

IMPORTANT :

1. It is recommended to mount the sensor in the center of the car under the rear seat.
2. Avoid to mount the sensor directly behind the metal obstacles.
4. Remember to isolate with diodes, if this sensor's output is parallel testing and adjusting the sensor.

WIRNG :

- RED : +12V OR ALARM'S POSITIVE ARMED OUTPUT.
BLACK : CONNET TO GROUND.
BLUE : CONNECT TO INSTANT TRIGGER AUX-INPUT OF ALARM.
GREEN : CONNECT TO WARNING TRIGGER AUX-INPUT OF ALARM.

LED INDICATOR

- FLASHING GREEN : EXTERNIOR ZONE TROGER.
FLASHING RED : INTERIOR ZONE TROGER.

FCC ID. : OY99011530103

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESRIED OPERATION

The user should not modify or change this equipment without written approval from
(SPRING BEE INTERNATIONAL CO., LTD) Modification void authority to use this equit.