

INSTRUCTION MANUAL FOR BT080

WARNINGS

This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non domestic use or in a commercial environment.


I. Precautions

1. Please store and use this product at the ambient temperature;
2. Do not expose this product to the rain or damp surroundings;
3. Prevent this product from falling that could result in serious damage;
4. Do not dismantle, repair or modify this product on your own;
5. In order to avoid any risk, do not dispose this product inappropriately or toss it into the fire as there is a built-in lithium battery.

II. Considerate Hints

1. Do not turn up the volume to a high level constantly as this could shorten the service life of this product or impair your hearing;
2. When encountering any fault during operation, please cut off the power supply and disconnect the USB cable to prevent further damage to the speaker or other components;
3. The Bluetooth transmission range or connectivity could be affected by low battery power. In that case, please recharge immediately.
4. Please remove audio cables for the use of Bluetooth.

III. Functional buttons

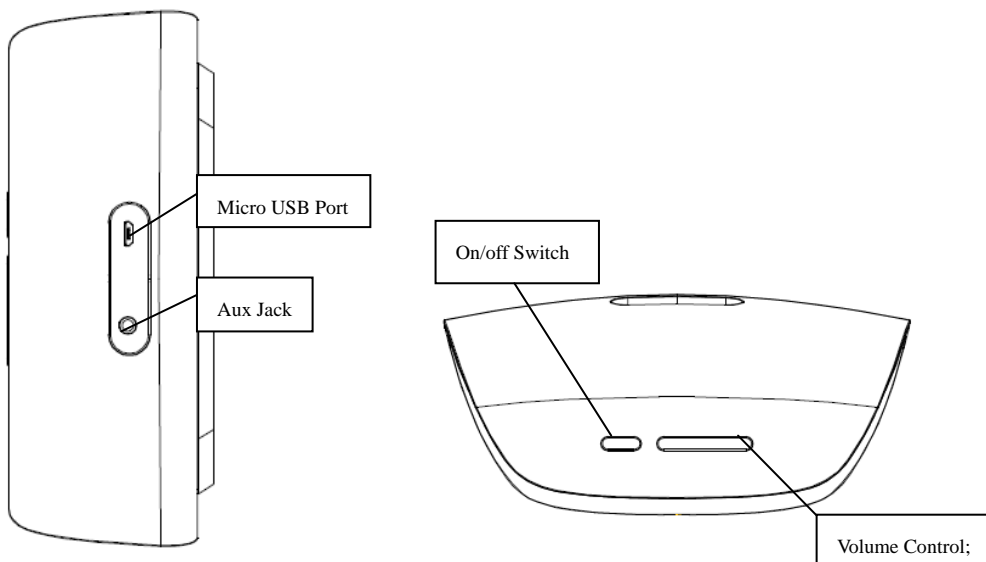

- Click **▶||** to pause during Bluetooth play and click **▶||** to play during Bluetooth pause. Click to receive calls at Bluetooth state. Hold down the button to refuse the calls.
- Push to **-** shortly to select songs upwards, keep pushing to decrease the volume.
- Push to **+** shortly to select songs downwards, keep pushing to increase the volume.
- Keep pushing **▶||** to turn ON/OFF the speaker

IV. Bluetooth function

1. Turn on the speaker. The white indicator light will flash to detect nearing Bluetooth enabled devices. The white indicator light will go out if no Bluetooth device is detected within 5 minutes.
2. Pair the speaker with the desired Bluetooth device.
3. Play/pause as desired by pressing **▶||**
4. When you want to play music or a movie from another Bluetooth device, disconnect and restart the Bluetooth speaker. Then re-pair both devices.

V. AUX playback operation

1. Turn the speaker on.
2. Insert an 3.5mm audio cable into the aux jack on the back of the speaker, connecting to any audio device such as mobile phones with the other port.
3. Press "**▶||**" to enter mute mode and re-press to release sound.

VI. Charging the speaker

The speaker has a built-in Lithium battery. The battery is rechargeable and provides approximately 2.5 hours of continuous operation when fully charged.

Use the micro USB cable to charge the speaker. The red indicator light will illuminate and will only go out when the speaker is fully charged.

VII. Hands-free calls

When Bluetooth speaker is connected successfully to mobile phone, it will beep when calls are Incoming:

- Press **▶||** to answer/hang up calls
- Press twice **▶||** to replay the last call appealed.

VIII. Bluetooth specifications

- Product Model: BT080
- Version: Bluetooth V2.1+EDR
- Transmission Distance: ≤10M (depending upon operation environment and devices to which it connects)
- USB Recharge Voltage: DC 5V
- Type of built-in battery: Lithium battery1050mAh
- Output Power: 5W*2
- Frequency Response: 90Hz-20KHz
- Sensitivity: 80db
- Signal to Noise Ratio (SNR): ≥76dB
- Size :160.5 *62.1*75.6 mm

Compatibility

Wireless: Devices configured with Bluetooth V4.0 or higher version such as iPad, iPhone , iPod Touch and Mac as well as the most models of Smartphone or computers that support Bluetooth.

V4.0 Bluetooth version consists of protocols like A2DP, AVRCP and HFP and so on.

IX. Packaging includes

1 Speaker

1 User's Manual

Packaging not includes

1 USB cable for the charge of the device

1 AUX Cable

Safety Information

Please read and understand the instructions in this manual before using this product. Save this manual for future reference.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Troubleshooting

Problem	Solution
Unable to pair up with other devices	<ol style="list-style-type: none">1. Check if the speaker is still in the process of search or switch it off and then on.2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Please turn them off.
The sound is rather low or distorted	<ol style="list-style-type: none">1. Check the Bluetooth device's volume and then adjust it to a proper level.2. Recharge the battery
The music stops from time to time	<ol style="list-style-type: none">1. Check whether the speaker's effective transmission range is exceeded or there is an obstacle standing between the speaker and other Bluetooth devices.

The Bluetooth indicator remains off	<ol style="list-style-type: none"><li data-bbox="539 129 1506 212">1. It suggests the battery power drops quite low and retry once being recharged.<li data-bbox="539 224 1506 264">2. Turn it on again.
-------------------------------------	---

Hints: Another trouble, please consult the dealer or an experienced radio/TV technician for help.