# Bluetooth® & NFC Speaker

Please read the following clearly before you do the printing of all kinds of our instruction sheets.

- 1) The folded size should be 3"W x 3"H.
- 2) Please exactly follow all the trim marks and fold marks.
- 3) Please exactly follow the page in proper order. (page numbers do not need to print)
- 4) The color of this kind instruction is: 1C(Black) + 1C(Black)
- 5) Use 90gsm gloss art paper for bulk production.
- 6) 8PP Book Binding with saddle stitching.
- 7) There are gradient colors inside this file.

	PROBLEM	TROUBLESHOOTING
	Discontinuous music	Inspect the distance between the device and speaker, they may be too far apart and exceed the Bluetooth range.     Inspect if there is an obstacle between the speaker and the Bluetooth device.
	The indicator for Bluetooth mode is not ON	It indicates that the power of the battery is not sufficient. Please charge the speaker and try again.     Restart the speaker.

Rock-it Bluetooth® & NFC Speaker

3962B

FCC ID: OYC3962B

User Manual

Back Cover

Front Cover

# SPECIFICATION

Model: 3962

Bluetooth specification: Bluetooth V2.1+EDR

Transmission distance : ≤10M (It varies when the environmental factors and the connected Bluetooth devices are different)

USB charging voltage : DC 5V

Built-in battery: Lithium battery 500mAh

Output power: 3W

Frequency response: 90Hz-20 KHz

Sensitivity : 80db±2db S/N ratio : ≥ 76dB

Dimensions: Ø89 x D53mm

# **FUNCTION DESCRIPTION**

- 1. BLUETOOTH OPERATION
- Please ensure that the Bluetooth® function has been enabled on your smartphone or Bluetooth® enabled device.
- Press the ON/OFF button to turn on the speaker. The green indicator light will turn on and the speaker will automatically go into Bluetooth® mode.
- The speaker will search for Bluetooth® enabled devices

page 04

and the indicator light will begin to flash blue and beep simultaneously.

- "GEMLINE SPKR" will appear on the Bluetooth® device list, select "GEMLINE SPKR" to establish pairing. The blue indicator light will flash slowly and beep to alert a success -ful connection. If pairing is unsuccessful or if the speaker fails to detect a Bluetooth® device within 5 mins, the speaker will shut itself down automatically. Please turn off the speaker and then turn back on to search for the device again.
- When you want to play audio from another Bluetooth device, disconnect the speaker and restart the Bluetooth speaker and re-pair with the new device.
- The default setting of the volume is set to 60%.

### 2. NFC OPERATION

- Turn on the speaker.
- Gently touch your NFC supported device to the NFC detection position of the speaker.
- A pop-up asking whether to proceed with the connection will appear on the device, select "Yes".

page 05

Thank you for using our company's portable Bluetooth & NFC speaker. Please read this user manual carefully in order to operate this product correctly.

#### NOTICE

Please store and use this product at a normal temperature DO NOT expose this product to rain or damp areas DO NOT drop this product

DO NOT disassemble, repair, or modify this product DO NOT place product in or near fire to avoid danger, as it uses a lithium battery

#### KIND REMINDER

- To prolong the speaker's life span and to prevent damage to your physical and mental health, please do not listen to music under excessively loud volume for long periods of time to avoid hearing damage.
- When something is wrong with the speaker, please immediately shut off the power switch and unplug the USB cable to prevent the speaker and other parts of the product from being damaged.

page 02

Shortage in power will affect the Bluetooth distance or the ability to connect, please charge product in a timely manner.

### **FUNCTION KEYS**

▶II / Play & Pause / Call pick-up & Call hang-up

← Previous Song / Decrease Volume

Output

Decrease Volume

Output


Decrease Volume

Output

Decrease Volume

Decrease

► Increase Volume / Next Song

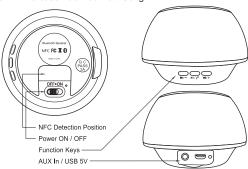

page 03

- To disconnect the NFC supported device, gently touch the NFC detection position of the speaker again with the device.
- 3. AUX PLAYBACK
- Connect the speaker to a smartphone, audio device, or laptop with a 3.5mm AUX cable.

# HANDS FREE FUNCTION UNDER BLUETOOTH® MODE

- 2. To reject a call, press & hold ►II / for more than 3 seconds.
- 3. To call the last number dialed, double click ▶ | / €.

# **CHARGING THE SPEAKER**

The speaker has a built-in Lithium battery & can be recharged with the USB power cable that is provided with the speaker. The charging time is approximately 2 hours and provides 3.5 to 4 hours of continuous operation.

# PACKING LIST

Speaker x 1
 User manual x 1

PROBLEM TROUBLESHOOTING Failure in connecting Inspect whether the speaker is in and pairing the status of searching for device; if not, restart the speaker. Difficulty in searching and connecting with desired device can be caused if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable Bluetooth on the other devices. The sound is low or Inspect the volume of the Bluetooth speaker or device and adjust distorted the volume as needed. The power of battery is insufficient, please charge it.

page 06 page 07

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received,

including interference that may cause undesired operation.