 


Bluetooth Connection

10. How to Connect the Blu-Bot


- Search and download the Blu-Bot App in App store or google play store.
- Turn on the Bluetooth.
- Turn on your mobile device.
- Go to "Settings" menu, turn on Bluetooth function, search and connect with the device "BLU-BOT".
- Then launch the Blu-Bot app to play with the Blu-Bot via Bluetooth control.

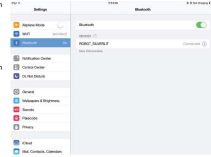

11. Start the App

- Start on the Blu-Bot app and there are 3 icons in main page.

- Link**
Press to enter into main menu page.
- Info**
Press to enter information page.
- Setting**
For option setting.

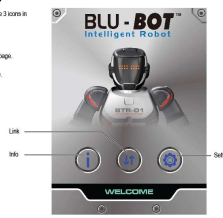

12. Link to Blu-Bot

- Press the "Link" button.
- The screen will show main menu with following 4 mode selections.
- Program mode
- Gesture Control mode
- Robot Dance mode
- Voice Change mode




13. App - Program mode

- Drag and drop the "Walking stop" icon to Channel A.
- Drag and drop the "Head movement" icon to Channel B.
- Drag and drop the "Facial Expression" icon to Channel C.
- Press "Start" button to send commands to the Blu-Bot or press "Clear" button to reset.
- Press "Speaker" button and Blu-Bot will start the programmed actions from "Start" button to enter to voice play mode.



14. App - Gesture Control mode

- Follow the step-by-step diagram below and wipe your finger on your eye to control Blu-Bot's movement.
- Press "Talk" button to record your action. Then press "Play" button to coordinate it via the robot's speaker.
- Press "Clear" button to pick up the record via Blu-Bot's microphone.
- Press the "Play" button to playback in smart phone.
- Press one of the three pre-recorded messages button to playback the voice changer mode in Blu-Bot's speaker.

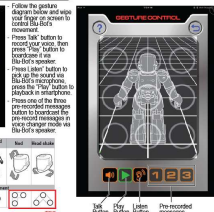


15. App - Robot Dance mode

- Press "Channel Master" button to select one of the three dance mode.
- Press "Start" button to start dance, press it again to stop.
- Press "X" button to jam sound effect during the dance.
- Press "Talk" button to record your action. Then press "Play" button to playback it via the Blu-Bot's speaker.
- Press "Clear" button to pick up the record via the Blu-Bot's microphone or press the "Play" button to playback in smart phone.
- Press one of the three pre-recorded messages button to playback the pre-recorded messages in voice changer mode via Blu-Bot's speaker.



16. App - Voice Change mode

- Press "Record button" to record a message.
- Move the voice change cursor to the position you want to press "Start/Stop" button for preset effect.
- Press "Play" button to listen voice-changed message.
- Press "Voice Setting" button or "Voice Change" button to change the recorded voice.
- Press "Share" button to save the voice-changed message (can save up to 3 messages).
- Press "Load" button to load 3 of the saved messages.

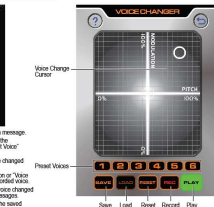

17. Operating Tips

- Only operate the Blu-Bot on flat, smooth (but not slippery) and dry surfaces or low pile carpets. Hair, carpet or dirt can affect the operation of the Blu-Bot.
- Do not operate the robot on sand or through water or snow. If your Blu-Bot gets wet, wipe it with a towel and allow it to dry completely.
- Do not operate near concrete walls which may disturb Bluetooth transmission.

18. Troubleshooting

Symptom	Cause	Solution
Blu-Bot does not move or react to the remote dance.	<ul style="list-style-type: none"> High frequency interference occurred near to Bluetooth area, headphones and area close to mobile. Problems with Bluetooth are weak. Bluetooth are not in connection with your robot. The toy is on stand by mode. 	<ul style="list-style-type: none"> Avoid them if possible, or choose another place to operate the robot. Switch off the toy and turn it on again. Recharge the battery. Please refer to the Charge all batteries in vehicle with new alkaline battery. Disconnect your mobile phone, iPhone or iPad connects with our robot's Bluetooth.
Loss of control.	Bluetooth signal of remote device was obstructed.	Play in a more open place.
The Blu-Bot runs slowly, erratically or even freeze.	<ul style="list-style-type: none"> Power switch is not in "ON" position. Check batteries. 	<ul style="list-style-type: none"> Switch on the power. Recharge the battery.
Bluetooth connection unstable	Other Bluetooth device connected.	Disconnect other Bluetooth device and try again.