



**WARNING:**  
CHOKING HAZARD –  
Toy contains a small ball.  
Not for Children under 3 years.

**CONTENTS**

- Golf Ball
- Transmitter
- Charger
- Instruction manual

**MAIN FEATURES**

- Radio controlled ball moves
- Tri-band selectable in 1 frequency

"This product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC."



**Safety Precautions:**

- Parents, this toy is recommended for children. To ensure that your child's play is both safe and fun, please review the operating instructions with your children.
- **DO NOT** pick up moving Golf Ball.
- Remove battery from transmitter and Charger when not in use.
- **DO NOT** operate your Golf Ball on street. Avoid hitting people, pets or home furnishings.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Cautions:**

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.(For Transmitter and Charger only)
- Rechargeable battery are only to be charged by an adult.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

**Care and Maintenance:**

- Always remove batteries from the toy when it is not being used for a long period of time.
- Wipe the toy gently with a clean damp cloth.
- Keep the toy away from direct sunlight and/or direct heat.
- Do not submerge the toy into water that can damage the electronic assemblies.

**Note:**

- Parental guidance is recommended when installing or replacing batteries.
- New and alkaline batteries are recommended to use in this toy to obtain best and maximum performance.
- You are advised to replace with new batteries as soon as the function becomes impaired.
- Users should keep and retain this information for future reference.
- Users should keep strict accordance with the instruction manual while operation the product.
- Under the environment with electrostatic discharge, the sample may malfunction and require user to reset the sample.

**Special Note to Adults:**

- This toy is not intended for children under 3 years old.
- This toy must only be used with the recommended transmitter.

**Battery requirement for Transmitter:**

 
Power Supply : Rating : DC 9V 0.3W  
Batteries : 1 x 9V / 6LF22 / 6AM6  
Requires 1 x 9V alkaline battery (not included)

**Battery requirement for Charger:**

Power Supply : Rating : DC3V 2.4W  
Batteries : 2 x 1.5V "AA"/LR6/AM3  
Requires 2 x 1.5V "AA" size alkaline batteries (not included)

**Battery requirement for Golf Ball:**

Power Supply : Rating : DC 1.2V 0.2W  
Battery : 1 x 1.2V NiMH rechargeable battery (included)

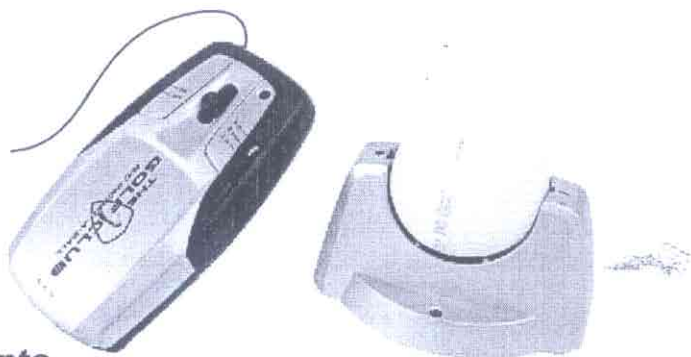

## FCC Statements

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1) This device may not cause harmful interference, and

 
 
2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Index to parts

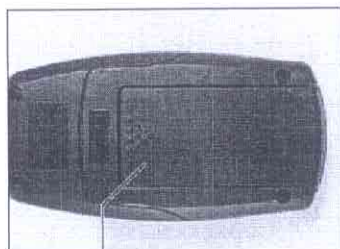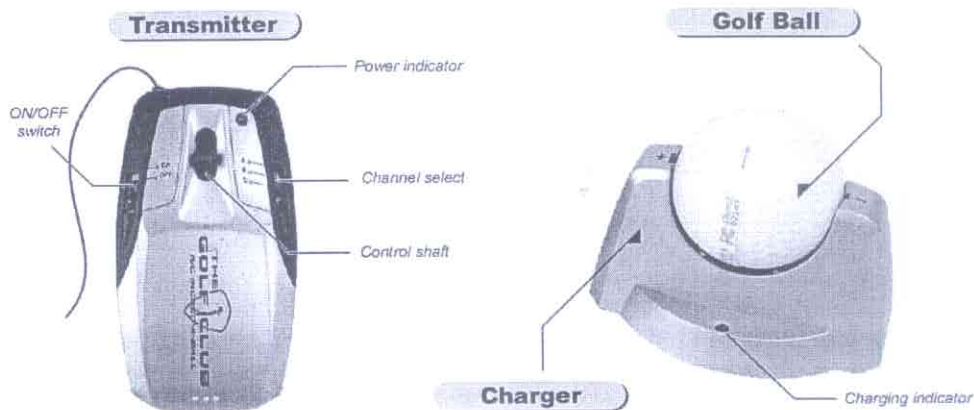

Transmitter Battery Cover

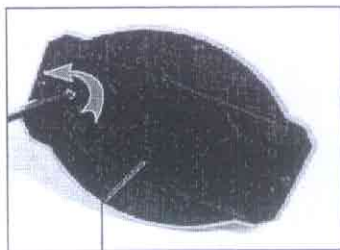 

Charger Battery Cover

## Getting Started

 
### Batteries:

- Golf ball is powered by 1 x 1.2V NIMH rechargeable battery.(included)
- Transmitter is powered by 1 x 9V alkaline battery.(not included)
- Charger is powered by 2 x1,5V"AA" size alkaline batteries.(not included)

### Battery Installation: Transmitter



Make sure the power switch is on "OFF" position.

1. Remove the battery compartment cover. (pic. 1)
2. Insert new "9V" alkaline battery with "+" & "-" signs as shown inside the battery compartment. (pic 2)
- 3.Put the battery compartment cover back in position.

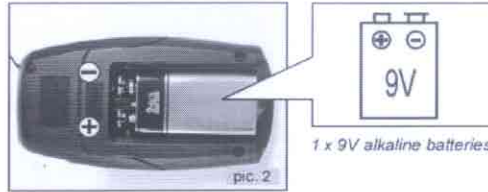


### Battery Installation: Charger

  1. Use a phillip's head(Cross-Head) screwdriver to loosen screw on the battery compartment cover. (pic. 3)
2. Insert 2 new 1.5V "AA" size batteries with "+" and "-" signs as shown inside the battery compartment.(pic. 4)
3. Close the battery compartment cover using a phillip's head(Cross-Head) screwdriver.

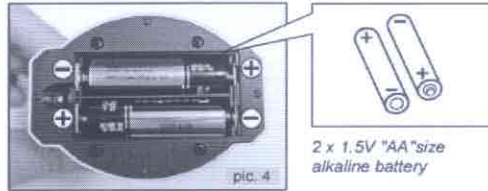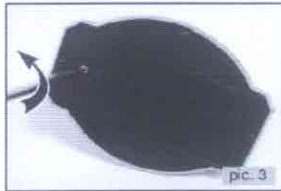

### Charging the Golf ball

 1. Put golf ball into the charger as shown , pay attention to the polarity marking (Pic.5)
2. The LED lights up while charging and turns off after charging completed.

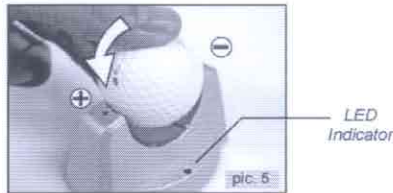


### Driving Your Golf Ball

1. Completely charge the Golf Ball.
2. Switch on the transmitter and select the band shown on the Ball.
3. Push or pull back the control shaft on transmitter to drive or vibrate your golf ball.(Pic.6)
4. Switch off the transmitter after use.
5. Please take batteries out of toy while not be used in long time.

Tips 1: Do not push the control shaft forward or backward at one time. Push it slightly to obtain precise actions.

 Tips 2: Since the Golf ball is round, you should pay attention to the arrow mark on the ball to ensure your driving direction.

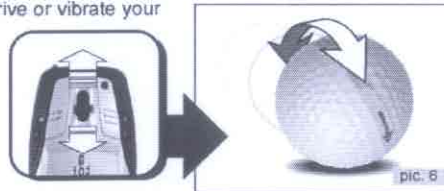

### Driving Tips:

- Operate your Golf Ball only on flat, smooth (but not slippery) dry surface.
- The acceleration varies at different ground environment.
- The turning speed may vary at different ground environment.
- Don't drive your Golf Ball in sand or through water or snow, if your Golf Ball get wet, wipe with a towel and allow to dry completely.
- When your Golf Ball runs erratically, the problem is usually the result of interference caused by high tension wires, radios or other R/C cars running close by on the same frequency as yours. You may have to choose an alternate place to race.
- Do not operate near concrete walls which may disturb transmission.

### Trouble Shooting:

Symptom	Cause	Correction
Golf Ball does not react, or react poorly to operation by transmitter.	• High-frequency interference occurred near to high-voltage lines, transformers and some types of building.	• Avoid these if possible, or choose another place to operate the Golf Ball.
Loss of control.	• Another radio control vehicle using the same frequency and channel is operated near your Golf Ball.  • Out of the control range of distance.	• Race against other vehicles using different frequencies or channel. • Move to another place where without radio frequency interference from another device. • Ensure the antenna is fully extended. The vehicle runs minimum distance of 5 meters or 15 feet in open space.
Golf Ball runs slowly erratically or does not run.	• Low battery.	• Recharge your Golf Ball.