

# SI519 TRANSFER 操作說明:

## TRANSFER PART:

### POWER:

1. **AC-DC adapter:** Specification is 9V 500mA ac power adapter ,connect plug to TRANSFER machine sign “AC ADAPTER”, then turn the power switch on for standby status.
2. **BATTERY:** Specification is 1.5V “AA” alkaline battery\*4. First unscrew the battery cover screw where on the machine reverse side which sign “unscrew battery access”, then put in 1.5V “AA” alkaline battery \*4.Turn on power switch for ready transfer image.

### CHANNEL:

1. There are 4 channel can be selected by channel select switch which sign “1 2 3 4” on machine.
2. The channel select must same as receiver machine. (But don't same as other transfer machine)

### NIGHT VIEW:

1. Night view range are 10~15 feet, shine by IR LED \*6.

### OPERATION:

1. First open the antenna cover.
2. Plug in ac power adaptor, or put in battery as specification.
3. Select channel same as receiver machine, but don't same as other transfer machine.
4. Turn on power switch. When red LED light identify transfer machine ready for transfer image & voice.