


## RT2200 TRANSCEIVER MODULE REAR VIEW

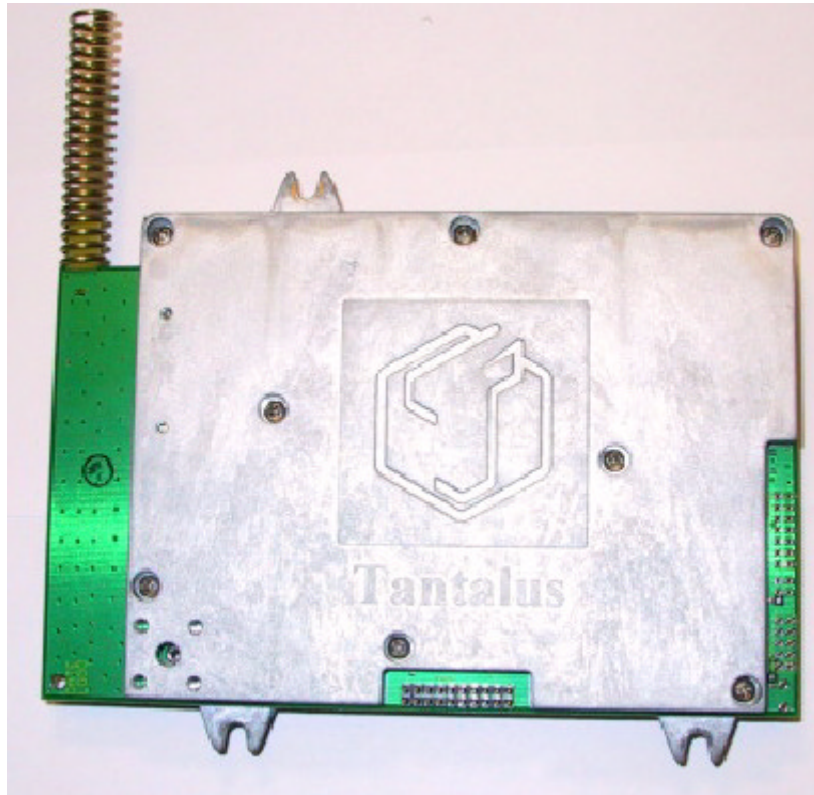

(a) Transceiver configured with internal antenna.



(b) Transceiver configured for external antenna.