

Great Wall

K701 User Guide

1.Introduction

1.1 Preventivemaintenance

- Please always keep the MID dry. To avoid the device short trouble, corrosion fault and electric short, please prevent the device, battery and charger from water and moisture, and don't operate the device or charger by wet hand.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock or shake.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger of all over heating(above 40℃) or too cold(below -10℃) circumstance
- Never shock, throw, prod the MID, or drop, extrude, bend the MID.
- Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

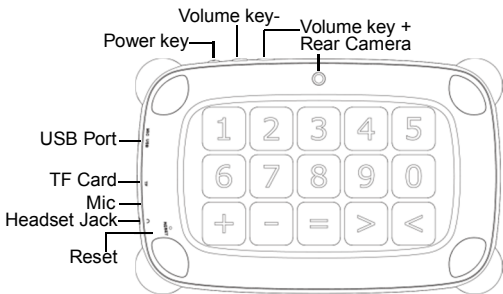 
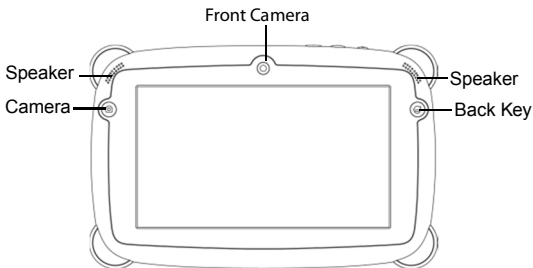 
1.2 Safety Instruction

Before the operation of the MID, please read this chapter and teach your kids about these information. For further details, please refer to the safety instructions and announcement.

- To avoid the wireless signal to interrupt the plane controlled signal, please shut down the MID or using air plane mode when you are boarding a flight,
- To avoid electronic equipment failure, please shut down the MID in the vicinage of high- accuracy electronic equipments.

- Please keep the MID far away from magnetic equipments, the radiation of MID may erase the data stored in the magnetic equipments.
- Never use the MID in the vicinage of high temperature, inflammable gas (gas station).
- Protect the MID and accessories from kids reach scope, and avoid the kids to use the MID without parents' supervision.
- Never use the MID in bathroom or other humid environment, and please protect the MID from liquid wash or wet.

2.Product Overview

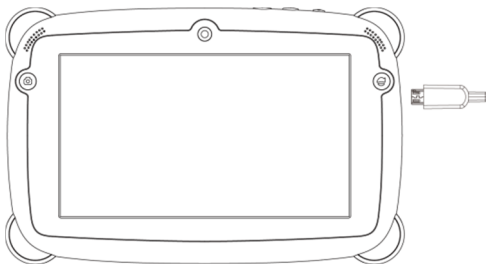 


- **Reset**





Pin and hold the reset button on the side of the device for 3 seconds to reset the system and shut.

- **Change the Battery**

Charge the battery before using it. Connect the USB cable to the USB power adaptor, and then plug the end of the USB cable into the USB Port.



3.Function Keys

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (UP)	increase the volume
Volume - (down)	decrease the volume
HOMEbutton(home) 	Click it in any interface will return to main interface.
Back button (back) 	click it in any interface will return to previous menu
Menu button 	This button will display in menu interface.
Setting button 	display recently browsed history

4. Getting Started

4.1 Home screen


From the Home screen, you can view your device's status and Access application

The Home screen has multiple panels. Scroll left or right to view the panels on the Home screen.

4.2 Access applications

- Scroll down or up to another screen,select an application
- Press ◀ to return to the previous screen,press □ to return to the Home screen.







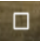
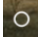






4.3 Manage applications

- In idle screen,tap **Settings**  >**Apps**
- Tap **Running**,you can view all the running apps,tap this app to enter it .you can tap **Stop** to choose stop running
- Tap **Downloaded** ,youcan view all the downloaded apps,tap app to enter it,you can check the detailed information of this app,tap **Uninstall** to unloading it

5.MID state and notice

Iconograph (Icons) for notification

When a prompt message appears, click the column box and slide on the screen with your finger to open the notice list. Click options needing to check to see detailed information. Then you may click themessage box and slide upwards to close the message window. The following are iconography for icons in status bar:

	Gmail		Airplane Mode on
	USB connected		USB debugging connected
	Return button		Downloading
	Display recently-used application		Home button
	Current electric volume.		WIFI connected, internet is available
	Mute		Charging
	Contact List		Bluetooth function

6.Trouble shooting

Problem	Solution
The device will turn itself off after a few seconds	Check that the battery is charged.
No sound is heard	Adjust the volume level Check if audio file is broken
Screen is hard to see in bright light.	Adjust the screen brightness in the system menu. Avoid using the reader in direct sunlight.
Data on the screen is corrupted or a program is not responding properly	Check if the device is connected to the computer correctly. Check if the memory space is full. Check if the USB cable is broken

Battery Model: U2969100P-2500mAh 3.7V

LI-ION Battery Manufacturer

SHENZHEN UTILITY POWER SOURCE CO., LTD

ADD:Huiye Technology Park,Guangung Road.

Guangming Distric,Shenzhen,China

Tablet Manufacturer

China Greatwall Technology Group CO.,LTD

Add:Block A5, Greatwall Computer Industry Park,Baoshi East Rd.

Shiyan,Baoan,Shenzhen,China

*Under optimal conditions (i.e battery is fully charged and used at normal temperatures, LCD brightness at 50%, headset is us
Android is a trademark of Google Inc.The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

