BATTERY INFORMATION

The operation requires 6 "AA" 1.5V (not included) alkaline batteries for car and one 9V battery for remote control (not included).

- Carefully remove items from package.
- · Locate the battery compartment on the back of each item.
- Unscrew latch on bottom of car to release battery pack and replace batteries following the correct polarities (Fig.1).
- · Replace the battery compartment door.
- · Slide open the battery compartment door of the controller.
- Insert the 9V battery following the correct polarities (Fig. 2).
- · Replace the battery compartment door.

SAFETY PRECAUTIONS

- · Do not operate during thunderstorms or rain
- · Avoid water, sand and snow when operating your car.
- Do not submerge car or controller in water.
- · Never operate your car on the street or highway.
- · Adult supervision is recommended when operating this car.
- · Remove all batteries when not in use to avoid accidental operation.
- · Never operate your car in a confined or crowded area, and do not use people or animals as obstacles.
- . Do not run your car into furniture, objects or hard surfaces, as this will cause damage to both the objects and the car.
- · Keep fingers, hair and loose clothing away from the tires, gears and motor while the car is switched to "ON".
- . Do not leave car or transmitter near sources of heat or under direct sunlight for long periods of time.
- · Do not leave car or transmitter outside overnight. Dampness is harmful to interior components.

FORWARD

T

Insert 6 "AA" batteries (not included) in the polarity direction shown


RIGHT JOYSTICK

Fig.1

LEFT JOYSTICK



DMMEND USING ALKALINE ES FOR BEST PERFORMANCE)

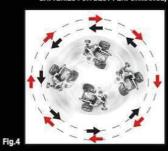



PERFORMING STUNTS

- · Switch both car and the controller buttons to "ON" position.
- . Use the left joy stick to make the left wheel move forward and
- · Use the right joy stick to make the right wheel move forward and reverse (Fig.3).

1. SPECTACULAR SPINS.

To spin the Street Savage 360°, run the car and push up the RIGHT joystick and simultaneously push down the LEFT joystick or push up the RIGHT joystick and simultaneously push down the LEFT joystick depending on the chosen spin direction (Fig.4).

2. AWESOME CORNERING

To take extremely sharp turns or maneuver a 180° or 360° turn, run the car and push the RIGHT and the LEFT joystick then release the RIGHT or the LEFT joystick to steer left or right (Fig.5).

3. WILD WHEELIE

To make a wheelie, run the car and push BOTH joysticks forward. The car will stand up on two wheels. Release slowly the RIGHT or the LEFT joystick to steer (Fig.6).

4. TWO WHEEL SPINS

To make a two wheel spin, run the car at full speed to make a wheelie and then suddenly release the RIGHT or the LEFT joystick to spin on two wheels (Fig.7).



The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from





NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

· Recrient or relocate the receiving antenna.

Fig.7

- · Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio TV technician for help

- On not mix old and new batteries.
 Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 Insert batteries using the correct poarity. Do not short-circuit the supply terminal.
 Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do no: dispose of batteries in a fire they may leak or explode.
 Only use manufacture specified batery(ies), charger(s) and/or adapter, if applicable, specified
- ways use, replace, and recharge (if applicable) batteries under adult supervision. KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

his device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause armful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



© Sharper Image. All Rights Reserved.

SHARPER IMAGE® name and logo are registered trademarks manufactured and marketed by MerchSource, LLC under license. All other logos and trademarks are proprietary to their respective owners. The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notices on this package is not permitted.

©2015 MerchSource, LLC, All rights reserved.

Distributed by MerchSource, LLC, Irvine, CA 92618.

US Pat. No. 6,540,583; China Pat. No. ZL200830049166.8.

For technical support, please visit www.mscustomercare.com or call 1-800-374-2744.