

RADIO CONTROLLED STUNT VEHICLE

Insert 6 "AA" batteries (not included) in the polarity direction shown.

user is encouraged to try to correct the interference by one or more of the following measures:

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Always use, replace, and recharge (if applicable) batteries under adult supervision.

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

Increase the separation between the equipment and receiver.

BATTERY WARNING:

US Pat. No. 6,540,583; China Pat. No. ZL200830049166.8.

For technical support, please visit www.mscustomercare.com or call 1-800-374-2744.

to alter, remove or reproduce any Distributed by MerchSource, LLC, Irvine, CA 92618.

Consult the dealer or an experienced radio /TV technician for help.

Do not mix old and new batteries.

LEFT JOYSTICK RIGHT JOYSTICK

The operation requires 6 "AA" 1.5V (not included) alkaline batteries for car

Unscrew latch on bottom of car to release battery pack and replace

Locate the battery compartment on the back of each item.

Slide open the battery compartment door of the controller.

Insert the 9V battery following the correct polarities (Fig.2).

batteries following the correct polarities (Fig.1).

Carefully remove items from package.

Replace the battery compartment door.

SAFETY PRECAUTIONS

Do not operate during thunderstorms or rain.

Do not submerge car or controller in water.

people or animals as obstacles.

while the car is switched to "ON".

and reverse (Fig.3).

1. SPECTACULAR SPINS.

2. AWESOME CORNERING

4. TWO WHEEL SPINS

Avoid water, sand and snow when operating your car.

Adult supervision is recommended when operating this car.

Remove all batteries when not in use to avoid accidental operation.

Switch both car and the controller buttons to "ON" position.

Use the left joy stick to make the left wheel move forward and

Use the right joy stick to make the right wheel move forward

To spin the Street Savage 360°, run the car and push up the RIGHT joystick and simultaneously push down the LEFT

turn, run the car and push the RIGHT and the LEFT joystick

then release the RIGHT or the LEFT joystick to steer left or

forward. The car will stand up on two wheels. Release

slowly the RIGHT or the LEFT joystick to steer (Fig.6).

joystick to spin on two wheels (Fig.7).

To make a two wheel spin, run the car at full speed to make

a wheelie and then suddenly release the RIGHT or the LEFT

stributed, displayed, published or

Never operate your car in a confined or crowded area, and do not use

Do not run your car into furniture, objects or hard surfaces, as this will

Keep fingers, hair and loose clothing away from the tires, gears and motor

Do not leave car or transmitter near sources of heat or under direct sunlight for long periods of time.

Do not leave car or transmitter outside overnight. Dampness is harmful to interior components.

Never operate your car on the street or highway.

cause damage to both the objects and the car.