

 
A thick red border with rounded corners frames the top and right sides of the page.

# Quick Start Guide

---

## Welcome

Thank you for purchasing the product. This *Quick Start Guide* guides you through a successful setup of your device and familiarises you with the basic skills of using the device.

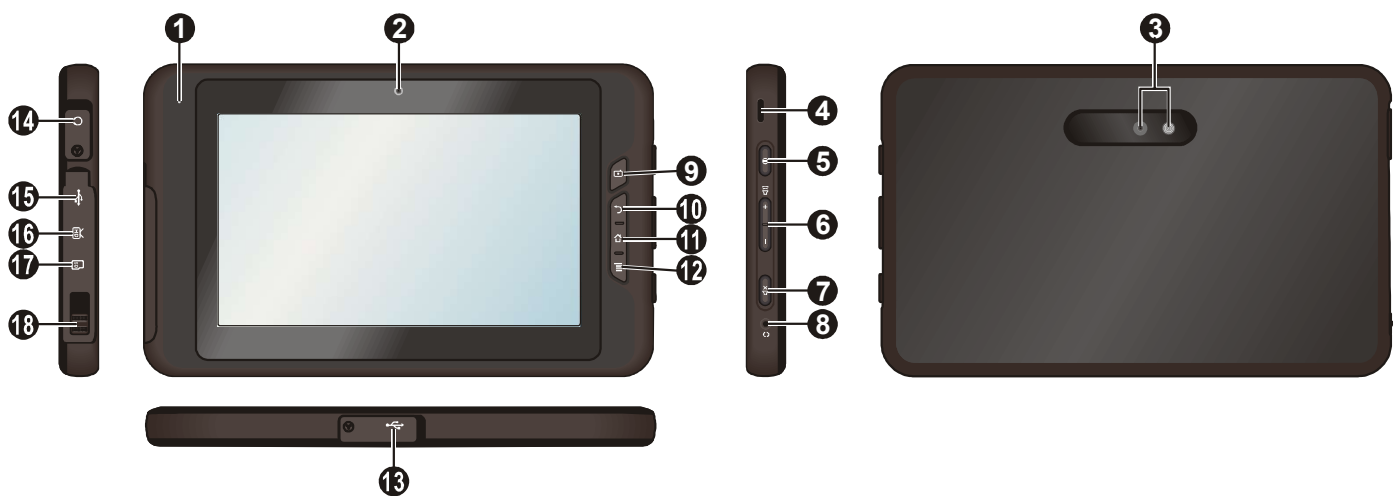


- |                                    |                  |   |
|------------------------------------|------------------|---|
| 1 Microphone                       | 6 VOLUME buttons | 13 Mini-USB connector   |
| 2 Second camera (1.3M Pixel)       | 7 MUTE button    | 14 Headphone connector  |
| 3 Main Camera (5M Pixel) and Flash | 8 RESET button   | 15 USB connector  |
| 4 Speaker                          | 9 CAMERA button  | 16 HD interface port  |
| 5 POWER button                     | 10 BACK button   | 17 Memory card slot and SIM card slot (for selected model only) |
|                                    | 11 HOME button   | 18 Cover latch  |
|                                    | 12 MENU button   |   |


---


## Getting started
 
### Performing the initial start-up

1. For the initial start-up, press the POWER button on the right panel of the device to turn it on.

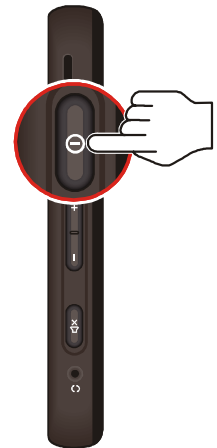

 2. The *Home* screen will display and the device is in Lock mode by default.
3. To unlock the device, drag the Lock icon (  ) to the right. You can now use your device.

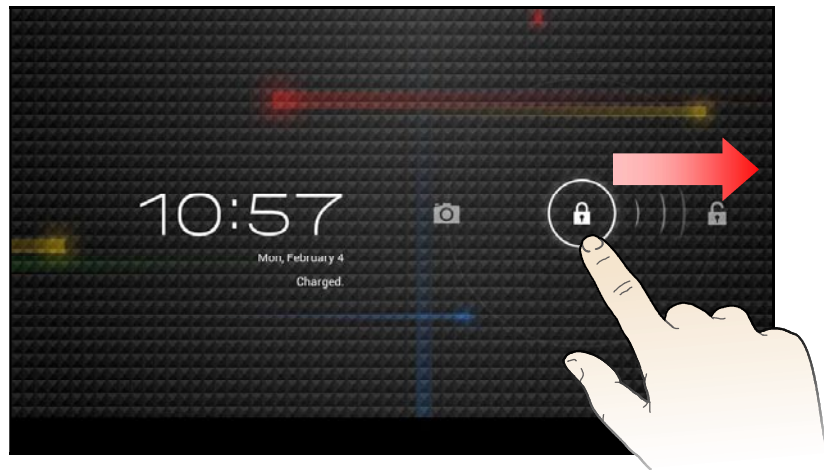

---

## Charging the battery

Your device has an internal battery that may not be fully charged when you purchase it. You should charge the battery for at least 8 hours before you start using it for the very first time.

 
**WARNING:** The dedicated AC charger provided with this product includes a specially designed circuit. To avoid damage to the equipment, you are strongly advised not to use a third-party charger (such as a generic USB charger) while charging the battery.

1. Plug the adaptor to the AC charger (❶).

**Note:** The adaptor plug varies with the region of your purchase.

2. Open the cover on the bottom panel of the device to locate the mini-USB connector. Connect the DC end of the AC charger to the mini-USB connector on your device (❷).

3. Plug the other end of the AC charger into a wall outlet (❸).

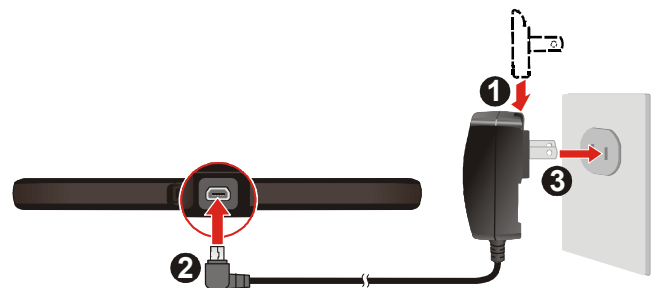

---


### CAUTION! For optimal performance of the lithium battery:

 - Do not charge the battery where the temperature is high (e.g. in direct sunlight).
- Recharge the battery when it is nearly discharged. When recharging, make sure that the battery is fully charged. Doing so can extend the battery life.
- If you will not use the product for a long period of time (over one month) or find the discharge/recharge time has been shortened, be sure to fully discharge the battery first before recharging it. You are also advised to fully discharge and recharge the battery once every 1–2 months.
- Failure to follow the battery usage instructions could cause damage to your device, battery and even bodily injury or property damage and will void the warranty.

---

## Installing the memory card and SIM card

1. Push the cover latch (❶) to open the cover (❷) on the left panel of the device.

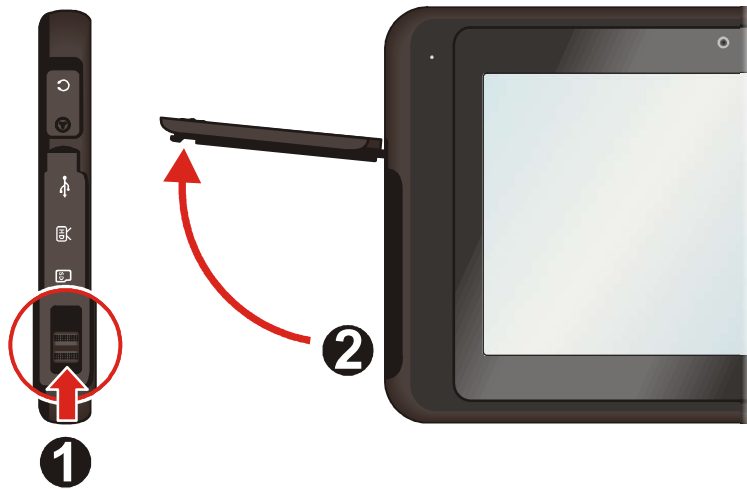


2. To install the memory card:

- Hold the memory card by the edges and gently insert it into the memory card slot with the label facing the back of your device.
- To remove a card, gently push the top edge of the card inwards to release it, and pull it out of the slot.

**Notes:**

 
- The device supports up to 32GB MicroSD memory cards.
- Do not apply pressure to the centre of the memory card.
- Before removing the memory card, you need to unmount it from the system. To unmount the memory card, tap **Storage** → **Unmount SD card** from the Settings menu.

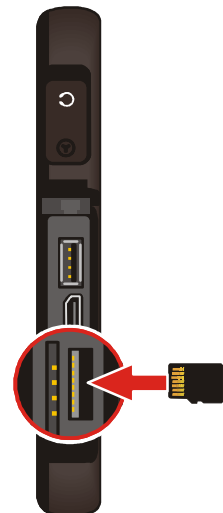

---

3. **To install the SIM card (for selected model only):**

 - Insert the SIM card into the SIM card slot with its golden contacts facing the front of your device.
- To remove a card, gently push the top edge of the card inwards to release it, and pull it out of the slot.

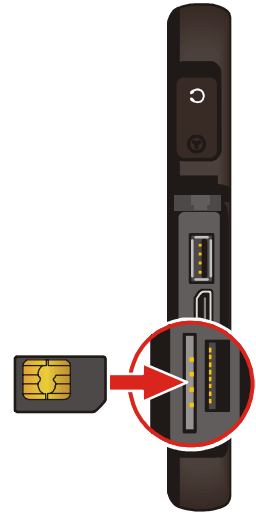

4. When done, close the cover and then push the latch back to ensure the cover is securely closed.

---

**CAUTION!**

The IEC 60529/IP54 is a European system of test specification standards for classifying the degree of protection provided by the enclosures of electrical equipment. An IP54 designation means that the unit withstands dust protected (Ingress of dust is not entirely prevented, but it must not enter in sufficient quantity to interfere with the satisfactory operation of the equipment; complete protection against contact), and water splashing for up to 5 minutes (water volume: 10 litres per minute, Pressure: 80-100kPa). The manufacturer guarantees this grade provided the battery door and all jack covers are properly and securely closed. This device is not IPX7/IPX8 grade; immersion in water or water-pressure such as washing the unit with running water may cause damage to the unit and voids warranty.

 
---

---

## Connecting the external devices

### Connecting the device to your computer

1. Switch on the computer.
2. Open the cover on the bottom panel of the device to locate the mini-USB connector. Connect the mini-USB end of the USB cable to your device and the other end to a USB port in your computer.

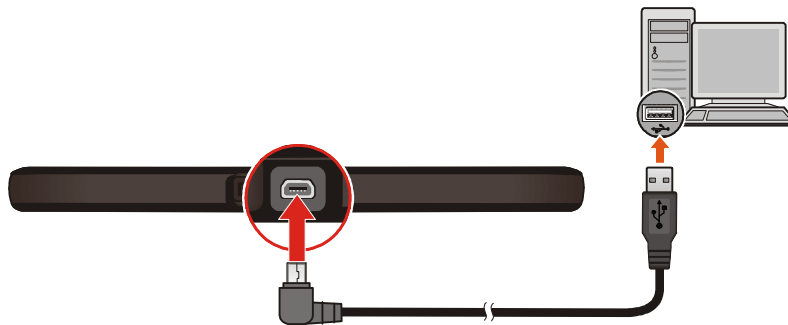


### Connecting a USB device, high-definition (HD) device, and headphone

- The headphone socket on the device supports microphone-in function, allowing you to use the headphone/headset with Mic on your device.
- The USB port on the device allows you to connect an external USB device (e.g. a USB flash drive; the USB hard disk drive is not supported) as the additional storage for the system.

Install your USB drive to the USB port directly. The system will detect the USB drive automatically. To unmount the USB drive, tap **Storage** → **Unmount USB storage** from the Settings menu.

 - Connect the HD device to the HD interface of the device via the mini HD cable (not included).

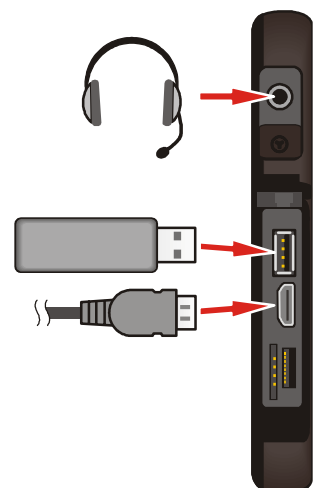

---


## Operating basics

### Using the POWER button

- **Turning on the device**

Press and hold the POWER button until the device turns on.

- **Switching on/off the screen**

Your device will automatically switch off the screen after 1 minute (by default) of inactivity. To turn the screen on, press the POWER button briefly. Then, unlock the device by dragging the Lock icon (  ) to the right.


- **Turning off the device**

If you are not using your device, follow the steps to turn off the device:

1. Press and hold the POWER button (about 1 second) until you see the *Power off* screen.
2. Tap **OK** to turn the device off.

- **Using the device in Airplane mode**

When you are in an airplane or in the area where data transferring is not allowed, enable the **Airplane mode**. You will be able to use many of your device's applications (e.g. playing games or listening music) but all wireless radios on the device are turned off – it cannot send or receive data.

 
To enable or disable Airplane mode, tap **WIRELESS & NETWORKS** → **More** → **Airplane mode** from the Settings menu. The Airplane mode icon (  ) appears in the status bar indicating that Airplane mode is on.



---

## Navigating on the screen

To operate your device, touch the screen with your fingertip. You can perform the following actions:

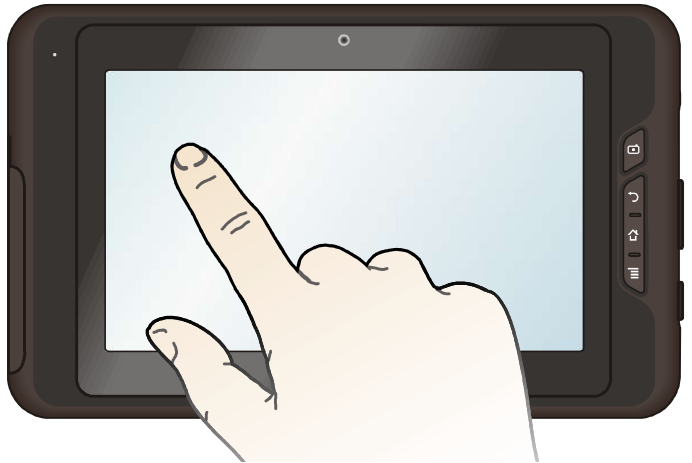


- **Tap:** Touch the screen once with your fingertip to open items or select onscreen buttons or options.
- **Tap and hold:** Tap and hold on the desired item to open the pop-up menu that contains the available options for the item.
- **Drag:** Tap and hold on the item and then move it to the target position without releasing your fingertip.
- **Slide:** Drag to the left or the top to switch to the next item on the list; drag to the right or the bottom to switch to the previous item on the list.
- **Multi-touch gestures:** Move your fingertips apart or together on the screen to zoom in or out while viewing a picture or a web page.
- **Rotating the screen:** For most applications, you can automatically change the screen orientation (from portrait to landscape, and vice versa) by turning the device sideways.

---

## Home screen

 The *Home* screen is your starting place for various tasks, providing quick access to various application and settings that you frequently use on your device.

**Note:** To display the *Home* screen, press the HOME button on your device at any time.

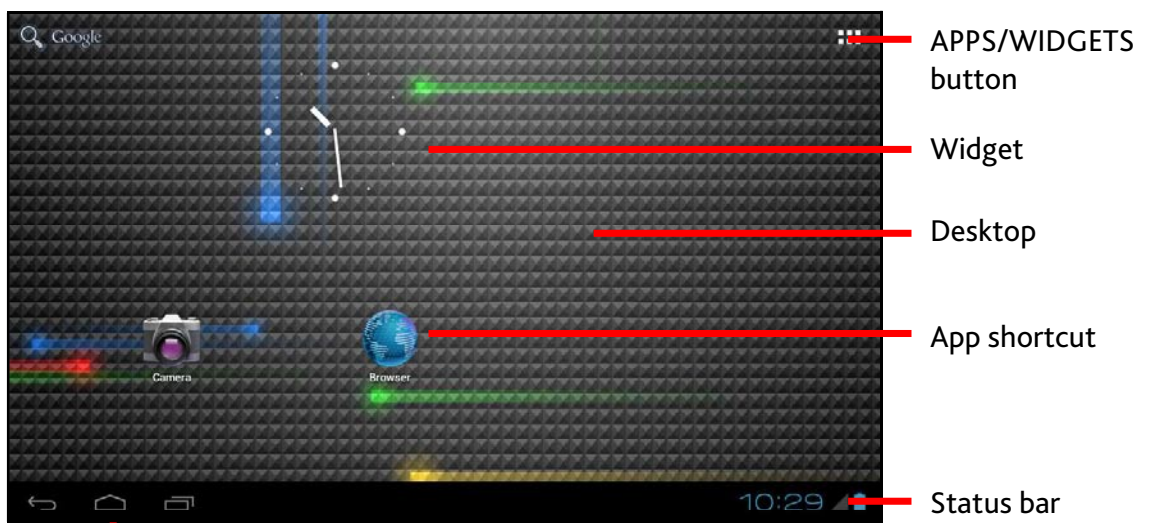

Soft keys



: BACK



: HOME




: RECENT APPS





---

## Using the onscreen keyboard

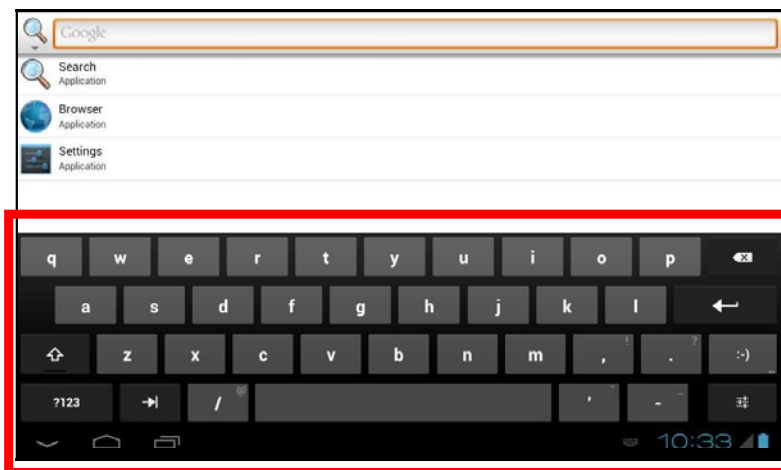 When you use an application or select a field that requires text or numbers, the onscreen keyboard will automatically display. You can use the onscreen keyboard to enter text, numbers, symbols, etc.

Android keyboard emulates a standard QWERTY keyboard that lets you enter the words more easily.



- Tap the keyboard keys to enter letters or symbols.
- Tap  to enter an uppercase letter. Tap twice to turn on Caps Lock.
- Tap  to switch to the numeric and symbol keyboard.
- Tap  to delete a character. Tap and hold to delete the entire text.
- Tap  to configure the keyboard settings. Tap and hold to change the input method.

---


## Personalising your device

 You can easily customise the device for personal settings through the Settings menu, such as personalising the *Home* screen, changing the display and sound settings, configuration the connection settings, and more.

### Accessing the Settings menu

From the *Home* screen, do one of the following to access the Settings menu:

- Press the MENU button and then tap **System settings** from the pop-up menu.
- Tap the APPS/WIDGETS button (  ) → APPS tab → Settings (  ).

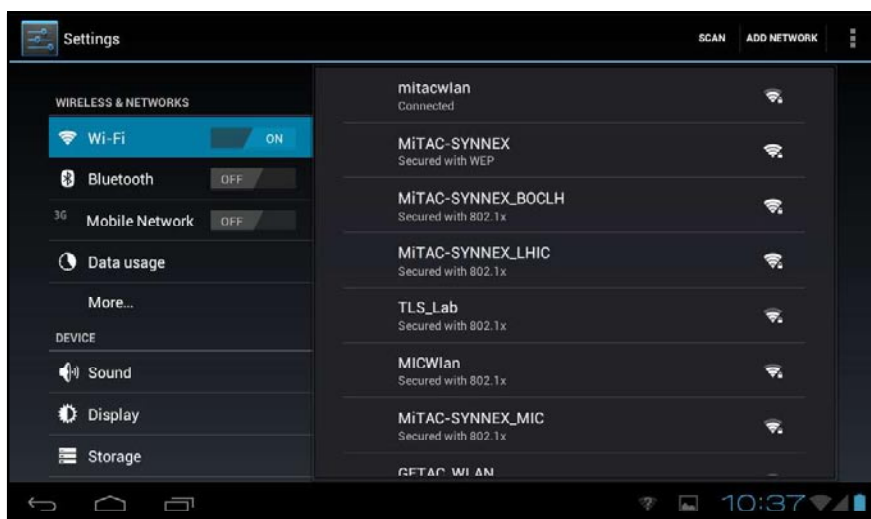

---

## Managing the available memory

You can check and manage the device memory, including the external and internal memory.

| If you want to...          | Then...   |
|----------------------------|---|
| Check the memory status,   | <ol style="list-style-type: none"><li>1. From the Settings menu, tap <b>Storage</b>.</li><li>2. Check the memory status from the following section: SYSTEM STORAGE, SD CARD, USB STORAGE, and INTERNAL STORAGE.</li></ol>                           |
| Remove applications,       | <ol style="list-style-type: none"><li>1. From the Settings menu, tap <b>Apps</b>.</li><li>2. Tap the <b>DOWNLOADED</b> or <b>ON SD CARD</b> tab.</li><li>3. Select the application you want to remove and then tap <b>Uninstall</b>.</li></ol>      |
| Stop running services,     | <ol style="list-style-type: none"><li>1. From the Settings menu, tap <b>Apps</b>.</li><li>2. Tap the <b>RUNNING</b> tab.</li><li>3. Select the process item you want to stop. Read the warning message and then tap <b>Stop</b>.</li></ol>          |
| Erase the device contents, | <ol style="list-style-type: none"><li>1. From the Settings menu, tap <b>Backup &amp; reset</b> → <b>Factory data reset</b>.</li><li>2. Read the warning message and then tap <b>Reset device</b>.</li><li>3. Tap <b>Erase Everything</b>.</li></ol> |

## Resetting your device

Occasionally, you may need to perform a hardware reset when your device stops responding. You can perform a hardware reset by shutting down your device and then turning it back on.

To reset the device, use your finger to press the RESET button that is located on the right panel of the device.



---

## Appendix

### Safety precautions

#### About charging

- Use only the charger supplied with your device. Use of another type of charger will result in malfunction and/or danger.
- This product is intended to be supplied by a LISTED Power Unit marked with “LPS”, “Limited Power Source” and output rated + 5 V dc / 2.0 A”.
- Use a specified battery in the equipment.

#### About the charger

- Do not use the charger in a high moisture environment. Never touch the charger when your hands or feet are wet.
- Allow adequate ventilation around the charger when using it to operate the device or charge the battery. Do not cover the charger with paper or other objects that will reduce cooling. Do not use the charger while it is inside a carrying case.
- Connect the charger to a proper power source. The voltage requirements are found on the product case and/or packaging.
- Do not use the charger if the cord becomes damaged.
- Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

#### About the battery

**CAUTION:** This unit contains a non-replaceable internal Lithium Ion battery. The battery can burst or explode, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush, puncture, or dispose of in fire or water.

- Use a specified battery in the equipment.
- Important instructions (for service personnel only)

- 
- Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
  - Replace only with the same or equivalent type recommended by the manufacturer.
  - The battery must be recycled or disposed of properly.
  - Use the battery only in the specified equipment.

### **Federal Communication Commission Interference Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**Note:** The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.

### **RF Exposure Information (SAR)**

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.



---

## WEEE



This product must not be disposed of as normal household waste, in accordance with the EU directive for waste electrical and electronic equipment (WEEE - 2002/96/EC). Instead, it should be disposed of by returning it to the point of sale, or to a municipal recycling collection point.

---

## **Trademarks**

All brand and product names are trademarks or registered trademarks of their respective companies.

## **Disclaimer**

Specifications and documents are subject to change without notice.

## **Notes**

Depending on the specific model purchased, the colour and look of your device and accessories may not exactly match the graphics shown in this document.

The screenshots and other presentations shown in this document are for reference only. They may differ from the actual screens and presentations generated by the actual product.

Revision: R00  
(09/2013)

