

N722 Tablet User Manual

Revision: R00
(12/2023)

Trademark

All brand and product names are trademarks or registered trademarks of their respective companies.

Disclaimer

Specifications and documents are subject to change without notice.

Note

Not all models are available in all regions.

Not all features are available on all models.

Depending on the specific model purchased, the colour and look of your device and accessories may not exactly match the graphics shown in this document. The screenshots and other presentations shown in this document are for reference only.


MiTAC Computer (Kunshan) Co., Ltd.

No. 269, 2nd Avenue, District A, Comprehensive Free Trade Zone, Kunshan, Jiangsu, China

Table of Contents

Getting to Know Your Device.....	3
Using a Micro-SIM Card.....	4
Using a Memory Card.....	4
Charging the Battery.....	5
Charging via wall outlet.....	5
Charging via car charger.....	5
Extending the Battery Life.....	6
Turning the Device On and Off.....	7
Turning On.....	7
Sleep Mode.....	7
Aeroplane Mode.....	7
Restarting the Device.....	7
Turning Off.....	7
Shutting Down.....	7
Using the Touch Screen.....	8
Rotating the Screen.....	8
Home Screen.....	9
Home Button.....	9
Status Bar.....	9
Desktop.....	9
Application Shortcuts and Widgets.....	9
Favourites Tray.....	10
Grouping Shortcuts in a Folder.....	10
Changing the Wallpaper.....	10
Quick Settings.....	10
Your Apps.....	11
Personalising Your Device.....	12
Settings Menu.....	12
Reference.....	13
Troubleshooting.....	13
Caring for the Device.....	13
Safety Precautions.....	14
Regulatory Information.....	15
RCM.....	15
FCC.....	15
IC.....	15
CE.....	16
RF Exposure Information (SAR).....	17
UK Compliance Information.....	17
WEEE.....	17
Bluetooth.....	17

 Getting to Know Your Device

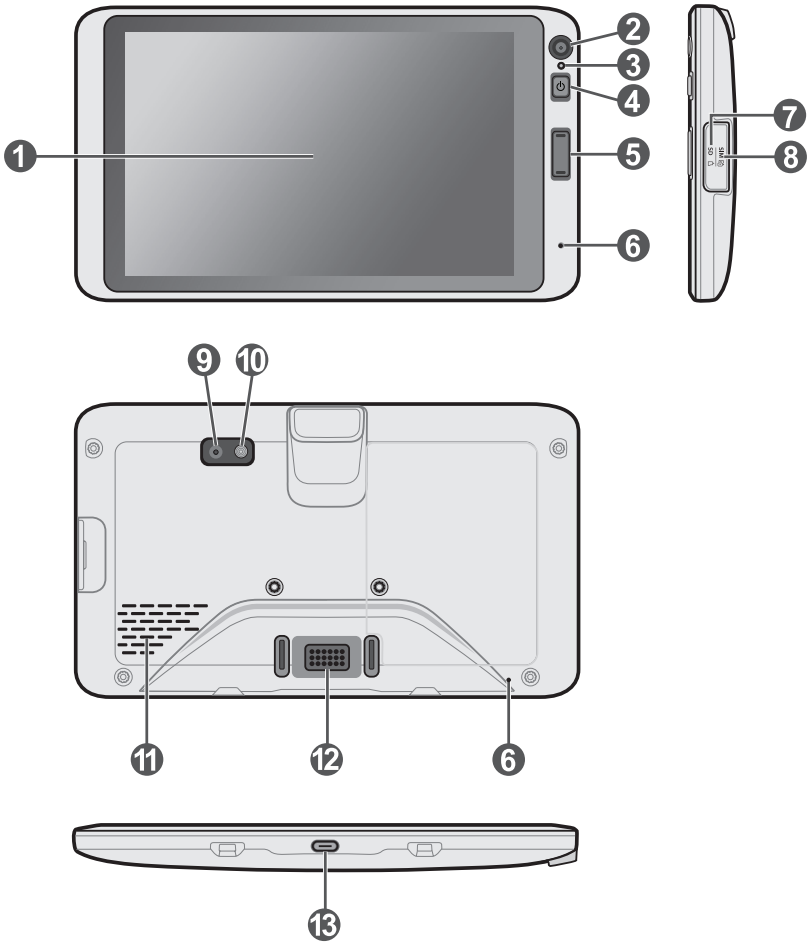


- | | |
|---------------------|------------------------|
| ❶ Touch screen | ❸ Micro-SIM card slot |
| ❷ Front camera lens | ❹ Camera lens |
| ❸ Light sensor | ❺ Flash LED |
| ❹ Power button | ❻ Speaker |
| ❺ Volume buttons | ❼ Dock connector |
| ❻ Microphone | ❽ USB Type C connector |
| ❼ Memory card slot | |

Using a Micro-SIM Card

The device uses a Micro-SIM card.

Open the cover on the right side of the device to locate the Micro-SIM card slot. With its label side facing the rear side of the device, hold the Micro-SIM card by the edges and gently insert it into the slot. Note that inserting the card in the reverse direction may cause damage.

 
To remove a card, gently push the top edge of the card inwards to release it, and pull it out of the slot.

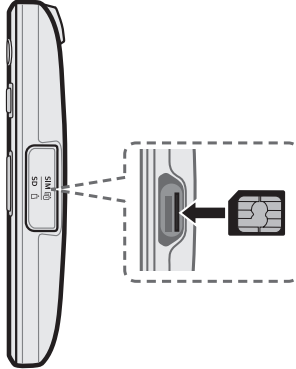

Using a Memory Card

Open the cover on the right side of the device to locate the memory card slot. With its label side facing the rear side of the device, hold the MicroSD card by the edges and gently insert it into the slot.

 To remove a MicroSD card, gently push the top edge of the card inwards to release it, and pull it out of the slot.

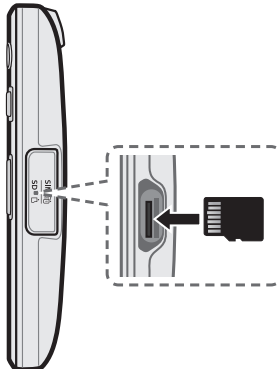

Note:

- Do not apply pressure to the center of the memory card.
- Inserting the card in the reverse direction may cause damage.
- The manufacturer does not guarantee the product's compatibilities with the storage cards from all manufacturers.
- If you encounter access problems with your memory card, please visit the website https://www.sdcard.org/downloads/formatter_4/ and use the "SD Memory Card Formatter 5.0 for SD/SDHC/SDXC" tool to format your memory card.

 
Charging the Battery

Note:

- The AC charger may be sold separately.
- Use the specified charger for your device. Use of another type of charger will result in malfunction and/or danger.


When charging the battery for the very first time, it is recommended to charge it for at least 8 hours (using the AC charger).

Charging via wall outlet

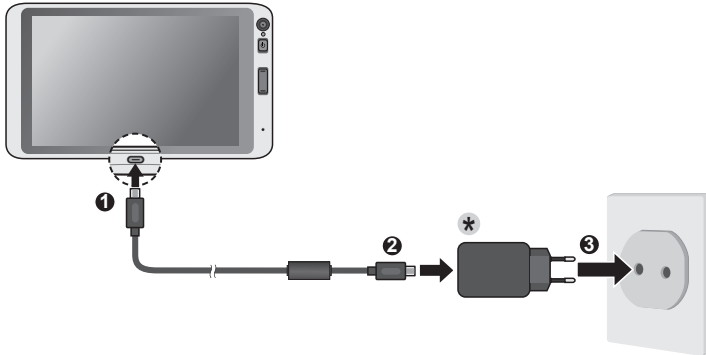

- * The type of power plug may vary depending on your region.
- Input: 100~240V, 800mA, 50~60Hz
- Output: 5.0V/3.0A 15.0W, 9.0V/2.22A 20.0W

 Charging via car charger

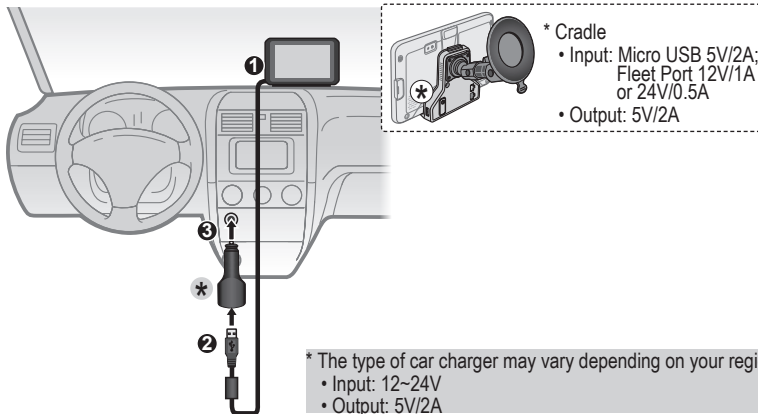

- * Cradle
- Input: Micro USB 5V/2A; Fleet Port 12V/1A or 24V/0.5A
- Output: 5V/2A

- * The type of car charger may vary depending on your region.
- Input: 12~24V
- Output: 5V/2A

CAUTION: For optimal performance of the lithium battery:

- Do not charge the battery where the temperature is high (for example, in direct sunlight).
- There is no need to fully discharge the battery.
- When storing the device for a long period of time, be sure to charge the device at least once every two weeks. Over discharge of the device can affect the performance.
- Failure to follow the battery usage instructions could cause damage to your device, battery and even bodily injury or property damage, and will void any warranty.

Extending the Battery Life

There are various ways to improve the device's battery life.

- Always fully charge the battery.
- Turn on Battery saver.
- Turn off unnecessary sounds, such as touch sounds.
- Close an app when you are not using it.
- Use a shorter timeout setting of the screen.
- Lower the brightness level of the screen.
- Turn off Bluetooth when you are not using it.
- Prevent the device from constantly scanning for available wireless networks.
- Enable Aeroplane mode to turn off all wireless transmission functions.

To change settings, open the *All Apps* screen and tap **Settings**.

Turning the Device On and Off

Use the USB cable to connect to a power source to power the device.

The device's battery is designed as a backup power source for short-term use only in the event when the vehicle's power system is not available. It is not to be used as a sole source of power for prolonged periods. Connect the device to an external power source whenever you can.

Turning On

1. The device turns on automatically when it is powered. Wait for the boot screen to display.
2. The *Home* screen will display and the device is in Lock mode by default. Drag the Lock icon upwards to unlock. The device is ready for use.

Sleep Mode

Your device will automatically switch off the screen after 1 minute (by default) of inactivity. You can manually switch off the screen by pressing the Power button briefly.

To resume the screen, press the Power button briefly and then unlock the device by dragging the Lock icon upwards.

Aeroplane Mode

When you are in an aeroplane or in the area where data transferring is not allowed, enable Aeroplane mode. You will be able to use many of your device's applications, but all wireless radios, including wireless networks and Bluetooth, on the device are turned off – it cannot send or receive data.

To enable Aeroplane mode: open the *All Apps* screen and tap **Settings** → **Network & internet** → **Advanced**, then tap the **Aeroplane mode** switch to turn it on.

To disable Aeroplane mode: open the *All Apps* screen and tap **Settings** → **Network & internet** → **Advanced**, then tap the **Aeroplane mode** switch to turn it off.

Note:

- You can enable WIFI and Bluetooth in Aeroplane mode.
- You can turn the Aeroplane mode on or off from the Quick Settings.

Restarting the Device

You may need to reset the device when the device is running slower or improperly. Press and hold the Power button to display the options menu and tap **Restart** to restart the device.

Turning Off

To turn off the device, press and hold the Power button to display the options menu and tap **Power off**.

Shutting Down

If the device stops responding, you may need to shut down the device by pressing and holding the Power button for 8 seconds.

Using the Touch Screen

 
To operate your device, touch the screen with your finger. You can perform the following actions:


- **Tap:** Touch the screen once with your finger to open items or select on-screen buttons or options.
- **Tap and hold:** Tap and hold on the desired item to open the pop-up menu that contains the available options for the item.



- **Drag:** Tap and hold on the item and then move it to the target position without releasing your finger.


- **Slide/Swipe:** Drag your finger vertically or horizontally across the screen.
 - Drag to the left/right to switch to the next/previous item on the list.
 - Drag to the top/bottom to scroll up/down the screen.

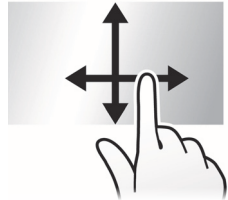

 Not all slide gestures are applicable to all applications.

- **Two-finger gestures:** Move your fingers apart or together on the screen to zoom in or out while viewing a picture or a web page.



 Not all two-finger gestures are applicable to all applications.

Rotating the Screen

For most applications, you can automatically change the screen orientation, from portrait to landscape and vice versa, by turning the device sideways.

To enable (or disable) the auto-rotate screen function: open the App drawer by long-swiping from the home button upwards and tap **Settings** → **Display** → **Advanced**, then tap the **Auto-rotate screen** switch to turn it on (or off).

 Rotating the screen is not applicable to all applications.

 You can also enable/disable the auto-rotate function in the Quick Settings menu.

Home Screen

The *Home* screen is your starting place for tasks, providing quick access to frequently used applications and settings.

- To open the *All Apps* screen, swipe up from the bottom of the screen with one finger.
- To display the *Home* screen, tap the Home button at any time.

Home Button

The Home button returns to the desktop at any time.

Status Bar

The status bar is at the very top of the screen, displaying system status icons and notification icons.

Note: Depending on your use of the device, some icons are not always shown in the status bar.

■ System status icons

The system status icons are displayed on the right side of the status bar. They provide information about your device's status, including the connection status, signal strength, battery power, and more.

■ Notification icons

The notification icons are displayed on the left side of the status bar. They report the arrival of new emails, calendar events, and other notifications.

When you see notification icons displayed in the status bar, you can open the Notifications panel to view the detailed descriptions. To open the Notifications panel, swipe down from the top of the screen with one finger.

From the Notifications panel, do one of the following:

- Tap a notification to open the related application.
- Tap **CLEAR ALL** to clear all notifications.

Desktop

The desktop includes the *Home* screen and the extended screens, providing useful information about notifications and device status. It also allows you to add an access to your favourite application shortcuts/widgets on the *Home* screen and the extended screens.

- Swipe left or right to switch between the screens.
- To add an extended screen: make sure that at least one application shortcut or widget is already set on the *Home* screen or an extended screen, then drag the icon toward the edge of the screen to add a new extended screen.

Note: An extended screen will be removed automatically when all shortcuts and widgets on it are moved or removed.

Application Shortcuts and Widgets

The application shortcuts and the widgets can be placed on either the *Home* screen or any of the extended screens.

To add a shortcut:

1. Go to the screen where you want to place the shortcut.
2. Swipe up from the bottom of the screen to open the *All Apps* screen.
3. Tap and hold the desired app until the *Home* screen appears, drag it into place, and lift your finger.

To add a widget:

1. Go to the screen where you want to place the widget.

2. Tap and hold anywhere on the desktop, and select **Widgets**.
3. Scroll up and down to explore the available widgets.
4. Tap and hold the desired widget until the *Home* screen appears, drag it into place, and lift your finger.

To move a shortcut or widget to another position:

1. Tap and hold the icon, and drag the icon to the new position.
 - To move between the screens on the desktop, swipe toward the edge of the screen.
 - To bump another icon out of the way, slowly drag the desired icon into it.
2. Lift your finger.

To remove a shortcut or widget from the desktop (without removing it permanently from the device), tap and hold the icon, drag your finger toward the top-left corner of the screen, and drop it over **X** (Remove).

Favourites Tray

You can use the Favourites tray at the right edge of the desktop to quickly access the apps.

You can edit the apps in the Favourites tray: simply tap and hold an icon and move it in or out of the Favourites tray or the desktop.

Grouping Shortcuts in a Folder

You can group the shortcuts to apps or settings on the desktop and the Favourites tray into a folder.

1. Tap and hold a shortcut, and then drag it over to another shortcut. A folder will be created automatically.
2. Tap to open the folder.
 - To add another shortcut to the folder, tap and hold the shortcut, and drag it over to the folder.
 - To remove a shortcut from the folder, tap and hold the shortcut, and drag it out of the folder.
3. To rename the folder, tap the title bar of the folder, and enter the desired folder name.
4. To delete the folder, tap and hold the folder, drag your finger toward the top of the screen, and drop it over **X** (Remove).

Changing the Wallpaper

1. Tap and hold anywhere on the desktop, and select **Wallpapers**.
2. Select a wallpaper image and tap **SET WALLPAPER**.

Quick Settings

Some frequently used settings can be found in Quick Settings. To open Quick Settings, simply swipe down from the top of the screen with two fingers or twice with one finger. Swipe left or right to access more settings.

Tap an icon to turn the function on or off; tap and hold an icon to change its setting.

- **WIFI**
- **Bluetooth**
- **Do not disturb**
Set how and when to receive notifications.
- **Auto-rotate**
Set the device's orientation to automatically rotate or lock in the portrait mode.

- Battery Saver
- Mobile data
See the cellular data usage, or turn it on or off.
- Aeroplane mode
- Cast

Your Apps

To see all your apps, swipe up from the bottom of the screen to open the *All Apps* screen.

You can place an app icon on any of the screens on the desktop. Tap and hold the app icon, then drag into the desired screen, and lift your finger.

To view information about an app, tap the app's icon to enter the *App info* screen.

When you use some apps for the first time, you will be prompted to grant permissions for the apps to access certain data or features. To grant a permission, tap **Allow**; to reject a permission, tap **Deny**.

You can customise the permission settings of your apps in Settings:


1. Open the *All Apps* screen and tap **Settings** → **Apps**.
2. Tap the app's icon to enter the *App info* screen.
3. Tap **Permissions** and then customise permission settings.

Personalising Your Device

You can easily customise the device for personal settings through the Settings menu, such as personalising the Home screen, changing the display and sound settings, configuration the connection settings, and more.

Settings Menu

To access the Settings menu, do one of the following:

- Open the App drawer and tap **Settings**.
- Slide down from the top of the screen with two fingers or twice with one finger to open Quick Settings, and tap .

 Not all setting items and options are available for all models.

 Tap **Advanced** to access more setting options.

Reference

Troubleshooting

For initial support, contact your IT department or your local authorised dealer.

■ Power does not switch on when using battery power.

The remaining battery power may be too low to run your device. Charge the battery.

■ Screen responds slowly.

Make sure that your device is not running out of battery power. If the problem still persists, restart your device.

■ Screen freezes.

Restart your device.

■ Screen is hard to read.

Make sure that the backlight of the display is set to a high-enough brightness.

Caring for the Device

Taking good care of your device will ensure trouble-free operation and reduce the risk of damage to your device.

- Keep your device away from excessive moisture and extreme temperatures.
- Avoid exposing your device to direct sunlight or strong ultraviolet light for extended periods of time.
- Do not place anything on top of your device or drop objects on your device.
- Do not drop your device or subject it to severe shock.
- Do not subject your device to sudden and severe temperature changes. This could cause moisture condensation inside the unit, which could damage your device. In the event of moisture condensation, allow the device to dry out completely before use.
- The screen surface can easily be scratched. Avoid touching it with sharp objects. Non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels may be used to help protect the screen from minor scratches.
- Never clean your device with it powered on. Use a soft, lint-free cloth to wipe the screen and the exterior of your device.
- Do not use paper towels to clean the screen.
- Never attempt to disassemble, repair or make any modifications to your device. Disassembly, modification or any attempt at repair could cause damage to your device and even bodily injury or property damage and will void any warranty.
- Keep your device and its accessories out of the reach of small children or animals.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as your device, its parts or accessories.
- To discourage theft, do not leave the device and accessories in plain view in an unattended vehicle.
- Do not leave the device and its accessories in a vehicle in direct sunlight. Overheating may damage the device.
- Altitude < 2000m.

Safety Precautions

When using the device, note that the ambient temperature should be below 45°C (113°F).



To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

■ About Charging

- Use only the charger supplied with your device. Use of another type of charger will result in malfunction and/or danger.
- This product is intended to be supplied by a LISTED Power Unit marked with "LPS", "Limited Power Source" and output rated + 12/24 V dc / 2.0 A.
- Use a specified battery in the equipment.

■ About the Charger

- Do not use the charger in a high moisture environment. Never touch the charger when your hands or feet are wet.
- Allow adequate ventilation around the charger when using it to operate the device or charge the battery. Do not cover the charger with paper or other objects that will reduce cooling. Do not use the charger while it is inside a carrying case.
- Connect the charger to a proper power source. The voltage requirements are found on the product case and/or packaging.
- Do not use the charger if the cord becomes damaged.
- Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

■ About the Battery

- Use a specified battery in the equipment.
- CAUTION: This unit contains a Lithium Ion battery. The battery can burst or explode, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush, puncture, or dispose of in fire or water.
- Important instructions (for service personnel only)
 - Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
 - Replace only with the same or equivalent type recommended by the manufacturer.
 - The battery must be recycled or disposed of properly.
 - Use the battery only in the specified equipment.

Regulatory Information

For regulatory identification purposes, the product is assigned a model number of N722.

Marking labels located on the exterior of your device indicate the regulations that your model complies with. Please check the marking labels on your device and refer to the corresponding statements in this chapter. Some notices apply to specific models only.

RCM



FCC

FC

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note: The use of a non-shielded interface cable with this equipment is prohibited.

USA Contact Information

Magellan
279 E Arrow Highway San Dimas, CA 91773 USA
+1 909-394-5000
<http://www.magellangps.com>

IC

Canadian Department Of Communications

CAN ICES-3(B)/NMB-3(B)

Radio Interference Regulations Class B Compliance Notice

This Class B digital apparatus meets all requirements of the Canada Interference-Causing equipment regulations.

Cet appareil numérique de Classe B respecte toutes les exigences du Règlement Canadien sur le matériel brouilleur.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

The device could automatically discontinue transmission in case of absence of information to transmit, or operational failure. Note that this is not intended to prohibit transmission of control or signaling information or the use of repetitive codes where required by the technology.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

High-power radars are allocated as primary users (i.e. priority users) of the bands 5250–5350 MHz and 5650–5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

L'appareil peut interrompre automatiquement la transmission en cas d'absence d'informations à transmettre ou de panne opérationnelle. Notez que ceci n'est pas destiné à interdire la transmission d'informations de contrôle ou de signalisation ou l'utilisation de codes répétitifs lorsque cela est requis par la technologie.

Le dispositif utilisé dans la bande 5150-5250 MHz est réservé à une utilisation en intérieur afin de réduire le risque de brouillage préjudiciable aux systèmes mobiles par satellite dans le même canal.

CE



Maximum radio frequency (RF) power for Europe:

- WLAN 2.4 GHz: XX dBm
- WLAN 5 GHz: XX dBm
- Bluetooth: XX dBm
- WWAN: XX dBm

Products with the CE marking comply with Radio Equipment Directive (Directive 2014/53/EU) - issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Standards:

- EN 62311
- EN 62209-2
- EN 50566
- EN 301 489-1/-3/-17/-19/-52
- EN 55032
- EN 55035
- EN 61000-3-2
- EN 61000-3-3
- EN 300 328: BT/WLAN 2.4 GHz
- EN 301 893: WLAN 5 GHz
- EN 300 330: RFID/NFC

- EN 303 413: GPS
- EN 301 511: GSM 900/1800
- EN 301 908-1/-13
- IEC 62368-1:2014 (Second Edition)

Restrictions or Requirements in the UK: This device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

	AT	BE	BG	HR	CY	CZ	DK
	EE	FI	FR	DE	EL	HU	IE
	IT	LV	LT	LU	MT	NL	PL
	PT	RO	SK	SI	ES	SE	UK(NI)
	IS	LI	NO	CH	TR		

 The DoC letter will be added to the end of the manual.

RF Exposure Information (SAR)

This device has been tested and meets applicable limits for Radio Frequency (RF) exposure. Specific Absorption Rate (SAR) refers to the rate at which the body absorbs RF energy. SAR limits are 1.6 Watts per kilogram (over a volume containing a mass of 1 gram of tissue) in countries that follow the United States FCC limit and 2.0 W/kg (averaged over 10 grams of tissue) in countries that follow the Council of the European Union limit. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. To reduce exposure to RF energy, use a hands-free accessory or other similar option to keep this device away from your head and body. Carry this device at least 10 mm away from your body to ensure exposure levels remain at or below the as-tested levels. Choose the belt clips, holsters, or other similar body-worn accessories which do not contain metallic components to support operation in this manner.

Cases with metal parts may change the RF performance of the device, including its compliance with RF exposure guidelines, in a manner that has not been tested or certified, and use such accessories should be avoided.

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. The portable device is designed to meet the requirements for exposure to radio waves established by the ISED. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body.

UK Compliance Information

**UK
CA**

WEEE



This symbol means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Proper recycling of your product will protect human health and the environment.

Bluetooth

 **Bluetooth**® DID: XXXXXXX